


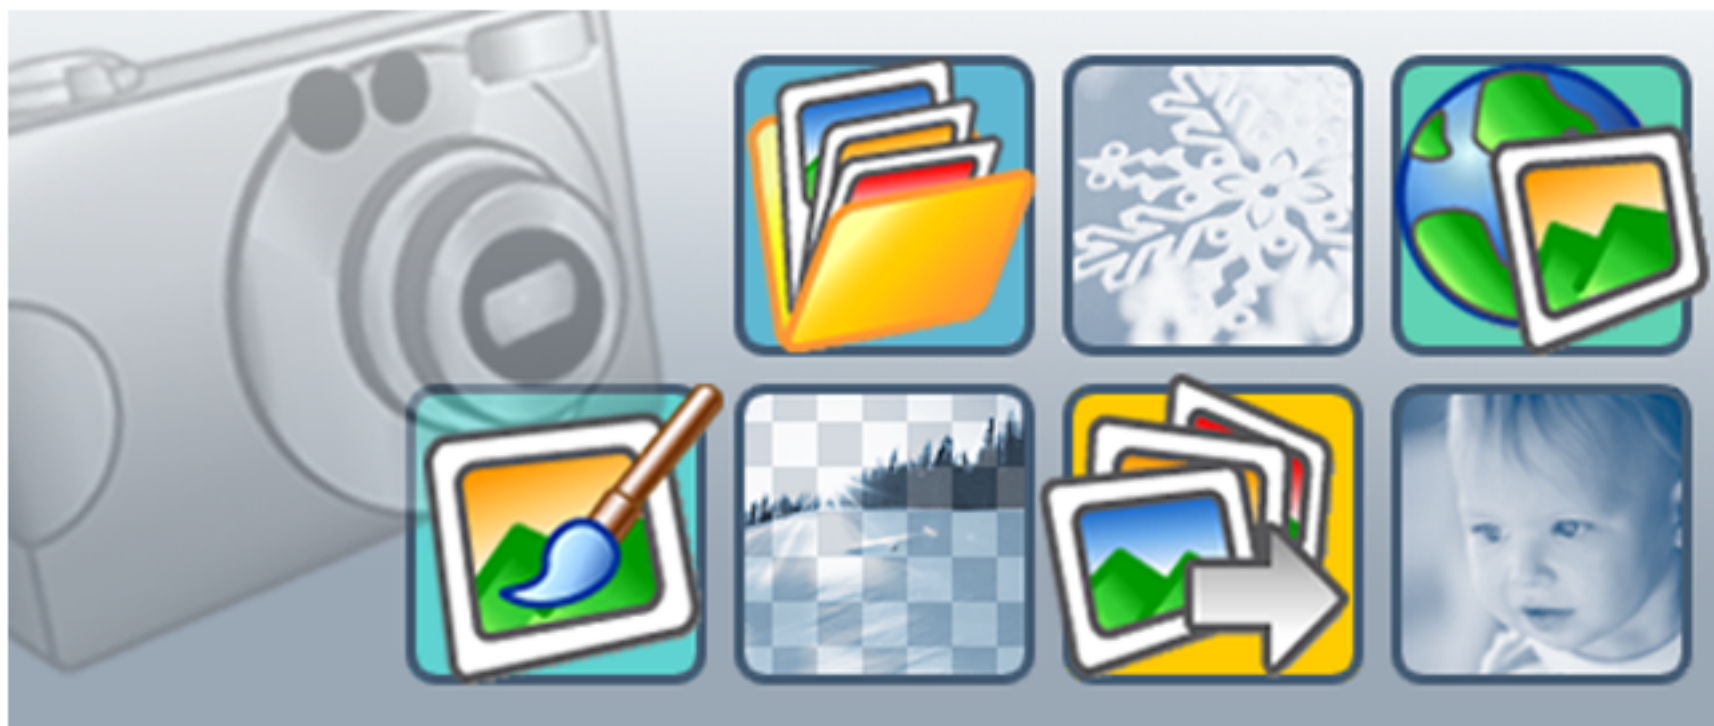

# Canon Utilities

# ZoomBrowser EX 5.6

## Software User Guide




Click these tabs to jump to the Table of Contents, Index or start of each chapter.

Click this button to advance to the next page.  
Click this button to return to the previous page.  
(Since this is the starting page, the [Back] button cannot be used.)

# Table of Contents (1/2)

## About the Printing Features

 
Clicking the  icon at the start of each topic prints out that topic.




Clicking this button prints the entire guide.



Clicking this button prints the entire chapter.



## Chapter 1 What is ZoomBrowser EX?



 
-  What Can ZoomBrowser EX Do? ..... 5
-  Guide to the ZoomBrowser EX Windows ..... 6
-  Task Buttons and Main Window Features ..... 8













## Chapter 2 Downloading and Printing Images



 
-  Downloading Images to a Computer ..... 12
-  Printing a Single Image on a Single Page ..... 20








## Chapter 3 What You Can Do with a Camera Connected



-  Camera Control Window ..... 22
-  Downloading Images Automatically—Camera Operations ..... 24
-  Downloading Images Automatically—Computer Operations ..... 26
-  Checking Images in the Camera before Downloading ..... 29
-  Deleting Images from the Camera ..... 31
-  Downloading Sound Files from the Camera ..... 32
-  Other Features of the Camera Browser Window ..... 35
-  Printing Images in the Camera ..... 36
-  Setting the My Camera Settings ..... 40
-  Checking and Changing Camera Settings ..... 48
-  Copying Images to the Camera ..... 49
-  Operating the Camera Shutter from the Computer ..... 51


## Chapter 4 Viewing Images















-  Selecting Folders ..... 55
-  Changing the Display Mode ..... 57
-  Changing the Displayed Folder ..... 60
-  Changing the Main Window Display Mode ..... 63
-  Checking Images in a Pop-Up Window ..... 67
-  Opening Images ..... 68
-  Using the Viewer Window ..... 69


# Table of Contents (2/2)







## Chapter 5 Organizing Images












 Print this chapter

 Selecting Images .....	74
 Setting Star Ratings .....	75
 Assigning Keywords .....	77
 Classifying Images .....	79
 Renaming Images .....	80
 Searching Images .....	82
 Moving or Copying Images .....	84
 Deleting Images .....	88
 Rotating Images .....	90
 Viewing Image Properties .....	91
 Creating Folders .....	94
 Refreshing Folders .....	95


## Chapter 6 Using Supplementary Features





 Print this chapter

 Editing Images .....	96
 Editing Images with Other Programs .....	106
 Sending Images by E-mail .....	107
 Exporting Images .....	109
 Running a Slide Show .....	113
 Adding Sounds to Images .....	115


 Printing Images .....	116
 Index Print .....	117
 Using My Camera Maker (Windows XP and Windows 2000 only) .....	119
 Playing Sound Files .....	122
 Playing Movies .....	123
 Editing Movies .....	124
 Exporting Movies .....	128
 Extracting Frames from a Movie (Windows XP only) .....	130
 Converting RAW Images .....	132
 Stitching Panoramic Images - PhotoStitch .....	138
 Saving Images to CD-R/RW Disks (Windows XP Only) .....	139

## Appendices

 Print this chapter

 Supported Image Types .....	140
 Customizing Preferences .....	141
 Customizing Menus .....	145
 Troubleshooting .....	146

## Index

 Print this chapter

 Index .....	151
---	-----

# Notations and Conventions

## Symbol Usage

This guide uses the following symbols.

### EXPLANATION



Information essential to operations, such as explanations of functions or terminology, follows this symbol.

### PROCEDURES



Information about the steps to perform follows this symbol.

### HINT



Operating tips and convenient ways of using the program follow this symbol. Read these topics as you see fit.

## IMPORTANT

Points that you need to follow to perform the procedures and other important topics follow this symbol. Always read these topics.

## REFERENCE

Supplementary explanations and procedures follow this symbol. Read these topics as you see fit.

## Terminology Usage

The following terms are used in this guide as indicated below.

- CF card, SD memory card, PC card, MultiMediaCard → memory card

## NOTE

- This manual uses Windows XP screen shots and procedures in the explanations. The screen shots and procedures may appear slightly different if you are using another version of Windows.
- The displayed screens and procedures may also differ slightly from the examples depending upon the camera or printer model in use.



# What Can ZoomBrowser EX Do?

This section provides a brief explanation of the ZoomBrowser EX features.

## What You Can Do with a Camera Connected

- Download images from the camera to the computer.
- Download sound files that you record using the Sound Recorder feature (only on products supporting the Sound Recorder feature).
- Save computer images to the camera.
- Select images directly in the camera or memory card and print them.
- Operate the camera shutter remotely from the computer (only on models supporting remote shooting).
- Check and change camera settings.
- Set the My Camera Settings (start-up image, start-up sound, operation sound, self-timer sound and shutter sound). (Only on models supporting My Camera Settings)

## View Images

- Display the downloaded images and their shooting information.
- Switch between display modes (zoom, scroll and preview).

## Organize Images

- Assign a Star Rating or keywords to images.
- Organize images according to their shooting dates.
- Perform image searches.

## Use Additional Features

- Print images that have been downloaded to a computer.
- Edit images and movies.
- Stitch panoramas together.
- Convert RAW images to standard images (only available on some models).
- Extract stills from movies (Windows XP only).
- Format images as screensaver and wallpaper files.
- Export image shooting information as a text file.
- Copy images to CD-R/RW disks (Windows XP only).
- Create images and sound files as My Camera Settings files using the My Camera function (Windows XP and Windows 2000 only).

## REFERENCE

- The Canon CD-ROM supplied with the camera contains My Camera Settings files. These files are automatically copied to your computer when ZoomBrowser EX is installed.

# Guide to the ZoomBrowser EX Windows (1/2)


This section briefly introduces the purposes and features of the two main windows for operating ZoomBrowser EX.

EXPLANATION



## Camera Control Window

The Camera Control Window is the window that automatically opens when you connect a camera to the computer or insert a memory card into a memory card reader. You can download the camera or memory card images in a few easy steps. You can also select and print camera or memory card images directly and change camera settings from the computer.

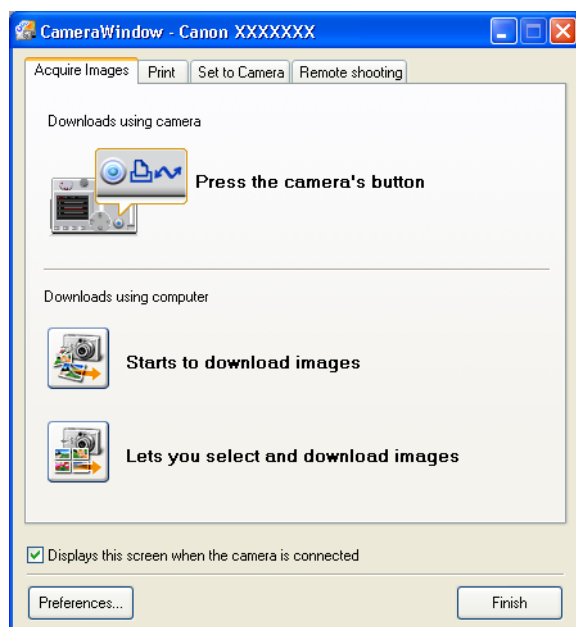


The window that appears for a wireless connection may differ slightly.

EXPLANATION



## Main Window

This window opens when you start ZoomBrowser EX. The Main Window is for displaying and organizing downloaded images.

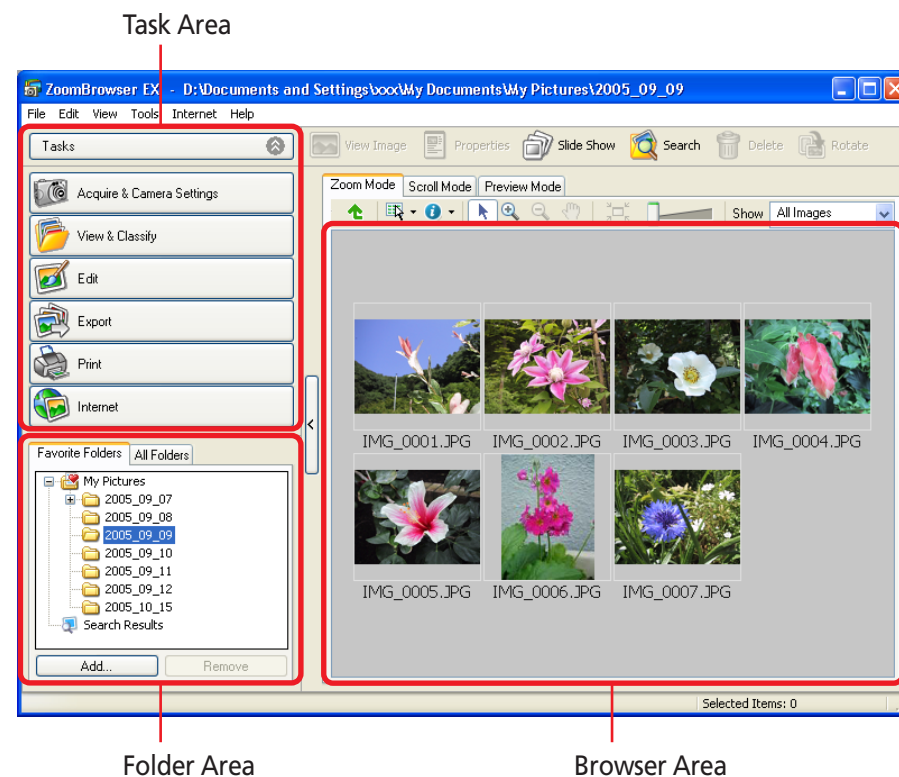

# Guide to the ZoomBrowser EX Windows (2/2)


## HINT



### Using the Right-Click in Operations

With ZoomBrowser EX you can access many useful functions by using the right mouse button (right-click).

For example, you can position the mouse pointer over an image in the Browser Area and right-click to display a menu like the following.

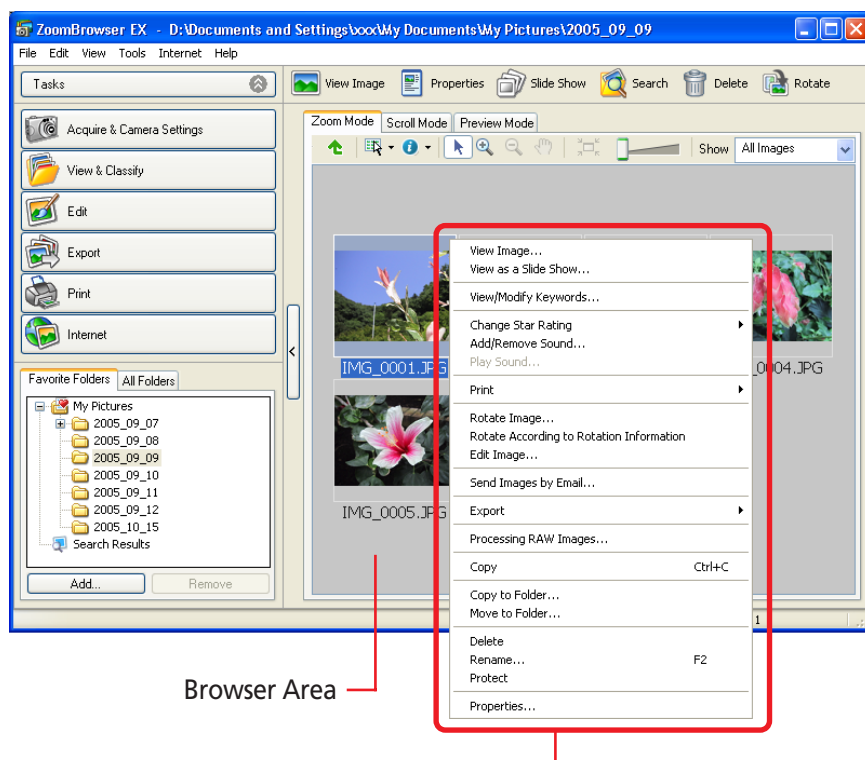

Browser Area

Right-click anywhere on the image to display a shortcut menu.

A shortcut menu is a convenient collection of the most common window buttons and menu commands that apply to a given situation.

The right-click allows you to use ZoomBrowser EX more efficiently. After you become familiar with ZoomBrowser EX, try right-clicking in many situations.

# Task Buttons and Main Window Features (1/4)

## EXPLANATION



## Task Area and Task Buttons

There are six task buttons in the Main Window's Task Area. Use these buttons to start performing tasks.

### ■ Acquire & Camera Settings

The Camera Control Window will open. Connect the camera to the computer with the interface cable and use the window to download the camera images to the computer and print them.

### ■ View & Classify

Use this button to display slide shows of Browser Area images, classify images into folders and perform image searches.

### ■ Edit

Use this button to edit images and movies, stitch panoramas together and convert RAW images.

### ■ Export

Use this button for such tasks as exporting images and image information, extracting multiple images from movies and backing up images to a CD.

 





### ■ Print

Use this button to print images that have been downloaded to a computer.

### ■ Internet

Use this button to attach and send images as email messages and to upload images.

The following menus appear when you click each respective task button.

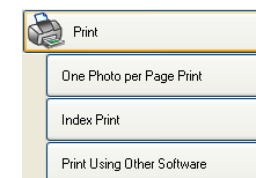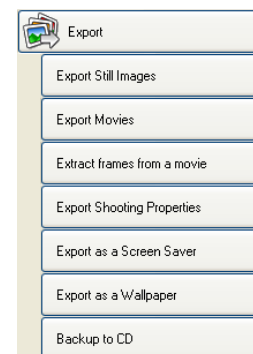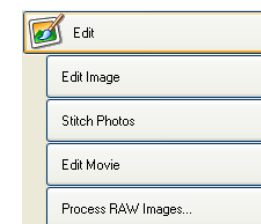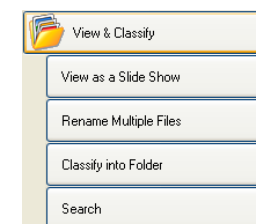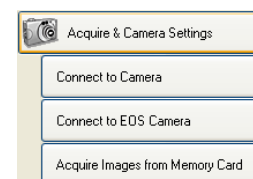

## REFERENCE

- To switch between tasks, click the corresponding task button.
- A scroll button will appear at the right when there are too many menu items to display at once in the Task Area.

# Task Buttons and Main Window Features (2/4)

## EXPLANATION




## Using the Task Windows

When you select an item in the menu, the related steps appear in the Task Area.

### Orange Button

This color marks the current step. Follow the instructions in the right-hand side of the window to proceed. Once you finish a procedure, click a different button to proceed to the next step.

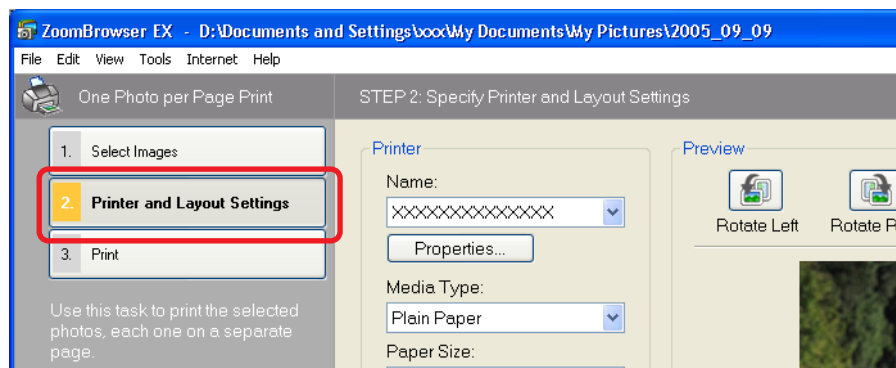


## REFERENCE

- In general, you are recommended to proceed through the steps in order. You can return to the previous step by clicking the button for that step.  
In addition, you can also advance to the next or previous step by clicking the [Previous] or [Next] buttons at the window's bottom right. (These buttons may not appear for some tasks.)
- To return to the first menu, click [Return to Main Menu], which appears below the menu items.

### Gray Buttons (Black Letters)


This is the step that you can select at the present time. Switch to it by clicking the button.

However, if you have already finished selecting an image and you switch to the [2. Printer and Layout Settings] task, you must click [1. Select Images] again to reselect the image.

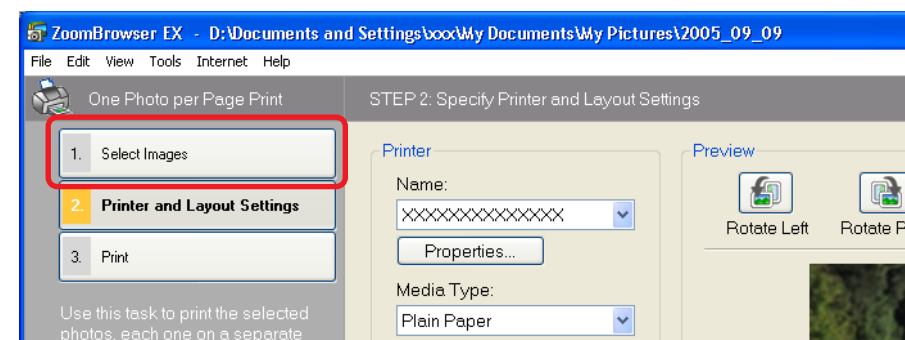

### Grayed Out Buttons (Gray Letters)

Grayed out buttons indicate tasks that are not available at the time. When you finish the task underway, the buttons will once again become selectable.

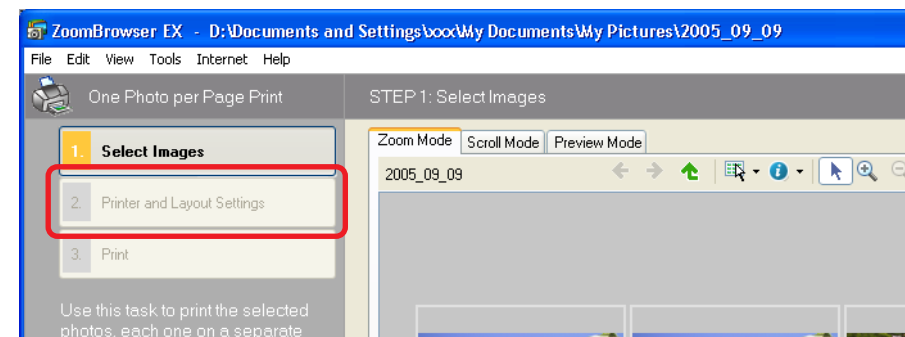

# Task Buttons and Main Window Features (3/4)

## EXPLANATION



## Function Buttons

The following buttons are available in the Main Window.



### View Image Button

Displays the selected image in a viewer window.



### Properties Button

Displays information for the selected image or folder in the Properties window.



### Slide Show Button

Starts a slide show of the selected images.



### Search Button

Searches images using criteria such as the Star Rating, revision date, shooting date, comments or keywords.



### Delete Button

Deletes selected images or folders from the computer.



### Rotate Button

Rotates the selected image. Choose between 90° Left, 90° Right or 180°.

## EXPLANATION



## Display Modes

Use the tabs to switch between Browser Area display modes.

Zoom Mode Scroll Mode Preview Mode

## EXPLANATION



## Display Control Panel

The display control panel offers the following buttons.



### Back Button

Returns to the view of the Browser Area displayed immediately prior.



### Forward Button

Returns to the view of the Browser Area displayed prior to use of the Back button.



### Up Button

Advances to a higher level folder when you have navigated to a lower level folder.



### Advanced Select Menu

Use this menu to select or deselect all of the images in the Browser Area at once. You can also use it to select bracketed images (images shot with the camera's AEB function).



# Task Buttons and Main Window Features (4/4)



## Show Information Menu

Use this to show or hide image information—such as the file name, shooting date or Star Rating—below the thumbnail. You can also use it to show/hide the attribute icons around the folder or thumbnail edges and the pop-up window.



## Selection Tool Button (Operative only in Zoom Mode)

Restores the mouse pointer to a “pointer” when the Zoom In or Zoom Out button is being used.



## Zoom In Button (Operative only in Zoom Mode)

Zooms in to folders or images in the Browser Area.



## Zoom Out Button (Operative only in Zoom Mode)

Zooms out from folders or images in the Browser Area.



## Pan Button (Operative Only in Zoom Mode)

Changes the area displayed when you zoom in on a folder or image in the Browser Area and drag the thumbnail list.



## Zoom to 100% Button (Operative Only in Zoom Mode)

Changes the size of the thumbnail list to fit the window.



## Display Size (Operative only in Zoom or Scroll Mode)

In Zoom mode, it changes the display magnification of the entire Browser Area.

In Scroll mode, it changes the thumbnail display size.

Show

All Images



## Filter Based on Star Rating

Extracts only the images that are assigned a special Star Rating and displays them in the Browser Area.

The task buttons and other function buttons are discussed in more detail from Chapter 4 onward.



# Downloading Images to a Computer (1/8)

This chapter explains a sequence of basic procedures in order, such as downloading images from the camera and printing downloaded images. This section starts by explaining the procedures for downloading images from the camera.

## IMPORTANT

- This guide assumes that all the relevant software programs and drivers have been correctly installed on your computer. If you have not yet installed them, read the guide supplied with your product and install them.

## EXPLANATION



## Starting Methods for ZoomBrowser EX

There are two ways to start ZoomBrowser EX: "Connecting the Camera and Computer" and "Starting ZoomBrowser EX from the Icon." The "Connecting the Camera and Computer" method is generally the most convenient for downloading images from the camera. Use the icon method under the following circumstances.

- To use ZoomBrowser EX when a camera or memory card reader is not connected.
- To restart ZoomBrowser EX with a camera or memory card reader already attached after the program has been closed.
- To use ZoomBrowser EX when the Auto Start function has been set to start a different program when the camera is connected.

## IMPORTANT

- With some versions of Windows, you may not be able to use the "Connecting the Camera and Computer" method the very first time the camera is connected after the computer has been booted up (due to a Windows limitation). Use the icon method in this case. You can use the "Connecting the Camera and Computer" method from the second time onward.

# Downloading Images to a Computer (2/8)

## PROCEDURES



### Connecting the Camera and Computer

This method involves connecting the camera to the computer and preparing it to exchange data.


#### 1. With the camera attached to the computer, set the camera to the Playback mode.

See the user guides for your camera for the method for connecting the camera and computer.

The Camera Control Window will open.

The window that appears for a wireless connection may differ slightly.

#### Camera Control Window

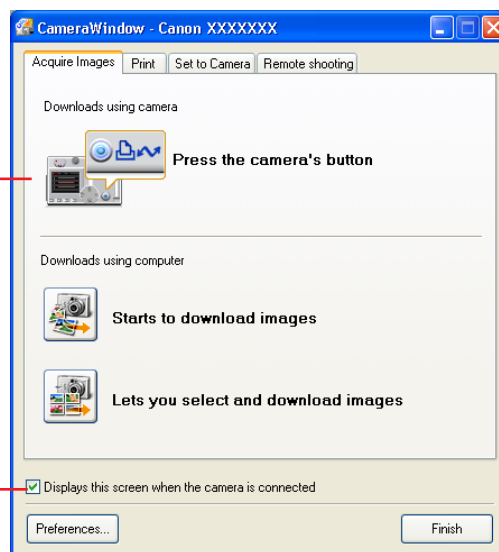


If you place a check mark here, this window automatically opens when the camera is connected to the computer.

### First Time Camera is Connected to a Computer

Configure the following settings the first time you attach the camera to the computer using an interface cable. This step is not required from the second connection onward.

When a window similar to the following one (Events dialog) opens, select [Canon CameraWindow] and click [OK].

The purpose of these settings is to have ZoomBrowser EX's Camera Control Window open automatically when the camera is connected to the computer.

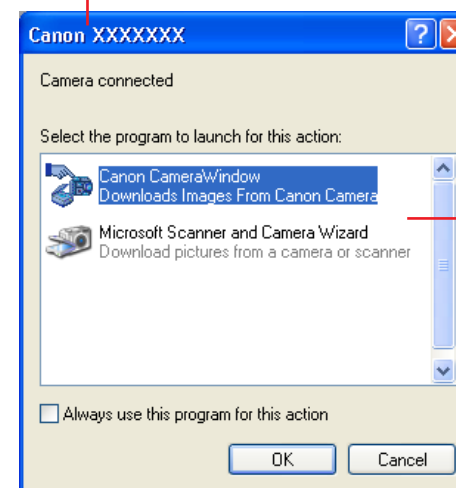

Your camera model name or "Canon Camera" will appear here.

Your computer system will determine which programs appear.

If the Events Dialog does not open, see "Troubleshooting" in the Appendices.

# Downloading Images to a Computer (3/8)

## REFERENCE


- With a memory card reader, the Events dialog will appear each time. Select [View/Download Images using Canon CameraWindow] to open the Camera Control Window.

## IMPORTANT

- With some versions of Windows, you may not be able to use this method of starting ZoomBrowser EX the very first time the camera is connected to the computer after it is booted up. (The Camera Control Window will not display even if you connect the camera to the computer correctly.) In this case, use the icon method to start ZoomBrowser EX.

## REFERENCE

- If the Scanners and Cameras Wizard displays, close it and use the icon method to start ZoomBrowser EX.
- When a camera model selection window opens, confirm that your camera model or [Canon Camera] is selected and click [OK].

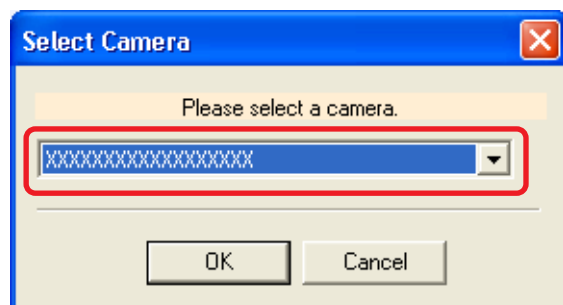

# Downloading Images to a Computer (4/8)

This section describes two methods for downloading images shot from the camera to a computer.

## ■ Downloading Images with Camera Commands

You can use this method to download images with cameras that support the direct transfer function.

## ■ Downloading Images with Computer Commands

This method uses commands entered on the computer to download images from a memory card in a camera or in a memory card reader. This method can be used regardless of whether your camera supports the direct transfer function or not.

### IMPORTANT

- Check to ensure that the computer and the camera or memory card reader are in the correct state for communication.

### REFERENCE

- This section uses the "Download All Camera Images Not Yet Downloaded" method, a simple method, to download images. Chapter 3 explains in greater detail how to select images for downloading from a camera or memory card and how to perform tasks such as changing the file destination.
- You can also download sound files to the computer that were recorded using the Sound Recorder feature. The downloading procedures are explained in Chapter 3 "Downloading Sound Files from the Camera."


### PROCEDURES





## Using Camera Commands to Download Images

### 1. Read the dialog that displays.

Proceed to Step 2 if the Camera Control Window opens on the computer.

If your camera has a  (Print/Share) button, the  (Print/Share) button will blink and a Direct Transfer menu, like the one shown below right, will appear on the camera's LCD monitor.

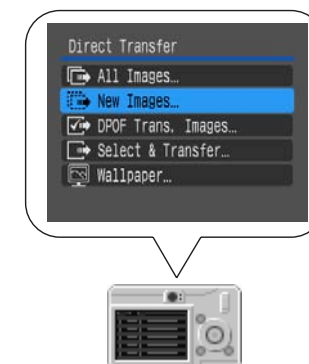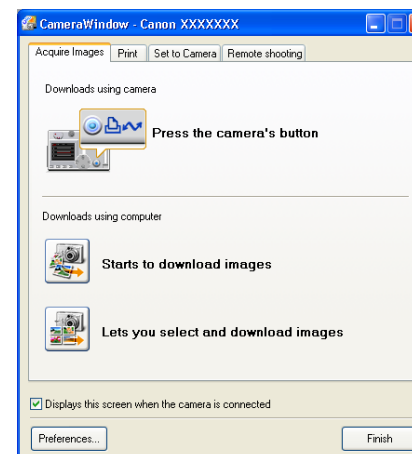


### REFERENCE

- If the Direct Transfer menu does not appear on the camera's LCD monitor, you cannot download images using camera commands.
- The content of the LCD monitor screen and the method for displaying the Direct Transfer menu may differ between camera models.

# Downloading Images to a Computer (5/8)

## REFERENCE

- When a camera model selection window opens, confirm that your camera model or [Canon Camera] is selected and click [OK].

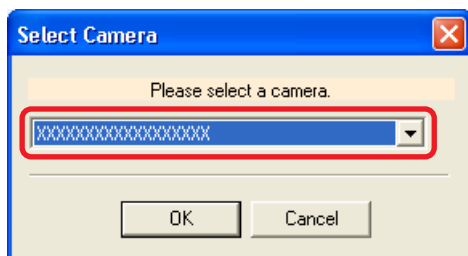


- Use the camera to set the direct transfer settings and press the  (Print/Share) button or the **SET** button.

## REFERENCE

- See the user guides for your camera for explanations of the settings and commands related to the Direct Transfer menu that appears on the camera's LCD monitor.
- You can change the destination folder for images by clicking [Settings] in the Camera Control Window that appears on the computer monitor. See "Downloading Images Automatically" in Chapter 3 for instructions on how to change the destination folder.
- By the default settings, downloaded images are saved to the My Pictures folder.


The images will display in the Main Window when the download is complete. The download mark will display on the folder(s) in which the images are downloaded. The mark will disappear when you quit ZoomBrowser EX.

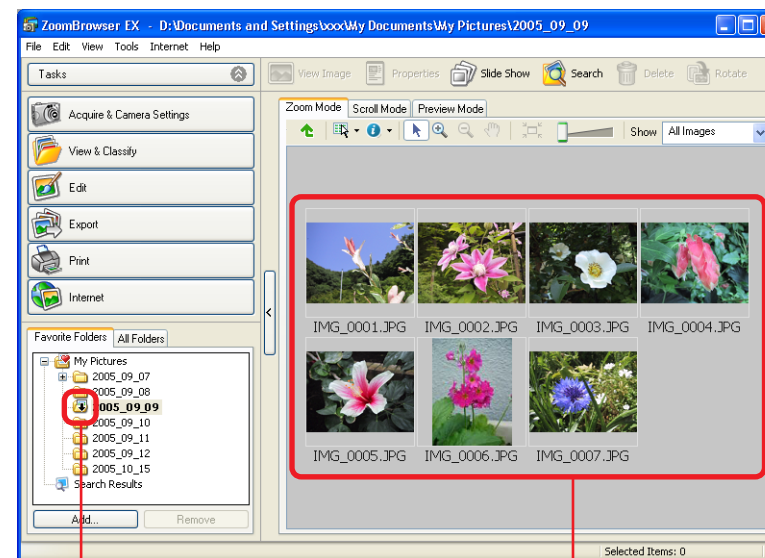

Mark indicating there are newly downloaded images in the folder.

Downloaded Images

## REFERENCE

- You can hide the download mark by clearing the check mark for [Show Download Marks] in the  (Show Information) menu. In addition, you can remove previously displayed download marks by selecting [Clear Download Marks].



# Downloading Images to a Computer (6/8)


## PROCEDURES



## Using Computer Commands to Download Images

### 1. Read the dialog that displays.


If a Camera Control Window similar to the one below appears, proceed to Step 3.

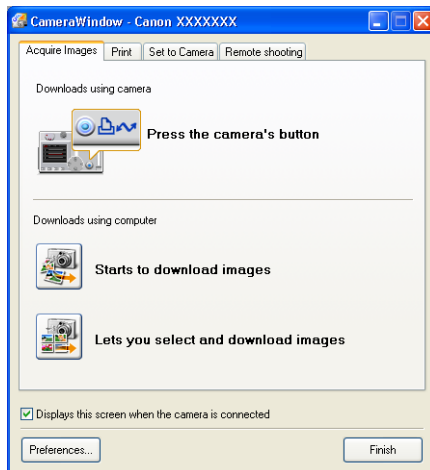

Proceed to Step 2 if ZoomBrowser EX's Main Window displays.


## REFERENCE

- If you are using a memory card reader, a Camera Control Window similar to the right will open.

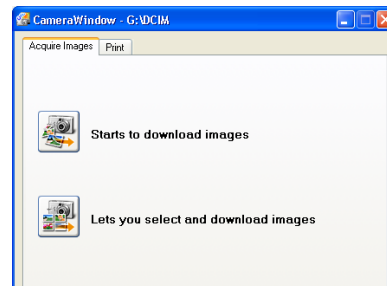

### 2.


Click [Acquire & Camera Settings] in the Main Window, followed by [Connect to Camera].

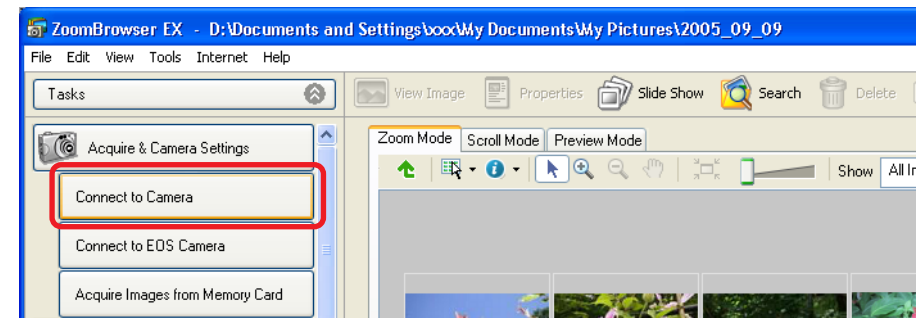

If you are using a memory card reader, check that the card is correctly inserted in the reader and then click [Acquire & Camera Settings], followed by [Acquire Images from Memory Card].


## REFERENCE

- When a camera model selection window opens, confirm that your camera model or [Canon Camera] is selected and click [OK].

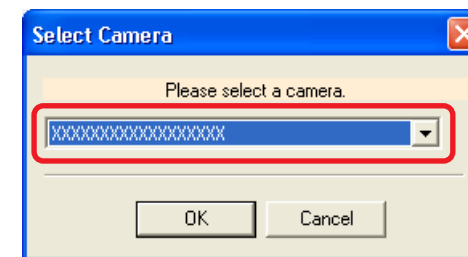

# Downloading Images to a Computer (7/8)


## 3. Click [Starts to download images].

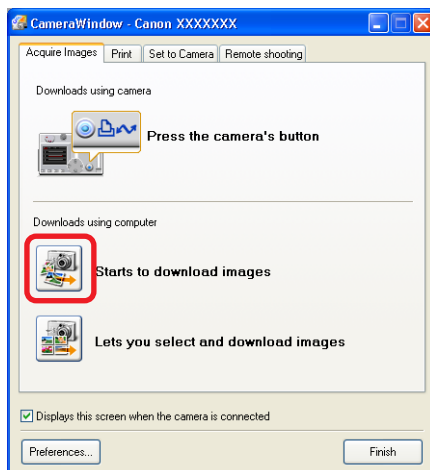

### REFERENCE

- If you click [Preferences], you can change settings such as the destination folder and type of image to download. The methods for changing the settings are explained in "Downloading Images Automatically" in Chapter 3.
- By the default settings, all images that have not yet been downloaded are saved to the My Pictures folder.

When the download is complete, the downloaded images will appear in the Main Window. The download mark will display on the folders in which images are downloaded. The mark will disappear when you quit ZoomBrowser EX.

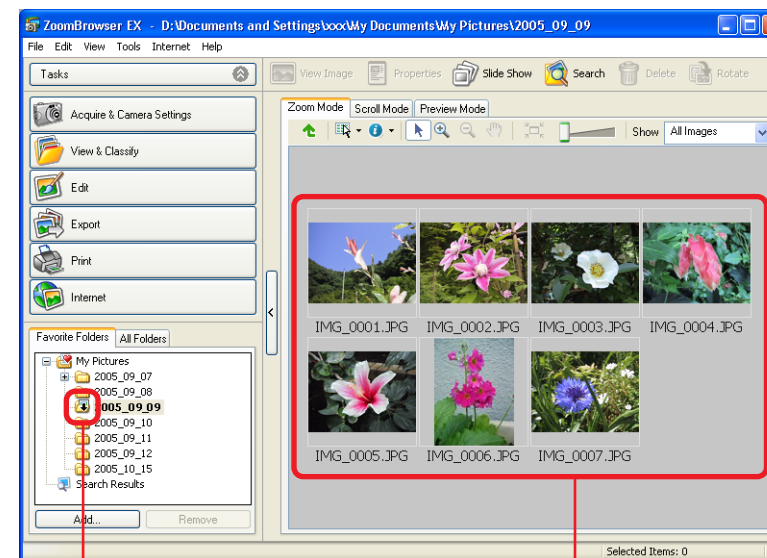

Mark indicating there are newly downloaded images in the folder.

Downloaded Images

# Downloading Images to a Computer (8/8)

## PROCEDURES




### Starting by Clicking an Icon or Menu


Use the following methods to start ZoomBrowser EX using its desktop icon or a menu.

#### ■ The Icon Method

1. Double-click the [ZoomBrowser EX] icon on the desktop.

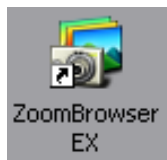

ZoomBrowser EX will start and open its Main Window.

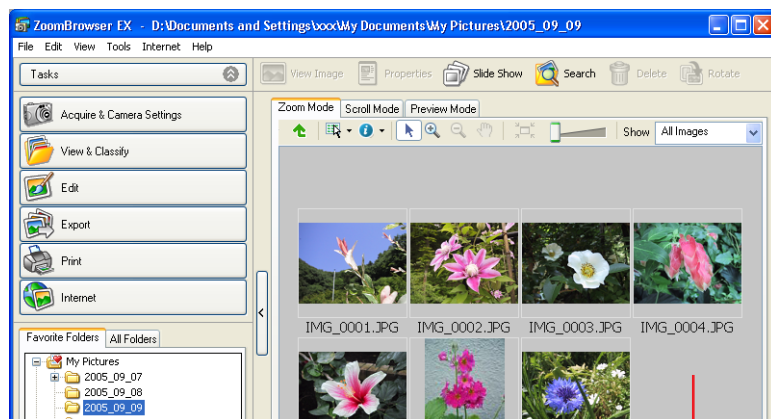

Main Window

The downloading procedures after this are described in "Downloading Images to a Computer (6/8)."

#### ■ The Menu Method

1. Click the [Start] menu and select [All Programs] or [Programs], followed by [Canon Utilities], [ZoomBrowser EX] and [ZoomBrowser EX].  
ZoomBrowser EX will start and open its Main Window.

The downloading procedures after this are described in "Downloading Images to a Computer (6/8)."

## PROCEDURES



### Closing ZoomBrowser EX

To close ZoomBrowser EX, click the (close box) in the Main Window or click the [File] menu and select [Exit].

# Printing a Single Image on a Single Page (1/2)

This section explains how to print images downloaded to a computer. It describes the procedures for printing a single image on a single page. It is easy to print photo-quality prints.


## IMPORTANT

- If you have installed the Easy-PhotoPrint program supplied with a Canon-brand printer, the Print window of Easy-PhotoPrint will automatically open if you select [One Photo per Page Print]. See the Easy-PhotoPrint [Help] menu for procedural instructions.
- The method for proceeding to the ZoomBrowser EX Print window when you select [One Photo per Page Print] as shown in Step 2 is explained in the Appendices in "Customizing Preferences."

## REFERENCE


- The procedures for printing indexes are explained in Chapter 6, "Index Print."

1. Click [Print] in the Main Window, followed by [One Photo per Page Print].

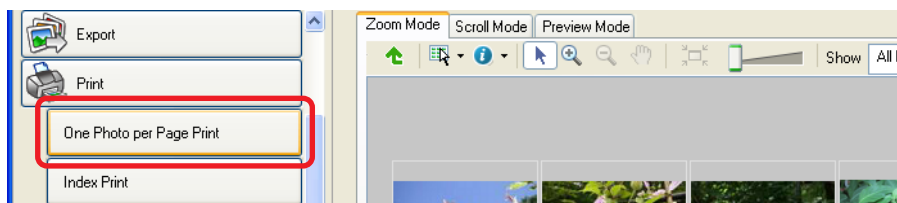

2. Confirm that [1. Select Images] is chosen and select images for printing.

The background of the selected images will change to blue.

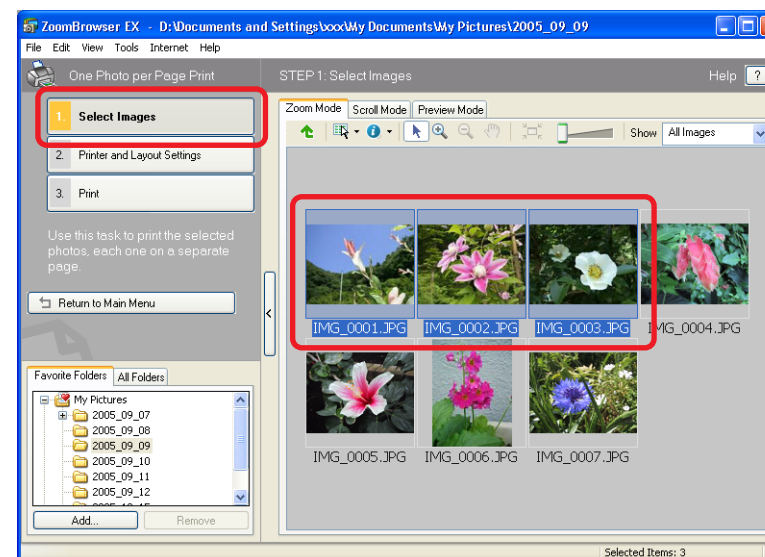


## REFERENCE

- You can select multiple images by pressing and holding the [Ctrl] key while you click on successive images. To deselect an image, hold down the [Ctrl] key and click the image again.

## Printing a Single Image on a Single Page (2/2)

**3.** Click [2. Printer and Layout Settings] and set the categories as desired.

**4.** Click [3. Print].  
Printing will start.

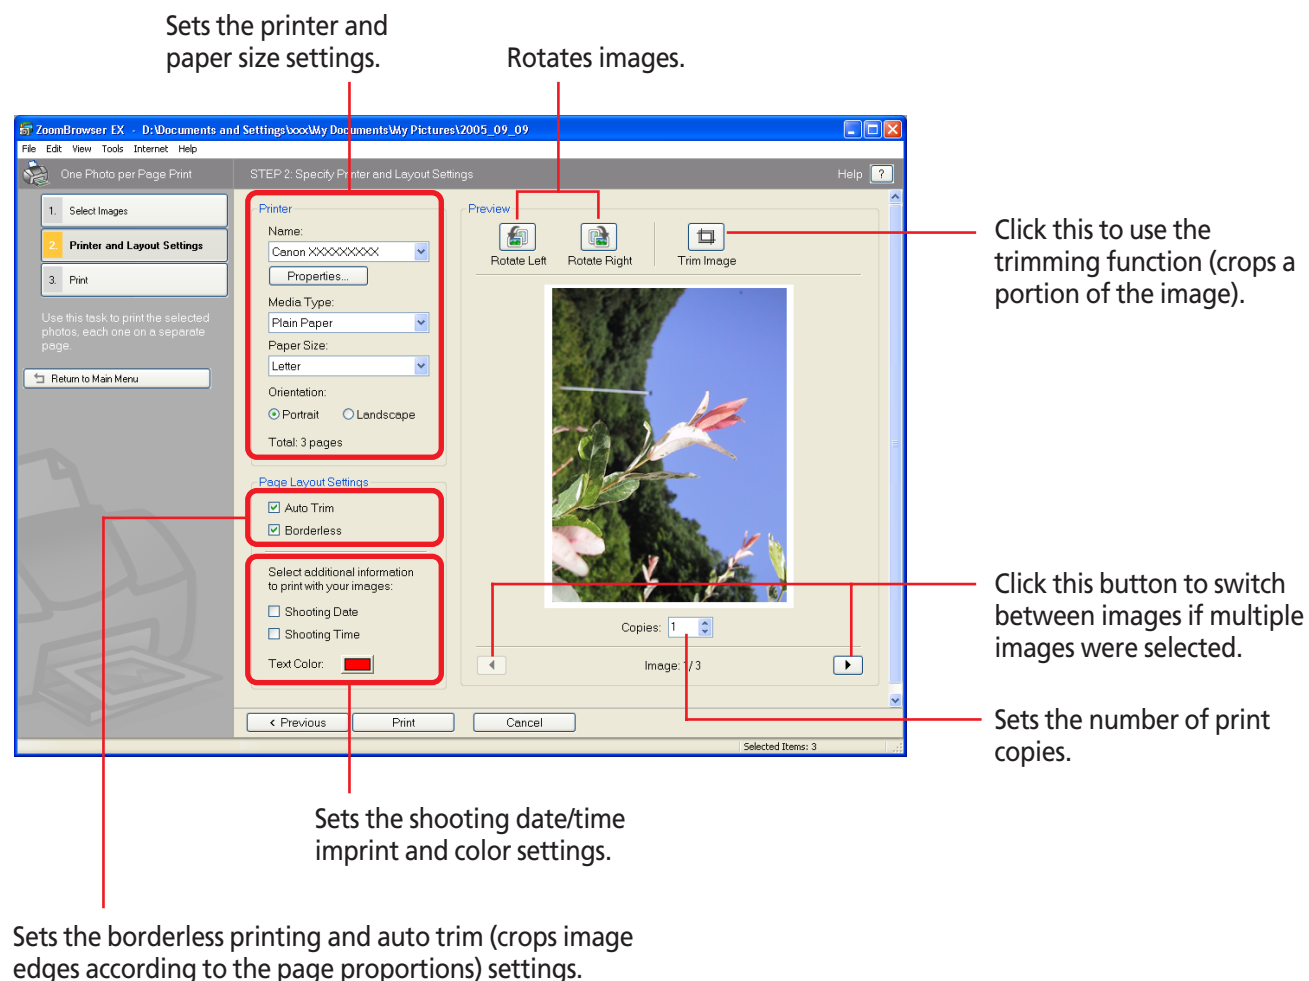

# Camera Control Window (1/2)

This chapter explains the operations that can be performed with the Camera Control Window.


This explains the procedures for downloading camera images using the camera's Direct Transfer function.

Selects a function in the Camera Control Window.

You can download images in a single pass using a computer operation.

You can check images first before downloading using a computer operation.

If you remove the check mark from here\*, the Events dialog (p. 13) will appear the next time the camera is connected to the computer.

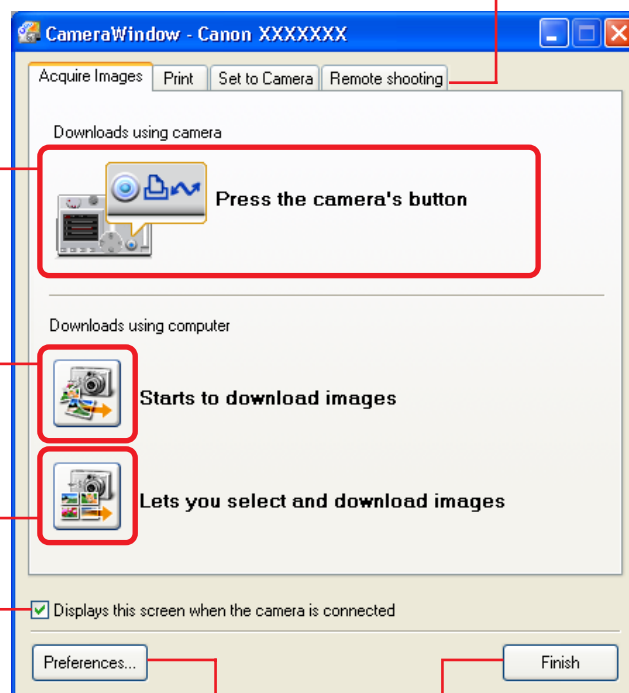

Sets the attributes and destination for images targeted for automatic downloading.


Closes the Camera Control Window.\*

## PROCEDURES



## Opening the Camera Control Window

The Camera Control Window will automatically open when the camera is connected to your computer. When the ZoomBrowser EX Main Window is open, click [Acquire & Camera Settings] in the Task Area, followed by any menu item to open the Camera Control Window.

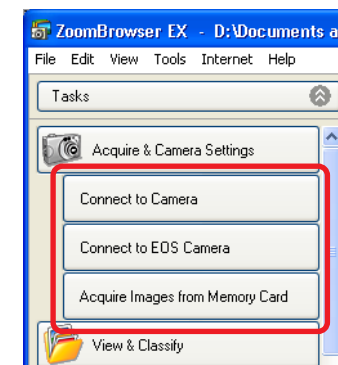

## REFERENCE

- If the Camera Control Window does not open, click the [Start] menu and select [All Programs] or [Programs], followed by [Canon Utilities], [CameraWindow], [PowerShot - IXY - IXUS - DV 6] and [CameraWindow].
- If you are using a memory card reader, click the [Start] menu and select [All Programs] or [Programs], followed by [Canon Utilities], [CameraWindow], [CameraWindowMC], and [CameraWindow].

\* This option will "gray out" when you are using a wireless connection.




# Camera Control Window (2/2)

## PROCEDURES



## Closing the Camera Control Window

Click [Finish] to close the Camera Control Window.

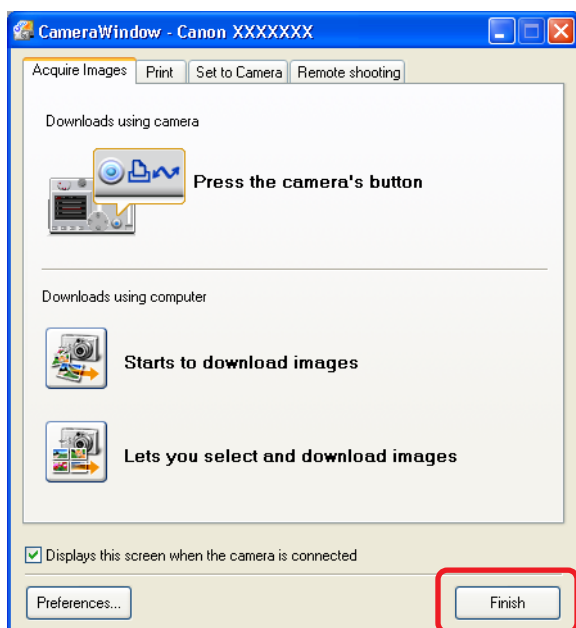

When you are connected wirelessly, the Camera Control Window will close when you close the connection. See the user guides for your camera for information about closing a wireless connection.

# Downloading Images Automatically—Camera Operations (1/2)

## PROCEDURES



### Starting Auto Downloading

1. Set the Direct Transfer settings on the camera, and start the direct transfer.

This will download images automatically to the computer.

## REFERENCE

- See the user guides for your camera for explanations of the settings and commands related to the Direct Transfer menu that appears on the camera's LCD monitor.
- Sound files recorded using the Sound Recorder feature cannot be downloaded using the Direct Transfer feature. The downloading procedures are explained in "Downloading Sound Files from the Camera."


## PROCEDURES




### Changing the Auto Download Settings

Change the destination folder for images downloaded to the computer.

1. Click [Preferences].

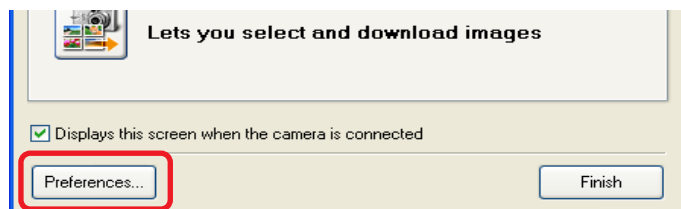


2. Select [Change direct transfer download destination folder] and click [Next].

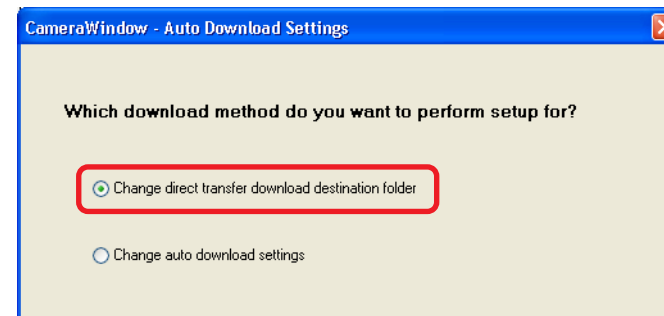

3. Select a destination folder for the downloaded images and set the new folder creation method for downloads, then click [Next].


Proceed to Step 5 when "Finished" appears.

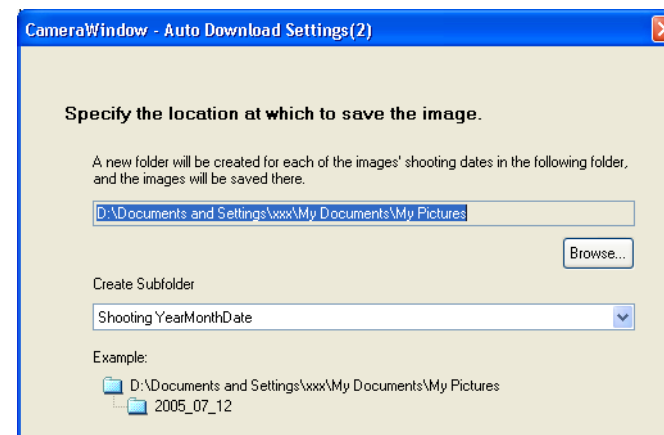

## Downloading Images Automatically—Camera Operations (2/2)

- 4** To print (via a computer) using the Direct Transfer menu on the camera's LCD monitor, click [Settings] and configure the settings for your printer.

These settings are only required for printing via a computer over a wireless connection. For other connection methods, proceed directly to Step 5.

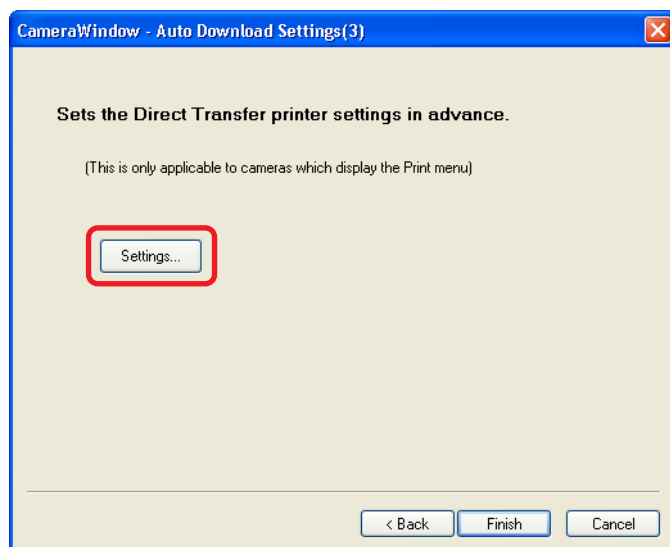

- 5** Click [Finish].  
The settings window will close.

### REFERENCE

- See the user guides for your camera for information about the settings and procedures for the camera's Direct Transfer menu.

# Downloading Images Automatically—Computer Operations (1/3)


## PROCEDURES



### Starting Auto Downloading

1. Click [Starts to download images] in the Camera Control Window.

All the images that have not yet been downloaded will be downloaded automatically to the computer.

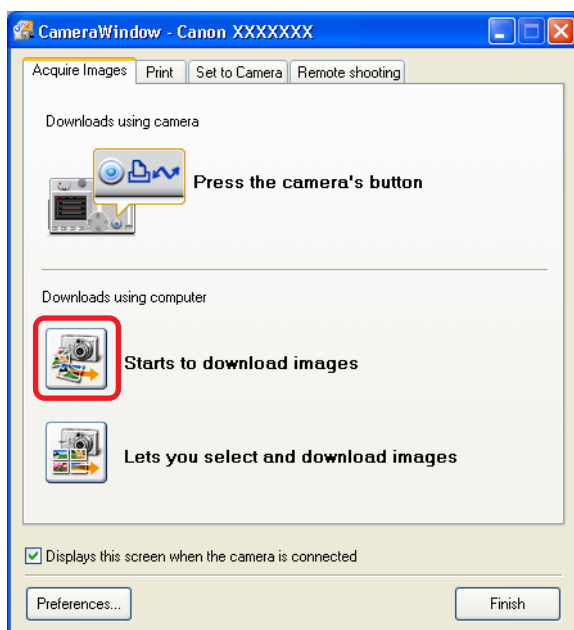

## REFERENCE

- Sound files recorded using the Sound Recorder feature cannot be downloaded using the Auto Download feature. The downloading procedures are explained in "Downloading Sound Files from the Camera."


## PROCEDURES




### Changing the Auto Download Settings

Change the type of image to download or the destination folder.

1. Click [Preferences].

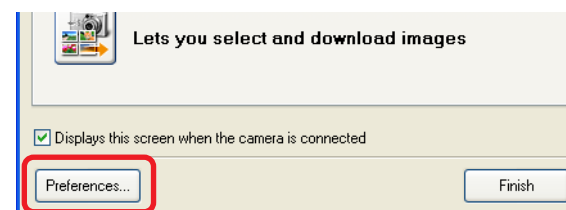


2. Select [Change auto download settings] and click [Next].

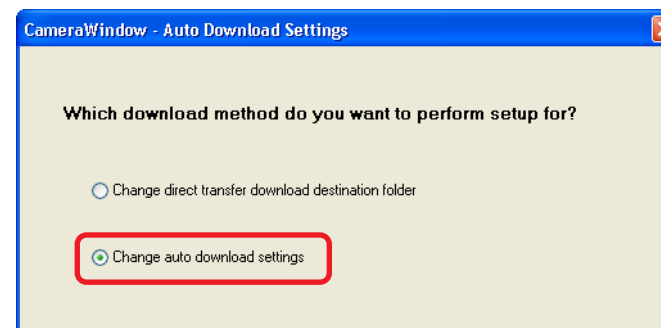


## Downloading Images Automatically—Computer Operations (2/3)

3. Select the type of image to download and click [Next].

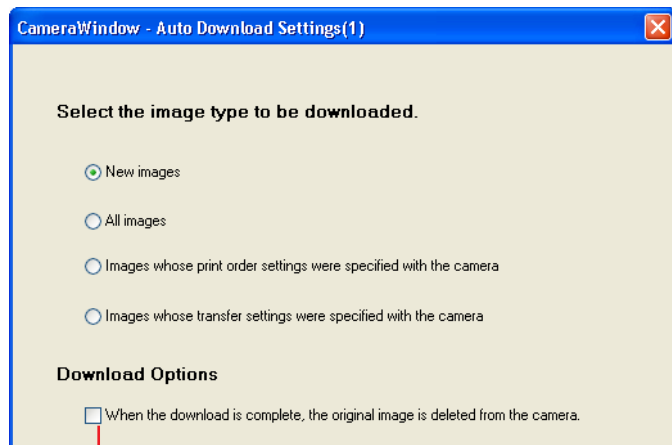


Place a check mark here if you wish the original image in the camera to be deleted after downloading.

4. Select a destination folder for the downloaded images and set the new subfolder creation method for downloads, then click [Next].

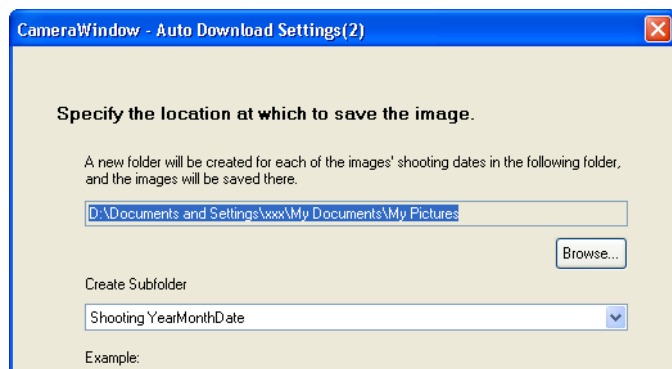

5. Set the process to initiate after the images are downloaded and click [Next].


To simply display the images in ZoomBrowser EX's Browser Window, select [Display the folder at the save destination]. To initiate a different process, select [Perform selected processes consecutively], click [Select] and choose a process in the Select Process window.

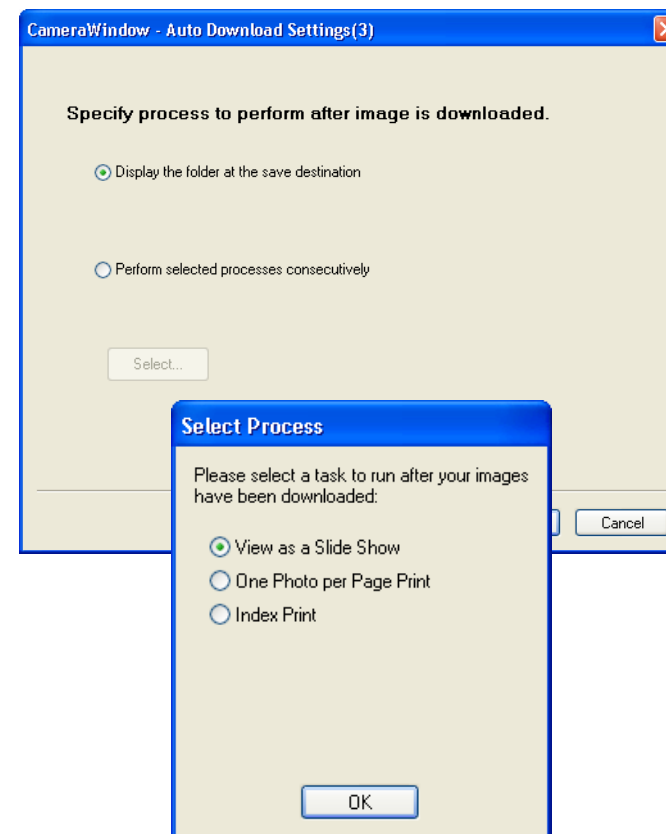

# Downloading Images Automatically—Computer Operations (3/3)

6. To initiate the selected auto download process immediately after the camera and computer are connected, place a check mark beside [Images are automatically downloaded to computer while camera is connected].

You cannot place a check in this option when using a wireless connection.

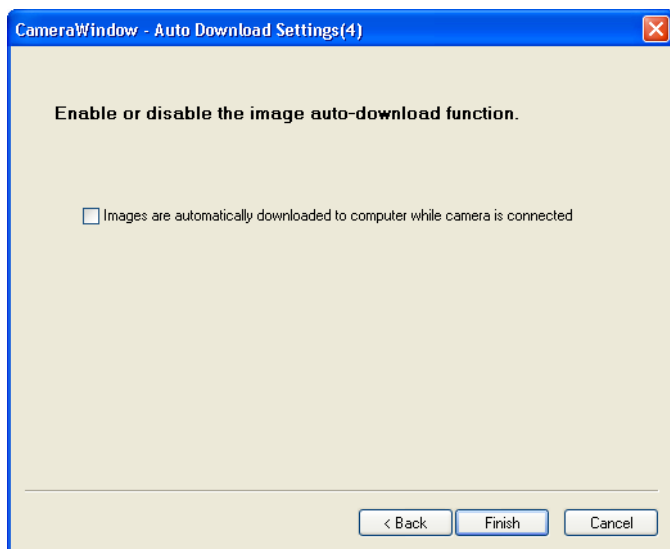

7. Click [Finish].  
This concludes the settings procedure.

## REFERENCE

- ZoomBrowser EX rotates images to match the camera display orientation. However, it does not alter the image data itself. If a rotated image is opened in a program that does not support rotated display, it will appear in its pre-rotation state. See “Customizing Preferences” in the Appendices for an explanation of how to alter the image data with rotation information so it downloads in the rotated orientation.




# Checking Images in the Camera before Downloading (1/2)

## PROCEDURES




### Selecting Images and Initiating the Download

1. Click [Lets you select and download images] in the Camera Control Window.

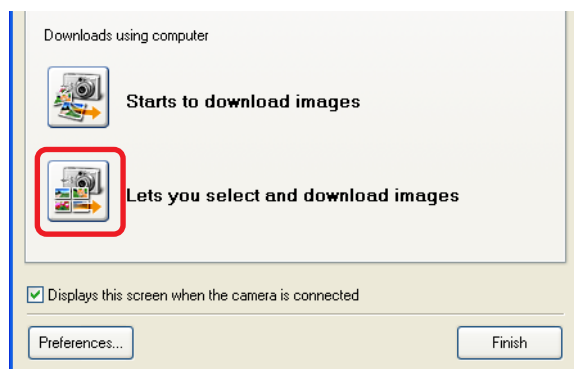

The Camera Browser Window will open and display the images contained in the camera.


Camera Browser Window

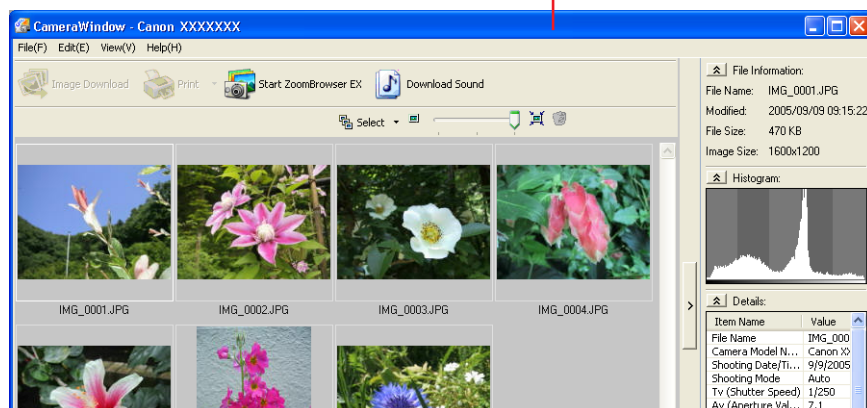

2. Select images for downloading in the Camera Browser Window.

The background color of the selected image will change to blue. You can select multiple images by pressing and holding the [Ctrl] key while you click on successive images. You can also select a series of adjacent images by pressing and holding the [Shift] key while clicking on the first and last images.

3. Click [Image Download].

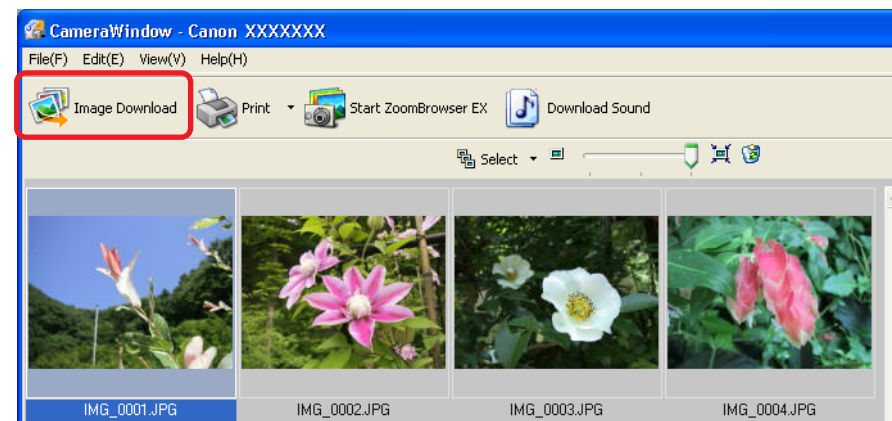

A window for setting the destination folder and other settings will open.


## REFERENCE

- You can also download images by clicking the [File] menu in the Camera Browser Window and selecting [Download].


# Checking Images in the Camera before Downloading (2/2)

## 4. Confirm whether changes are required for the file destination or name.

To make changes, click [Change Settings].

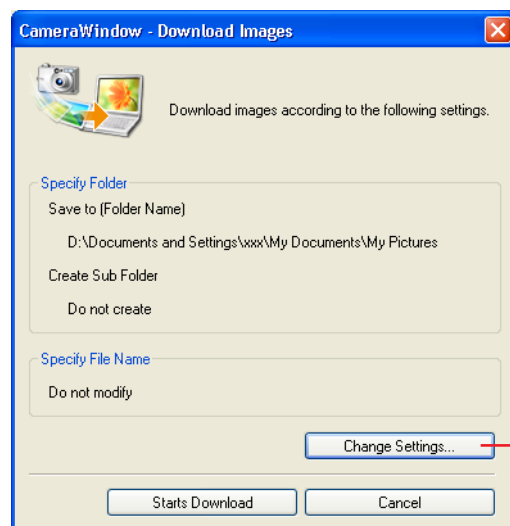

Specify a folder as the destination for downloaded images.  
Specify whether or not a subfolder is created and input a name.

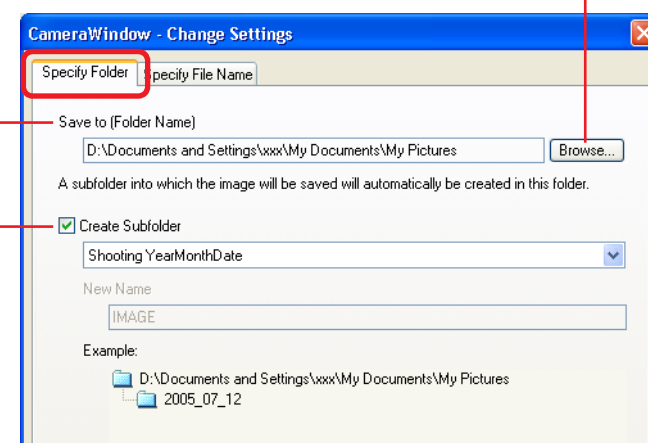

Click here to change the destination folder.


## 5. Click [Starts Download].

The images will download to the computer.

### REFERENCE

- You can also download sound files to the computer that were recorded using the Sound Recorder feature. The downloading procedures are explained in "Downloading Sound Files from the Camera."


To change the file name, select the file prefix format and the consecutive numbering system.

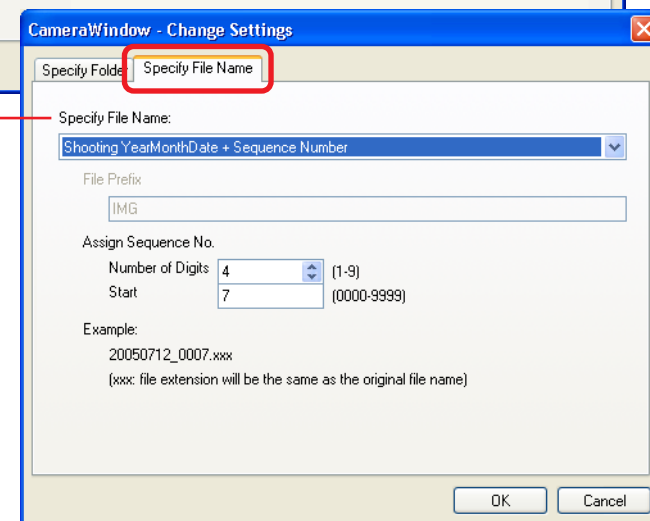


# Deleting Images from the Camera

This section explains how to use the Camera Browser Window to delete images from the camera.

## REFERENCE

- You cannot delete protected images (images bearing the  symbol).

- Click [Lets you select and download images] in the Camera Control Window.

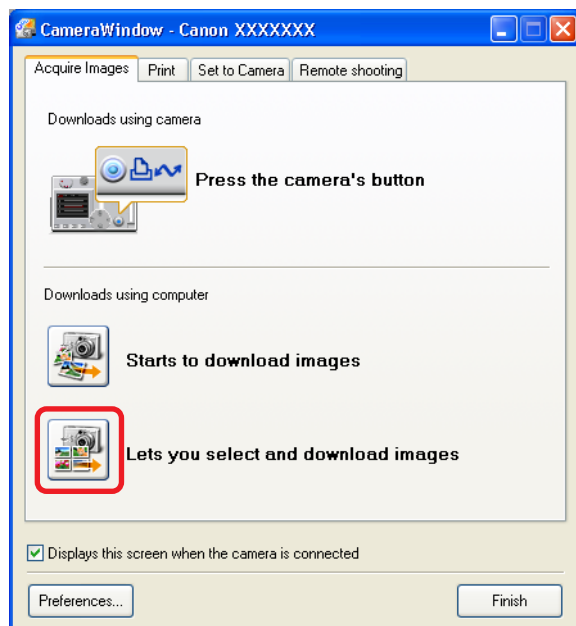


Camera Browser Window will open.

- Select images for deleting in the Camera Browser Window.

The background color of the selected image will change to blue. You can select multiple images by pressing and holding the [Ctrl] key while you click on successive images. You can also select a series of adjacent images by pressing and holding the [Shift] key while clicking on the first and last images.

- Click  (Delete Image).

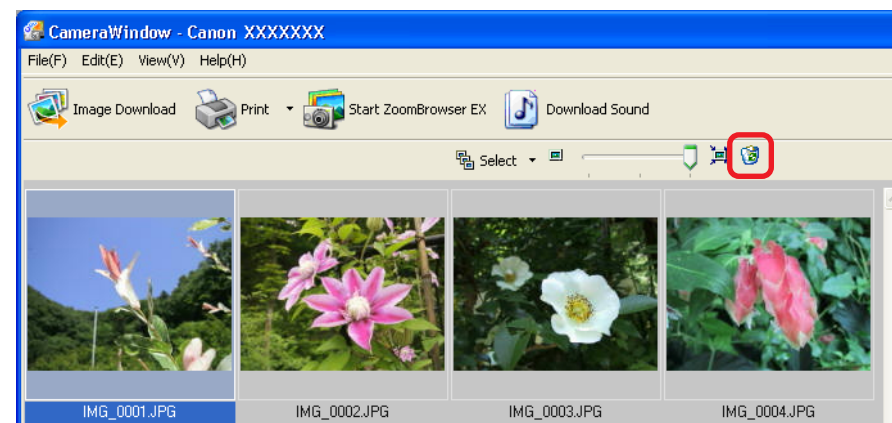

A confirmation dialog will display.

- Click [Yes].  
The image will be deleted.

# Downloading Sound Files from the Camera (1/3)

This topic explains how to download sound files recorded with the camera's Sound Recorder feature to the computer.

## IMPORTANT

- See the user guides for your camera to find out whether or not your camera supports the Sound Recorder feature.
- Sound files cannot be deleted using the Camera Browser Window.

## REFERENCE


- Sound files recorded with the camera's Sound Recorder feature differ from the sounds attached to images. They are independent sound files (WAV type).

## PROCEDURES




## Initiating Downloading

1. Click [Lets you select and download images] in the Camera Control Window.

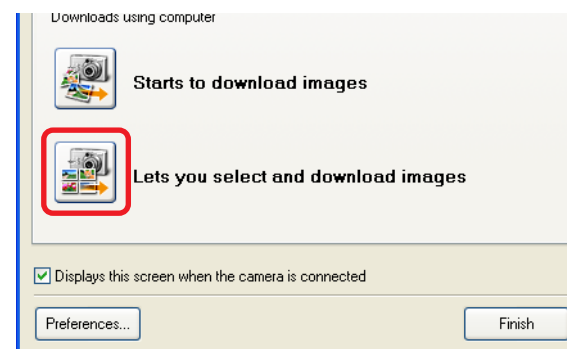

The Camera Browser Window will open. If sound files are contained in the camera or memory card, the [Download Sound] button will display.


2. Click [Download Sound].

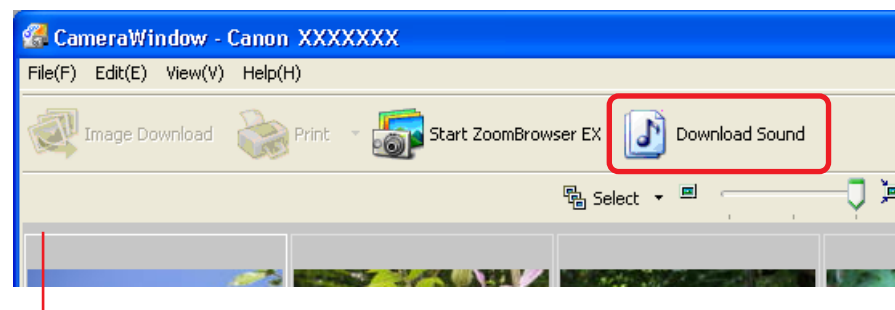

Camera Browser Window

# Downloading Sound Files from the Camera (2/3)

A list of sound files will display.

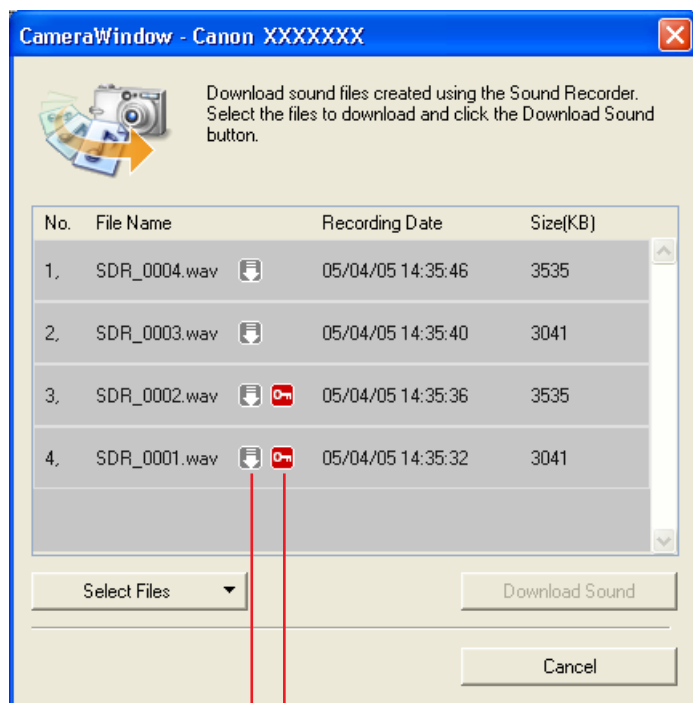

This symbol appears if the file is protected.

This symbol appears if the file has been downloaded to the computer previously.

## REFERENCE

- You can also display the list of sound files by clicking the [File] menu in the Camera Browser Window and selecting [Download Sound Files].

## 3. Select sound file(s) to download.


The selected files display in blue.

You can select multiple files by pressing and holding the [Ctrl] key while you click on successive files. You can also select a series of adjacent files by pressing and holding the [Shift] key while clicking on the first and last images.

## REFERENCE

- It is convenient to use the [Select Files] menu to select all the files, to deselect files, to select protected files or to select files that have not yet been downloaded.

## 4. Click [Download Sound].

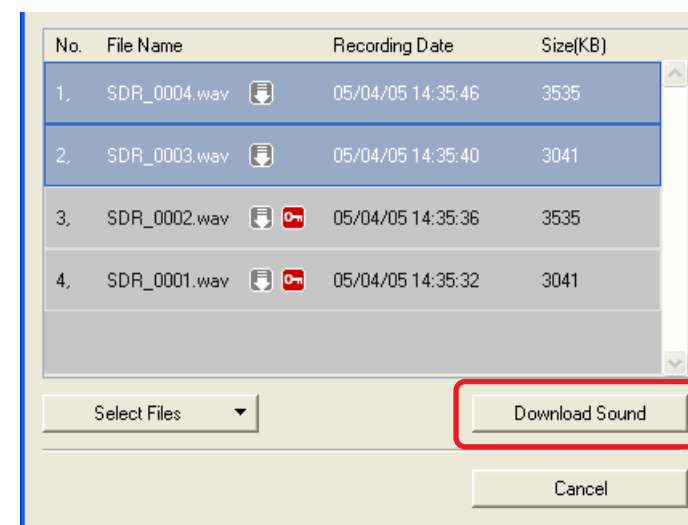


A window for setting the destination folder and other settings will open.

# Downloading Sound Files from the Camera (3/3)


## 5. Confirm whether changes are required for the file destination or name.

To make changes, click [Change Settings].

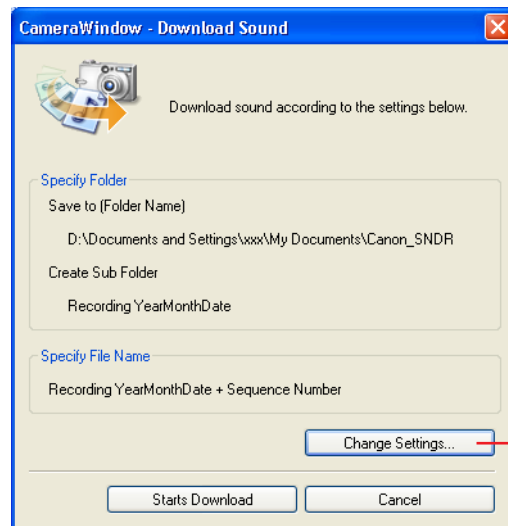

Specify a folder as the destination for downloaded files.


Specify whether or not a subfolder is created and input a name.

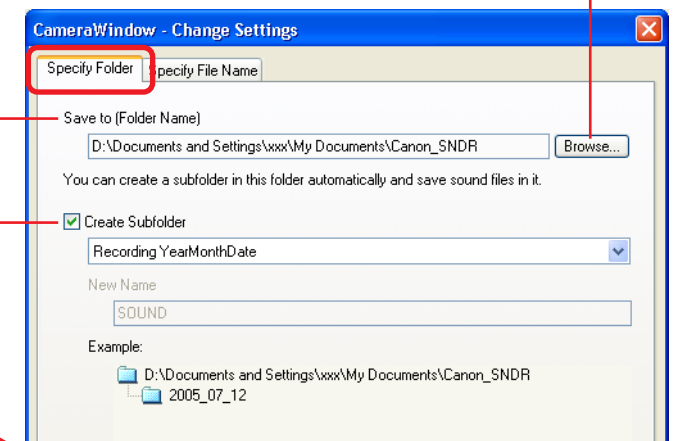

Click here to change the destination folder.

## 6. Click [Starts Download].

The file(s) will download to the computer.

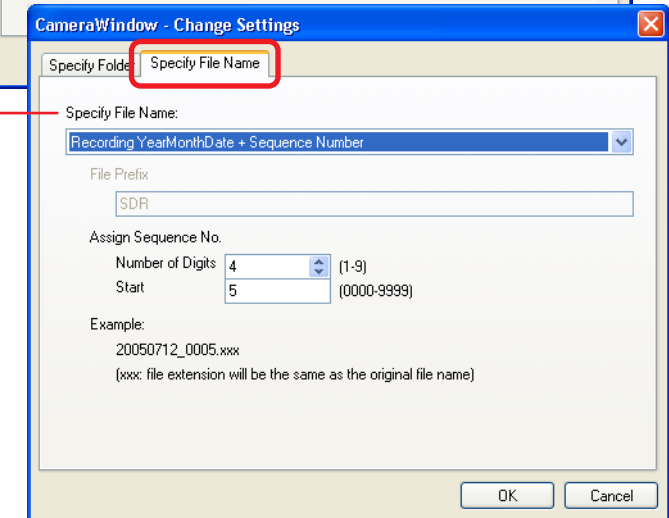

To change the file name, set the text characters for the file prefix and the consecutive numbering system.



# Other Features of the Camera Browser Window

This section explains the other features of the Camera Browser Window.

## REFERENCE

- You can also download images displayed in the Camera Browser Window by dragging and dropping them into ZoomBrowser EX's Browser Area or Folder Area.

The screenshot shows the CameraWindow - Canon XXXXXXX application interface. The window has a menu bar (File(F), Edit(E), View(V), Help(H)) and a toolbar with icons for Image Download, Print, Start ZoomBrowser EX, and Download Sound. Below the toolbar is a 'Select' dropdown menu and a search bar. The main area displays a grid of image thumbnails, each labeled with a filename (e.g., IMG\_0001.JPG, IMG\_0002.JPG, etc.). On the right side, there is a 'File Information' panel showing details for the selected image (IMG\_0001.JPG), including File Name, Modified date, File Size, and Image Size. Below this is a 'Histogram' panel showing a grayscale histogram. At the bottom right, there is a 'Details' panel showing a list of camera settings (File Name, Camera Model, Shooting Date, etc.) and their values. The status bar at the bottom indicates 'Selects image 1 of 7'.

Prints the selected images.

Starts ZoomBrowser EX.

Selects whether the image border and file name are shown or hidden.

Selects the image selection method.

Changes the size of the image thumbnail (tiny version).

**Image Information**  
(This will not display if you are using a memory card reader.)

**Histogram**

Selects whether the image information at the window's bottom right is shown or hidden.



# Printing Images in the Camera (1/4)

This function allows you to select images directly from the camera or memory card and print them.

## EXPLANATION



### Four Printing Methods

There are four ways to print images from the camera as listed below.

#### ■ Print All Photos

Prints all images from the camera in the format of one image per page.

#### ■ Print Contact Sheet with All Photos

Prints all images from the camera in an index format (rows of images on one page).

#### ■ Print according to DPOF settings

Prints according to the DPOF print settings set using the camera.

#### ■ Select an image and print

Displays a list of the images from the camera, allowing you to print them selectively.


## PROCEDURES



### Printing Procedures

**1.** Click the [Print] tab in the Camera Control Window.

**2.** Click on one of the four printing methods.

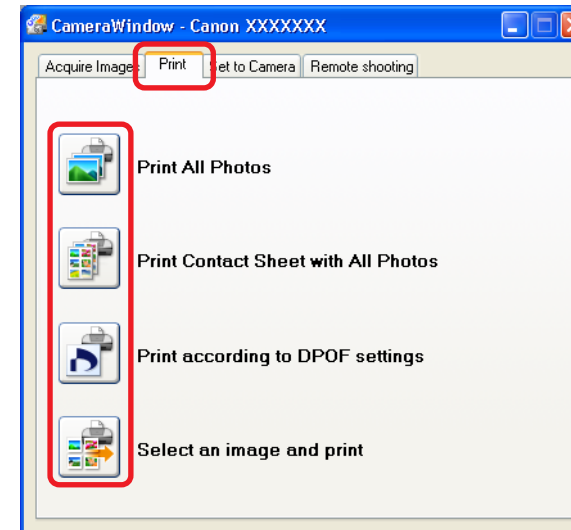

A print settings window corresponding to the selected method will open. Procedures for the respective print settings windows are explained from the next page onward.

## REFERENCE

- If ZoomBrowser EX's Main Window is open, you can display the Camera Control Window by clicking [Acquire & Camera Settings] in the task area, followed by [Connect to Camera]. If you are using a memory card reader, click [Acquire & Camera Settings], followed by [Acquire Images from Memory Card].

**3.** Set the print settings and click [Print].  
Printing will start.

# Printing Images in the Camera (2/4)

## PROCEDURES



### Print All Photos

The following print settings window will open if you selected [Print All Photos].

## PROCEDURES



### Print According to DPOF Settings—Standard

A print settings window similar to the following will open if you select [Print according to DPOF settings] and the standard option for DPOF print settings has been set using the camera.

Rotates images.

Sets the printer and paper size settings.

Sets the auto trim (crops image edges according to the page proportions) and borderless printing settings.

Sets the shooting date/time imprint and color settings.

Click this to use the trimming function (crops a portion of the image).

Sets the number of print copies.

Printing will start when you click [Print].

Click this button to switch between images if multiple images were selected.

# Printing Images in the Camera (3/4)

## PROCEDURES



### Print Contact Sheet with All Photos

A print settings window similar to the following will open if you select [Print Contact Sheet with All Photos].

## PROCEDURES



### Print According to DPOF Settings—Index

A print settings window similar to the following will open if you select [Print according to DPOF settings] and the index option for DPOF print settings has been set using the camera.

The screenshot shows the 'Index Print Settings' dialog box. It has a 'Printer' section on the left with fields for Name, Media Type, Paper Size, Orientation, Copies, and Page Layout Settings. The 'Preview' section on the right shows a grid of images. Annotations with red lines point to various parts of the dialog:

- Rotates images.** Points to the 'Rotate Left' and 'Rotate Right' buttons in the Preview section.
- Click this to use the trimming function (crops a portion of the image).** Points to the 'Trim Image' button in the Preview section.
- Sets the printer and paper size settings.** Points to the 'Printer' section on the left.
- Sets the number of print copies.** Points to the 'Copies' field in the Printer section.
- Sets the number of rows and columns.** Points to the 'Page Layout Settings' section in the Printer section.
- Sets the printing settings for shooting information, comments, headers, footers and page numbers.** Points to the 'Shooting Information' and 'Header/Footer' checkboxes in the Printer section.
- Printing will start when you click [Print].** Points to the 'Print' button at the bottom right.
- Click this button to switch between images if multiple images were selected.** Points to the left and right arrow buttons at the bottom of the Preview section.

# Printing Images in the Camera (4/4)

## PROCEDURES



### Select an image and print


The Camera Browser Window will open and display the camera images in a chart if you select [Select an image and print].

#### 1. Select images for printing from the Camera Browser Window.

The background color of the selected image will change to blue.

You can select multiple images by pressing and holding the [Ctrl] key while you click on successive images. You can also select a series of adjacent images by pressing and holding the [Shift] key while clicking on the first and last images.

#### 2. Click [Print] and select [Contact Sheet Print] or [One Photo Per Page Print] from the menu.

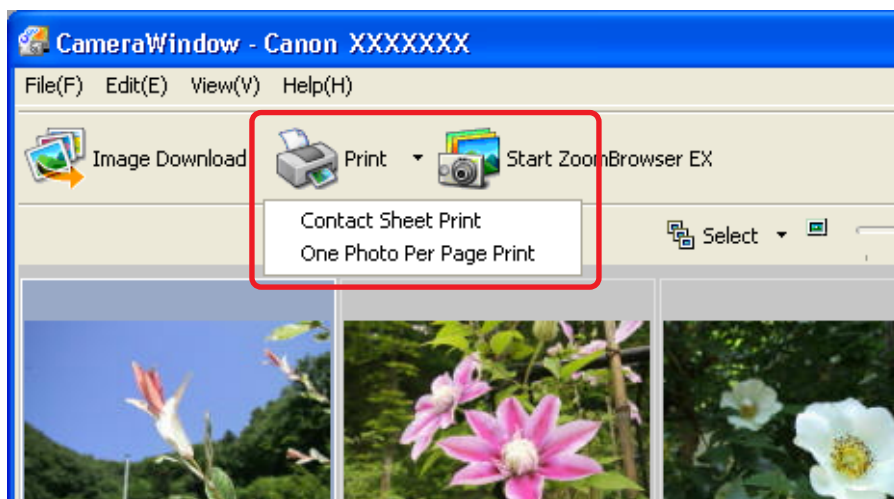

The print settings window will open.  
See the previous page for printing an index. See two pages back for printing one photo per page.

## REFERENCE

- You can also print by selecting the [File] menu in the Camera Browser Window, followed by the [Print] submenu.

# Setting the My Camera Settings (1/8)

This section explains how to save the “My Camera Settings” on your computer to the camera or vice versa.

## IMPORTANT

- Please see the user guides for your camera to determine whether or not it supports the *My Camera* function.

## EXPLANATION



### What are the My Camera settings?

The start-up image for the camera and sounds such as the start-up sound, the shutter sound, operating sounds and the self-timer sound are collectively referred to as the My Camera Settings. You can add your favorite images and sounds from your computer to the My Camera Settings in the camera.


## PROCEDURES



### Displaying the My Camera Settings

Display the existing My Camera Settings supplied with ZoomBrowser EX.

1. Click the [Set to Camera] tab in the Camera Control Window.
2. Click [Set My Camera].

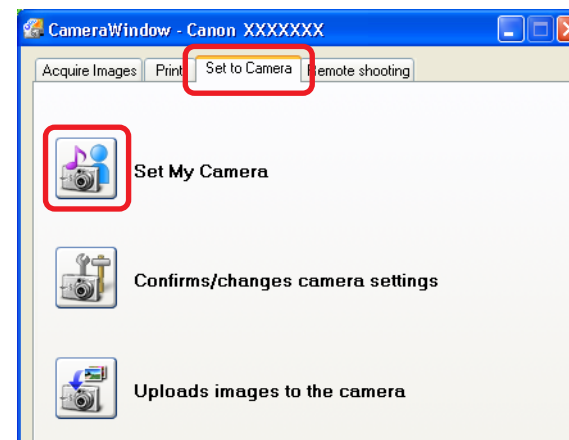

The My Camera window displays.

## REFERENCE

- If ZoomBrowser EX's Main Window is open, you can display the Camera Control Window by clicking [Acquire & Camera Settings] in the task area, followed by [Connect to Camera].

# Setting the My Camera Settings (2/8)


## 3. Switch between the [Setup as a theme] and [Set individually] tabs, and in the [Set individually] tab, switch the options in the Data Type category.

The My Computer list displays the images and sounds.

The Camera list displays the My Camera Settings currently in the camera (only the editable settings are shown).

Switches between theme sets and individual settings.

Changes the type of data.

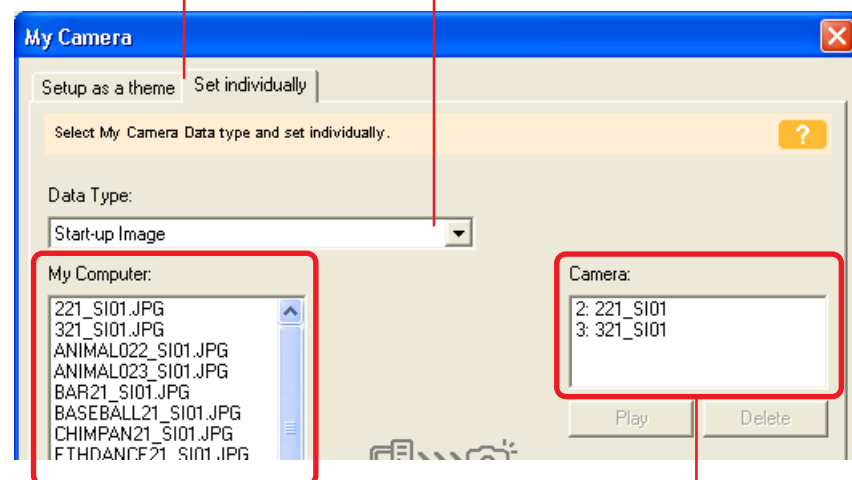

My Camera Settings that are already on your computer display here.

My Camera Settings in your camera display here.

You can save the files that appear in the My Computer list to your camera.

## REFERENCE

- Theme settings are a collection of My Camera Settings with something in common.
- You can change all of the My Camera Settings—the start-up sound, the start-up image, the shutter sound, the operating sounds, and the self-timer sound—on the camera in one easy step by selecting the [Setup as a theme] tab and saving the desired theme set to the camera.
- You can also add new files as My Camera Settings to the Computer list (the procedure is explained later in this section).
- Pre-prepared My Camera Settings can be found on the disk on which ZoomBrowser EX was installed. Open the following sequence of folders: [Program Files], [Canon], [CameraWindow] and [MyCameraFiles].
- You can also open the My Camera window by clicking the [Edit] menu and selecting [Manage My Camera]. However, the buttons in the window will be slightly different from those shown to the left.



# Setting the My Camera Settings (3/8)

## PROCEDURES




### Saving the My Camera settings to the camera

This topic explains how to save the previously recorded My Camera Settings files to the camera.

#### 1. Select the [Setup as a theme] tab in the My Camera window.

To set the My Camera Settings individually, click the [Set individually] tab instead and select the respective settings, such as the start-up sound or image, in the Data Type category.

Select the [Setup as a theme] tab.

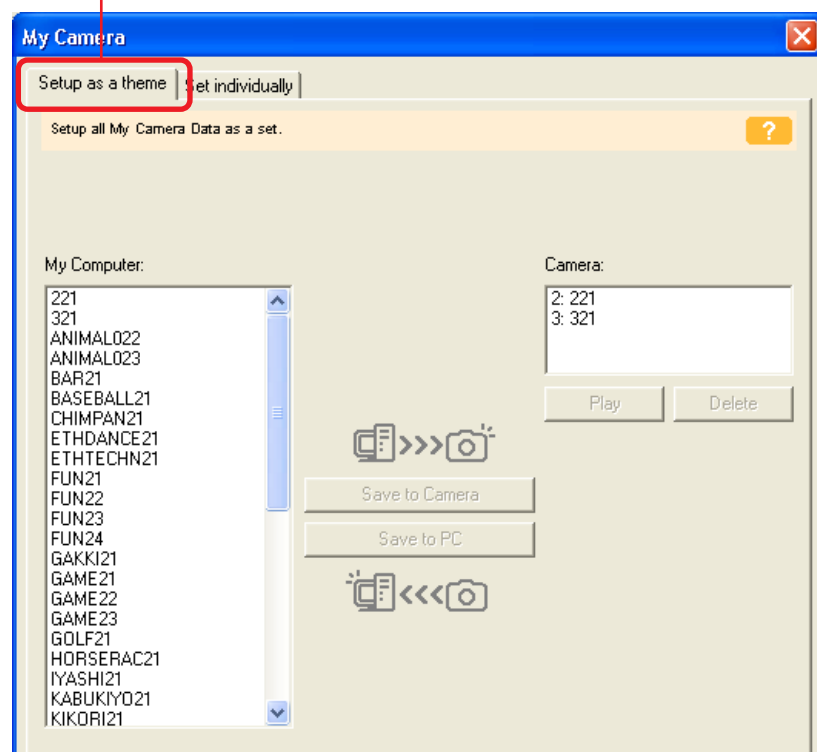

#### 2.


In the My Computer list, select a setting you would like to add to the camera.

When you select [Setup as a theme]:

The start-up image will preview in the area to the right and the start-up sound, the shutter sound, the operation sound and the self-timer sound will play in order.

When you select [Set individually]:

When you select a start-up image, it will be displayed in the preview area to the right. When you select a sound file, it will automatically be played.

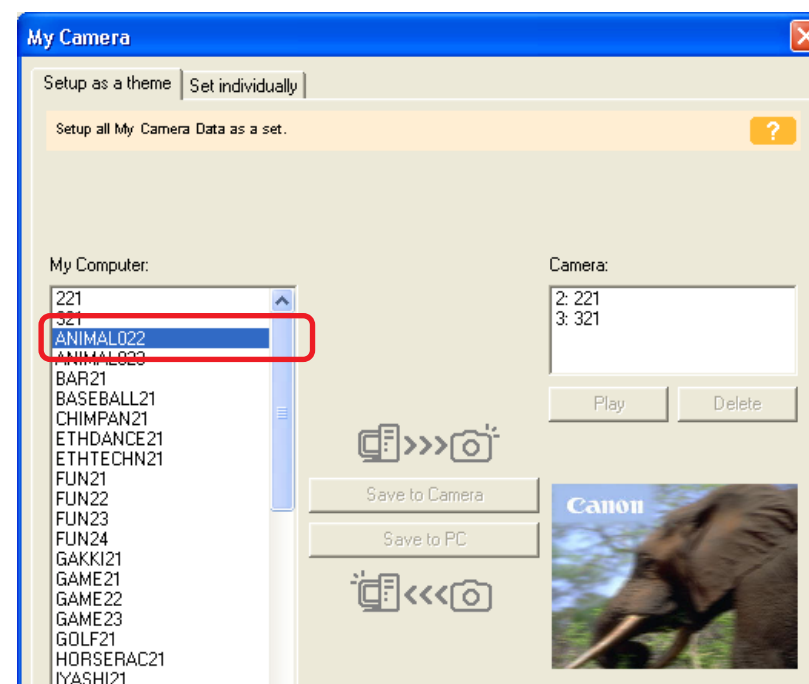




# Setting the My Camera Settings (4/8)

## 3. Select the settings file you would like to replace in the Camera list and click [Save to Camera].


When you click [OK] in the confirmation dialog, the settings file in the camera will now be replaced with the one you specified from the computer.

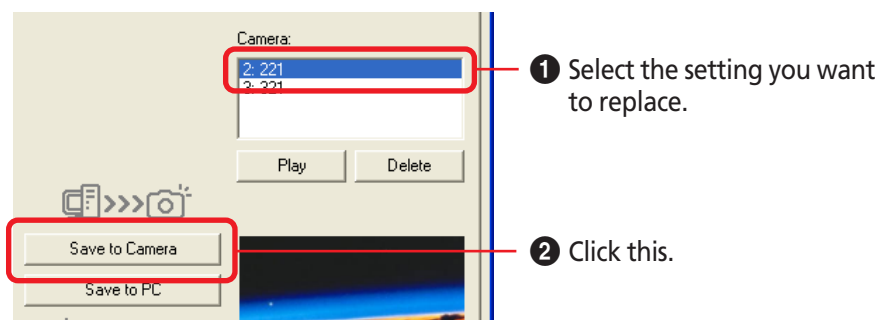

Repeat Steps 1-3 to replace all the settings files with those you wish to save to the camera.

### REFERENCE

- Please note that the original settings file in the camera is overwritten and permanently erased. To restore the original settings file, you must add it once more to the camera. Before you overwrite a settings file in the camera, confirm that it appears in the My Computer list.
- For cameras that can only register one My Camera setting, the [Return to factory default settings] button will display.

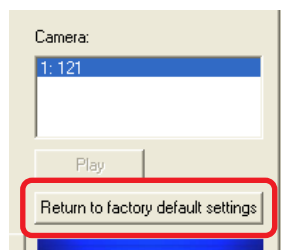

## 4. Click the [Close] button to close the dialog.

This concludes the procedure for adding settings to the camera.


See the user guides for your camera for instructions on changing the start-up image, start-up sound and other settings.

### IMPORTANT

- Do not break the connection while the My Camera settings are being saved to the camera.

### REFERENCE

- To delete settings files in the Camera list, select the file and click the [Delete] button. For cameras that can only register one My Camera setting, you cannot delete the setting file.
- You can check a sound file in the camera by clicking [Play].

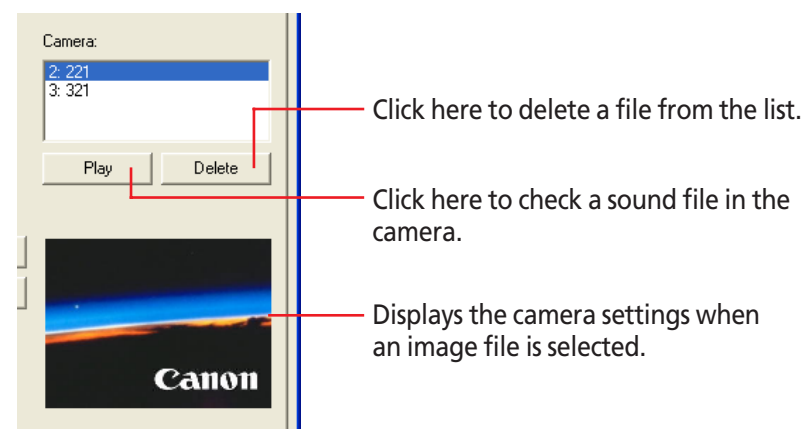

# Setting the My Camera Settings (5/8)

## PROCEDURES




### Saving the Settings to the Computer

In this procedure, opposite to the previous one, you save the My Camera Settings to the computer from the camera.

1. Click the [Setup as a theme] tab in the My Camera window.

To set the My Camera Settings individually, click the [Set individually] tab instead and select the respective settings, such as the start-up sound or image, in the Data Type category.

2. Select the setting you would like to copy from the Camera list.

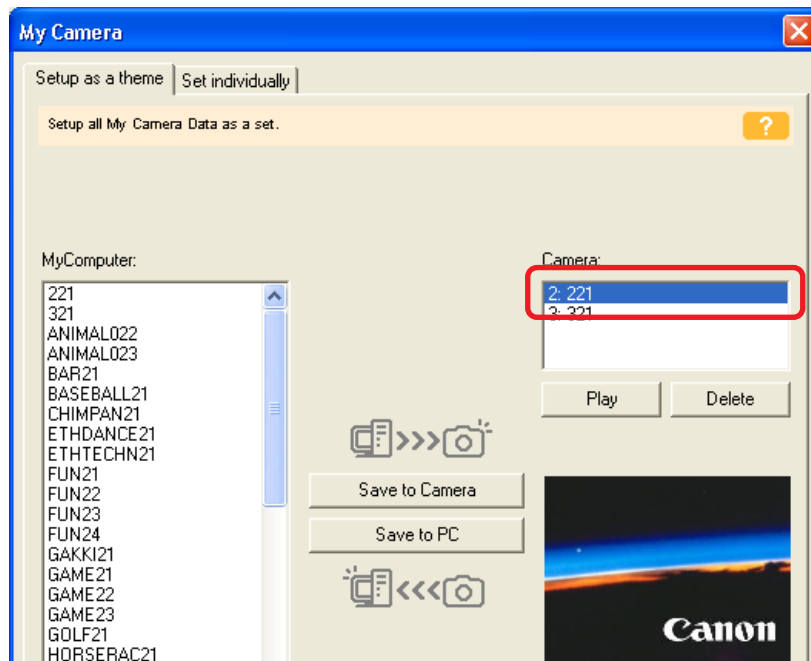

- If you selected the Theme tab in Step 1

The preview image will display in the area to the right and the start-up sound, the shutter sound, the operation sound and the self-timer sound will play in order.

- If you selected the [Set individually] tab and the start-up image in the Data Type category in Step 1

The start-up image will display in the area to the right. If you selected a sound, it will automatically play.

3. Click [Save to PC].

4. Assign a name to the settings file and click [OK].

The settings file will copy to the computer disk. If there is a settings file with the same name, it will be over-written.

Repeat steps 1-4 as required to save the settings files you wish to copy to the computer.

5. Click [Close] to close the My Camera window.

This completes the copying process.

### IMPORTANT

- Do not break the connection while the My Camera settings are being saved to the camera.

# Setting the My Camera Settings (6/8)

## PROCEDURES



### Using Other My Camera Settings

You can obtain or make My Camera Settings files other than those provided with ZoomBrowser EX by the following methods.

#### ■ Using My Camera Maker to Create Settings Files

You can use My Camera Settings files that you create with the supplied program, My Camera Maker. Files created with this program automatically display in the My Camera window. The program features are explained in *"Using My Camera Maker"* in Chapter 6.

#### ■ Using Other Software to Create Settings Files

You can add images or sound files recorded with the camera as My Camera Settings files after processing them with image or sound processing programs other than My Camera Maker. You will have to manually add these files to the My Camera window. The next topic explains the procedures for adding them and some restrictions for creating them.

## PROCEDURES



### Creating and Adding Files as My Camera Settings

This topic explains the requirements for files created as My Camera Settings using image editing and sound processing programs and how to add them to the My Camera window.

#### ■ File Requirements for My Camera Settings

Use the following settings when creating image files as start-up images using an image editing program.

Compression Method: JPEG (Baseline JPEG)  
Data Sampling: 4:2:0 or 4:2:2  
Pixels (w x h): 320 x 240 pixels

Use the following settings when creating sound files using a sound processing program.

Compression Method: WAVE (Monaural)  
Quantifying Bits: 8 bit  
Sampling Frequency: 11.025 kHz or 8.000 kHz

Use the following chart as a guideline for the length of sound files recorded with the camera.

Type	Duration in Seconds	
	11.025 kHz	8.000 kHz
Start-Up Sound	1.0 sec. or less	1.2 sec. or less
Operating Sound	0.3 sec. or less	0.4 sec. or less
Self-Timer Sound	2.0 sec. or less	2.0 sec. or less
Shutter Sound	0.3 sec. or less	0.4 sec. or less

# Setting the My Camera Settings (7/8)


## PROCEDURES




### Adding New Files to the My Camera Settings

1. Create an image file or sound file that will be used as a My Camera Settings file and save it to the computer.
2. Click the [Edit] menu in ZoomBrowser EX's Main Window and select [Manage My Camera].
3. Click the [Set individually] tab in the My Camera window and switch the Data Type.


Click the [Set individually] tab in the My Camera window and switch the Data Type.

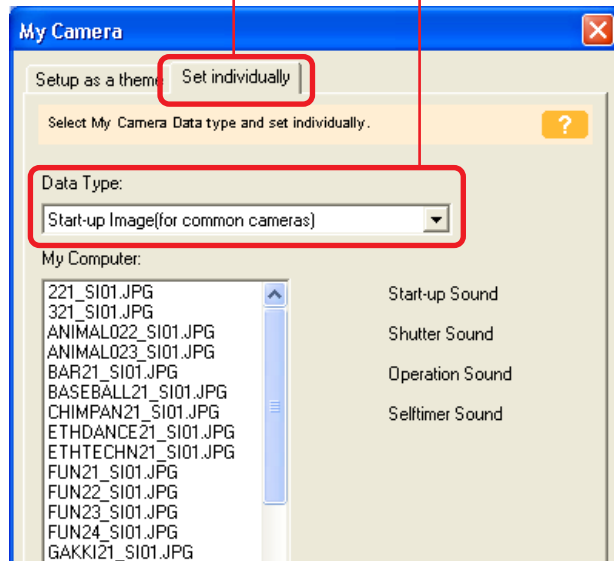

4. Click [Add File].

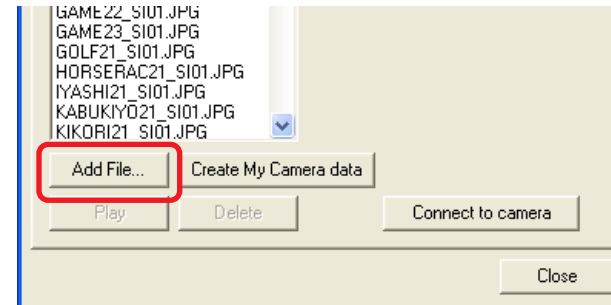


5. In the Open dialog, select the file you created and click [Open].  
The selected file will appear in the My Computer list.

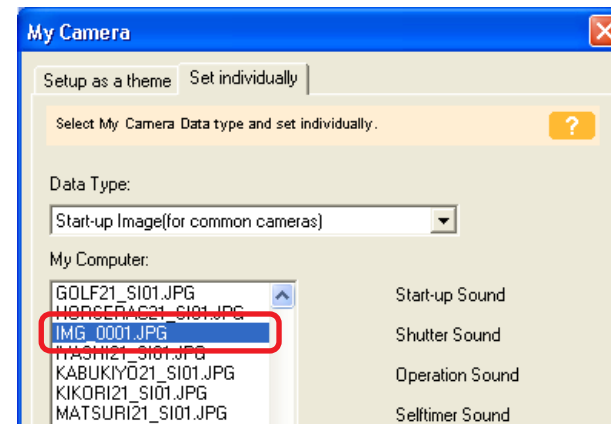

This concludes the process for adding the new settings.

# Setting the My Camera Settings (8/8)

## 6. Connect the camera to the computer with the interface cable and click [Connect to Camera].

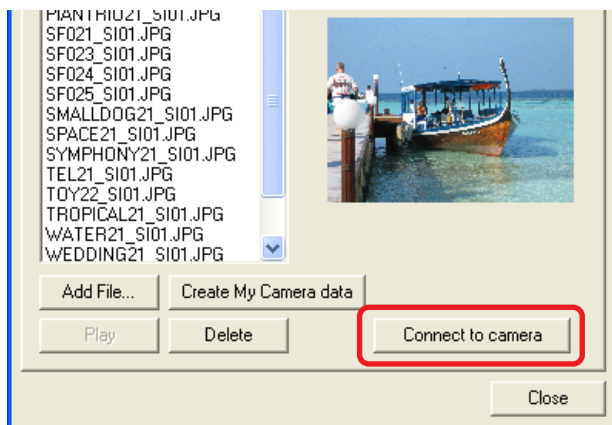

You can save the newly created settings to the camera using the procedures described in the *Saving the My Camera Settings to the Camera* section.

The [Connect to Camera] option cannot be selected when a wireless connection is used. Close the My Camera window, and then select it from the Camera Control Window that appears for a wireless connection.


### REFERENCE

- To delete a settings file, select it and click the [Delete] button beneath the My Computer list.

# Checking and Changing Camera Settings


You can check and change camera settings from the computer.

1. Click the [Set to Camera] tab in the Camera Control Window.
2. Click [Confirms/changes camera settings].

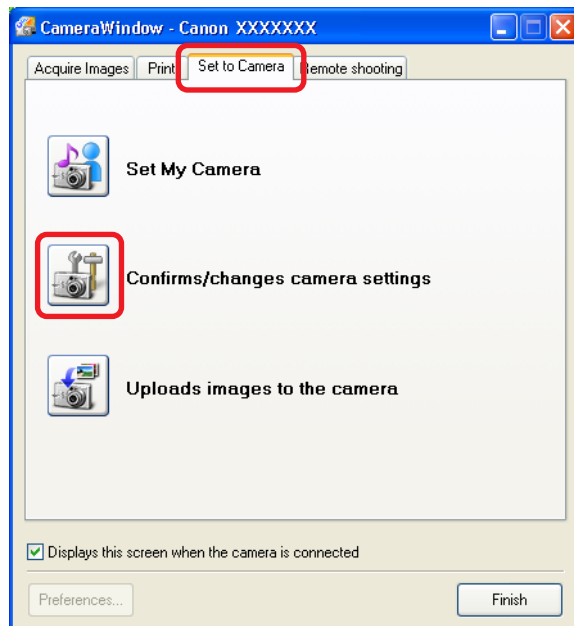

This will open the camera settings window. The settings shown at the right can be adjusted with this window.

Type the name of the owner of the camera here.

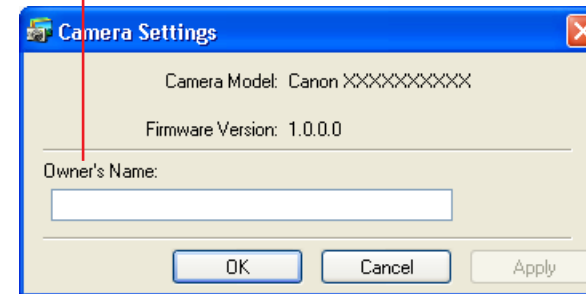

3. After you have checked the camera settings and made necessary changes, click [OK].

## REFERENCE

- If ZoomBrowser EX's Main Window is open, you can display the Camera Control Window by clicking [Acquire & Camera Settings] in the task area, followed by [Connect to Camera].

# Copying Images to the Camera (1/2)


You can copy images (JPEG only) from the computer to the memory card in the camera.

## IMPORTANT

- If you are using a memory card reader, you cannot download images to the memory card.

1. Click the [Set to Camera] tab in the Camera Control Window.

2. Click [Uploads images to the camera].

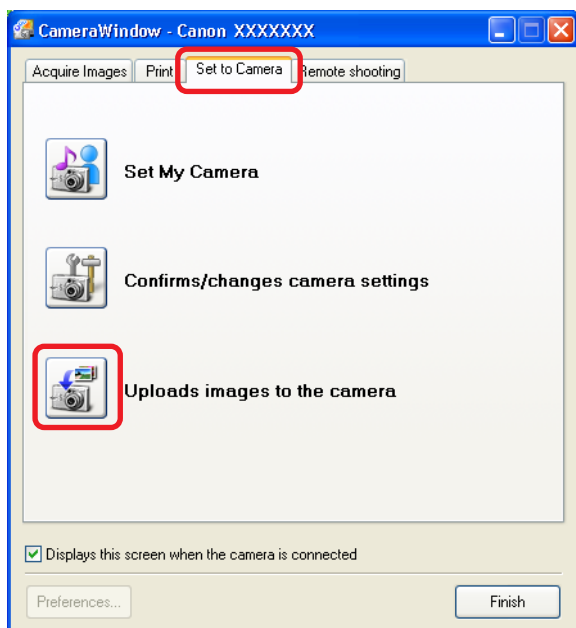

A dialog will appear, allowing you to select image files.


3. Select files to copy and click [Open].

## REFERENCE

- If ZoomBrowser EX's Main Window is open, you can display the Camera Control Window by clicking [Acquire & Camera Settings] in the task area, followed by [Connect to Camera].
- You can also copy more than one image at a time.

4. If a window similar to the following one opens, select an option as required and click [Add].

This will copy the image.

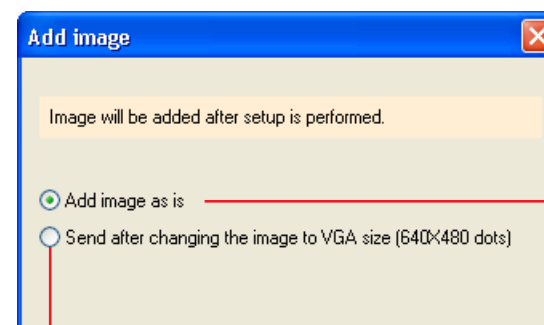

Select this to upload the image to the camera without resizing.

Select this to resize the image before uploading it to the camera.



## Copying Images to the Camera (2/2)

### REFERENCE

- If multiple images have been selected, then the selected resizing option will affect all the selected images.
- You can select the [Add image as is] option only when uploading JPEG images based on the DCF standard. Select [Send after changing the image to VGA size (640X480 dots)] for all other images.
- RAW images and movies cannot be uploaded to the camera.

# Operating the Camera Shutter from the Computer (1/4)

This section explains the procedures for remote shooting, the process of operating the camera shutter remotely from a connected computer.

## IMPORTANT

- See the user guides for your camera to check whether your camera supports the remote shooting function or not.
- On camera models with lens covers, open the lens cover before remote shooting.
- Ensure that you turn off your computer's standby feature before you begin remote shooting. The results cannot be guaranteed if the computer enters the standby mode while remote shooting.
- Except for the shutter button, the camera's buttons and switches, including the zoom, cannot be manually operated while the camera is being remotely controlled.
- The time lag between pushing the shutter button and the release of the shutter is slightly longer for remote shooting compared with the normal mode of operation.
- Depending upon your camera model, a program different from the one shown here may start up. Please refer to the manual for the software supplied with your camera if this occurs.

## REFERENCE

- See the Help menu (it can be opened from the [Help] menu in the remote shooting window) for detailed operating procedures for remote shooting.

## PROCEDURES



## Remote Shooting Procedures

Begin the procedure with the camera connected to the computer and placed in the correct mode for connection.


1. Click the [Remote shooting] tab in the Camera Control Window.
2. Click [Starts Remote Shooting].

## REFERENCE

- When the Main Window is open, you can open the Camera Control Window by clicking [Acquire & Camera Settings], followed by [Connect to Camera].

3. When the Select Folder dialog displays, specify a destination for the recorded image and click [OK].  
The RemoteCapture Task window will open.

4. Click the [Release] button.  
The image will record.

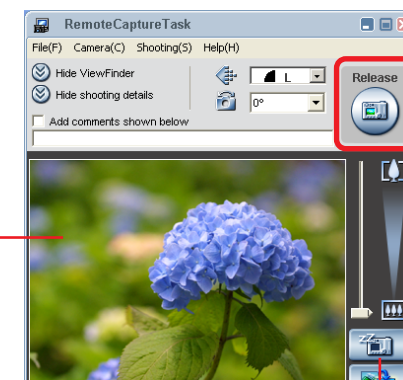

The image captured by the camera displays here.

Switches between showing or hiding the image.

# Operating the Camera Shutter from the Computer (2/4)

EXPLANATION




## Features of the RemoteCapture Task Window

Switches between showing and hiding the viewfinder and the detailed settings sections.

You can add a comment to an image by clicking to place a check mark here and inputting text in the box below.

Selects the image's recording size and compression.

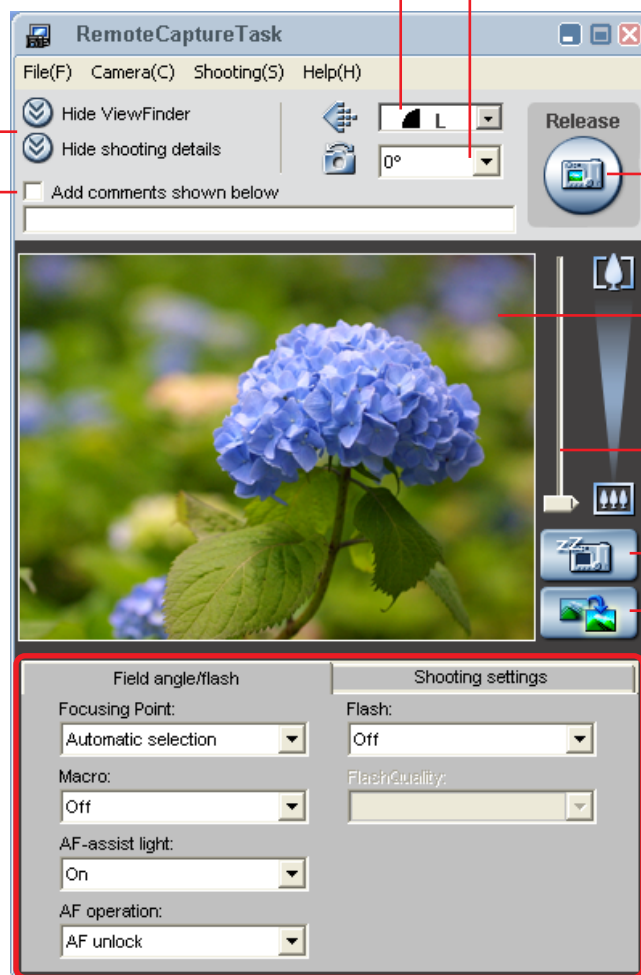

Sets the rotation setting of the image being recorded. This setting cannot be adjusted if the [Auto Rotate] function of your camera's shooting mode is set to [On].

Releases the camera shutter (you can also release it by pressing the camera's shutter button or the space bar on the keyboard).

**Viewfinder**

Sets the camera's zoom.

Turns the viewfinder display on or off.

Refreshes the exposure, focus and white balance settings (these settings remain fixed until this button is clicked).

Sets the shooting settings. It is divided into the "Field angle/flash" tab and the "Shooting settings" tab. (The settings categories vary according to your camera model.)

# Operating the Camera Shutter from the Computer (3/4)


## HINT



## Other Remote Shooting Features

### Interval Timer Shooting

Interval timer shooting is the method of capturing images in which a set number of frames is recorded at set intervals of time.

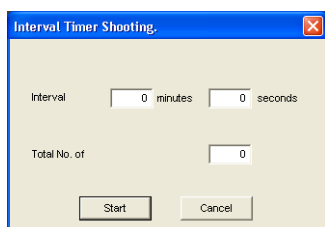


Click the [Shooting] menu in the remote shooting window and select [Interval Timer Shooting]. Click [OK] in the warning message to open the window shown to the left. Set the values and click [Start] to start shooting. The interval may be set to a range from 5 seconds to 60 minutes.

## REFERENCE

- You may not be able to record at the set interval if it is too short for the camera to transfer and save the image data.

### Timer Shooting

Timer shooting is the method by which a single image is recorded after a set number of seconds.

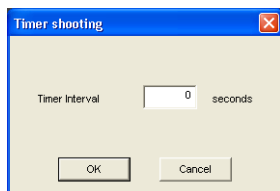

Click the [Shooting] menu in the RemoteCapture Task window and select [Timer Shooting] to open a window like the one shown here. Set the number of seconds for the delay and click [OK]. The timer may be set to a range from 2 seconds to 30 seconds.

### Saving and Recalling Shooting Settings

You can save the current zoom settings and the settings in the "Field angle/flash" and "Shooting settings" tabs by clicking the [File] menu in the RemoteCapture Task window and selecting [Save Shooting Settings].

Later when you wish to recall those settings, click the [File] menu in the RemoteCapture Task window and select [Batch Shooting Settings].

### Displaying the Subject on the Camera's LCD Monitor

You can use the camera's LCD monitor or a television connected to the camera to view the subject while shooting remotely.



Click the [Camera] menu in the RemoteCapture Task window and select [Camera Display Settings] to open a window like the one shown here.

Select [Video Out terminal] or [Camera's LCD monitor] and click [OK].

## REFERENCE

- See the user guides for your camera for information about connecting the camera to a TV.

# Operating the Camera Shutter from the Computer (4/4)


## HINT



### Remote Shooting Default Settings

You can display the default settings for remote shooting by clicking the [File] menu in the RemoteCapture Task window and selecting [Preferences].

### File Settings Tab

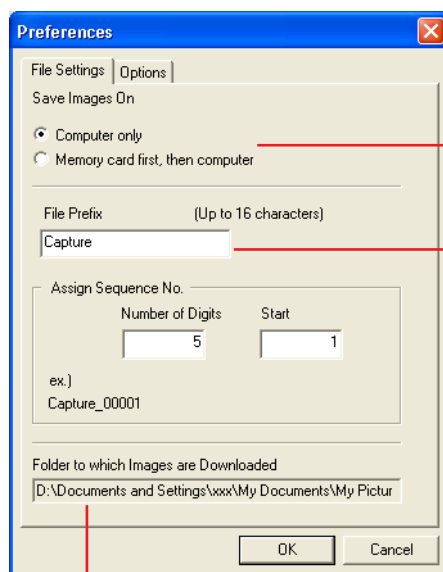

Sets whether images are saved only to the computer, or also to the camera's memory card.


Sets the root file name for saved images.  
For example, if you type "Capture," file names are automatically assigned in ascending order starting from "Capture\_00001.jpg".  
You can also change the number of assigned digits and the starting number.

Folder to which recorded images are saved  
(This is the folder specified when remote shooting was started)

## REFERENCE

- If you click [Computer only] in the Save Images On category, you can record images when the memory card in the camera is full and will not accept more images or when it is not present.

### Options Tab

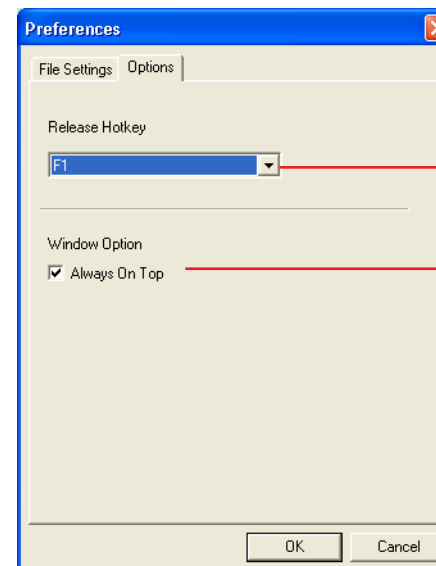

You can release the shutter using the key specified here.

Click to place a check mark here to have the RemoteCapture Task window remain in front at all times.

# Selecting Folders (1/2)



This chapter explains the methods for displaying images with ZoomBrowser EX.

This section explains the methods for using the Folder Area to select folders containing the images you wish to view.

## PROCEDURES




## Selecting Folders

If you click a folder in the Folder Area, the images it contains will display in the Browser Area. Use the  or  button to the left of the folder name to hide or show the folder contents.

### Selected Folder

The images in the selected folder will display. (Images in subfolders within a folder appear in a rectangular frame.)

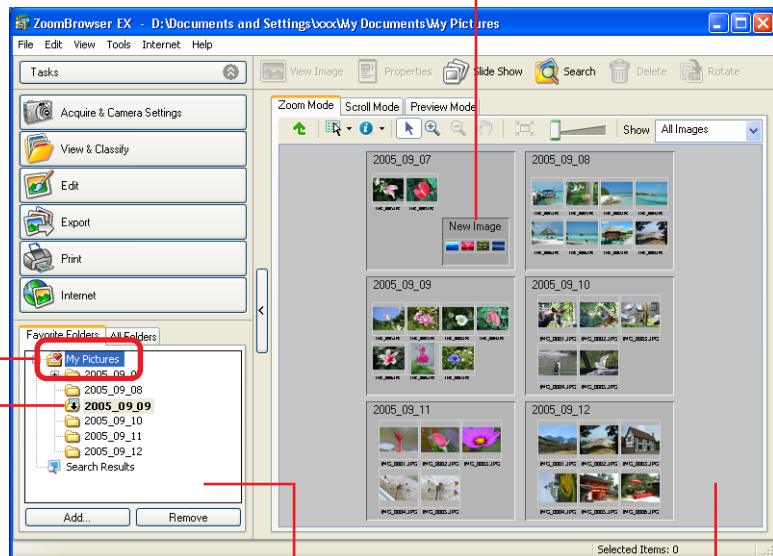

Mark indicating there are newly downloaded images in the folder.

Folder Area


Browser Area

## EXPLANATION




## Favorite Folders and All Folders

Two tabs, entitled Favorite Folders and All Folders, display in the upper portion of the Folder Area.

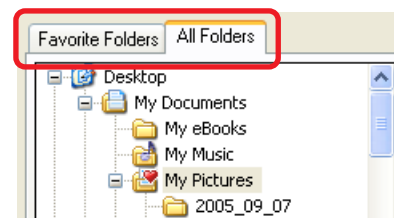


If you select Favorite Folders, the folders that have been already registered as your favorites will display. You will find it convenient to register a folder that you use regularly as a Favorite Folder.

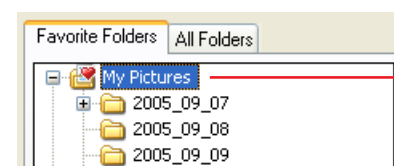

Pre-Registered Folders

If you select All Folders, all the disks that are connected to your computer will display (along with their folders).

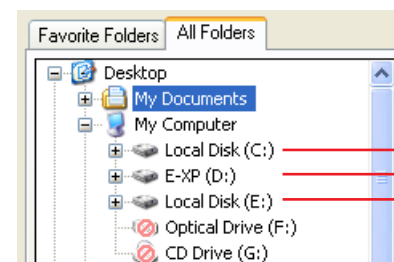

Pre-Registered Folders

# Selecting Folders (2/2)


## PROCEDURES



### Registering a Folder as a Favorite Folder


#### Favorite Folders Tab Selected

Click [Add] at the bottom of the Folder Area, select a folder in the window that opens and click [OK].

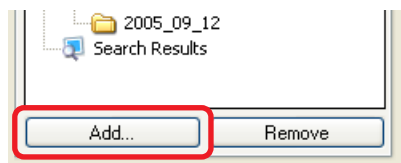


#### All Folders Tab Selected

After you open the folder in the Folder Area that you wish to register, click [Add to Favorites] at the bottom of the Folder Area.

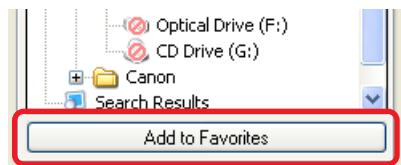

Alternately, you can click the folder and drag and drop it onto the Favorite Folder tab.

## REFERENCE


- A heart symbol  appears on the icon of folders that have been registered as favorites.
- You can also register folders as favorites by clicking the [View] menu and selecting [Add New Favorite Folder].

## PROCEDURES



### Deregistering a Favorite Folder

Select the Favorite Folders tab and the folder you wish to deregister, and click [Remove] at the bottom of the Folder Area.

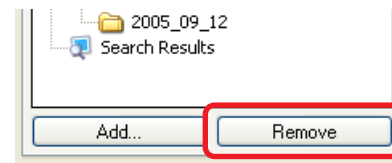



# Changing the Display Mode (1/3)


You can change the display mode in the Browser Area for ease of use.

EXPLANATION



## Three Display Modes

The three display modes for the Browser Area are the Zoom mode, Scroll mode and Preview mode, which can be switched by clicking the tabs at the top of the Browser Area. The Zoom mode is the default mode.

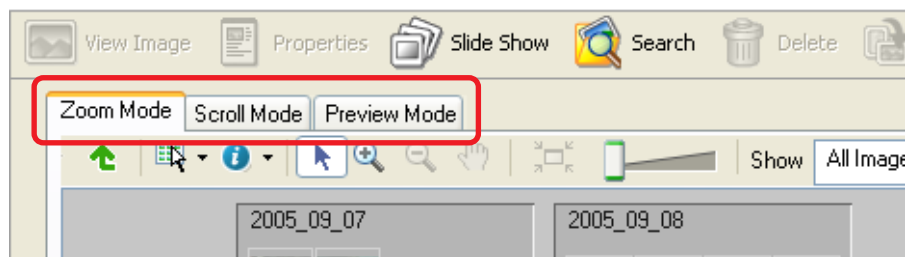


## REFERENCE

- You can also switch between display modes using the View menu.
- Folders display below the Task Area in the Main Window. Select either [Favorite Folders] or [All Folders]. The images in the folder you click will display in whichever mode you select.

## Zoom Mode

Displays all images in folders as thumbnails (tiny versions). Since many images can be shown together, it is a convenient mode for visually searching for an image amongst all the rest.

You can change the zoom level for the entire Browser Area.

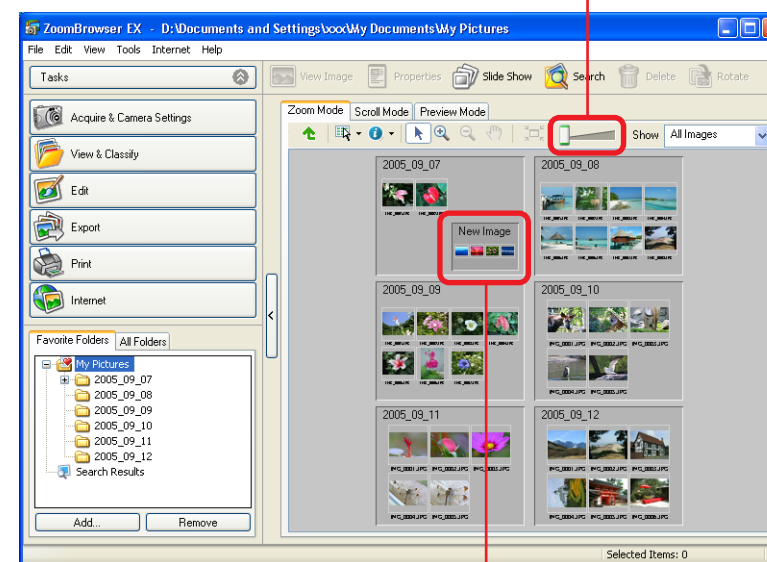

Images within subfolders also display.  
(The rectangular frame indicates a subfolder.)

## REFERENCE

- You can change the zoom speed. The method is explained in "Customizing Preferences (1/2)" in the Appendix.


# Changing the Display Mode (2/3)

## ■ Scroll Mode

This mode is convenient for checking images in several folders simultaneously. If the displayed folder is one or more level deep in the hierarchy, the thumbnails of the images in the folder will display too.

### Example of a Second Level Folder

You can change the thumbnail size.

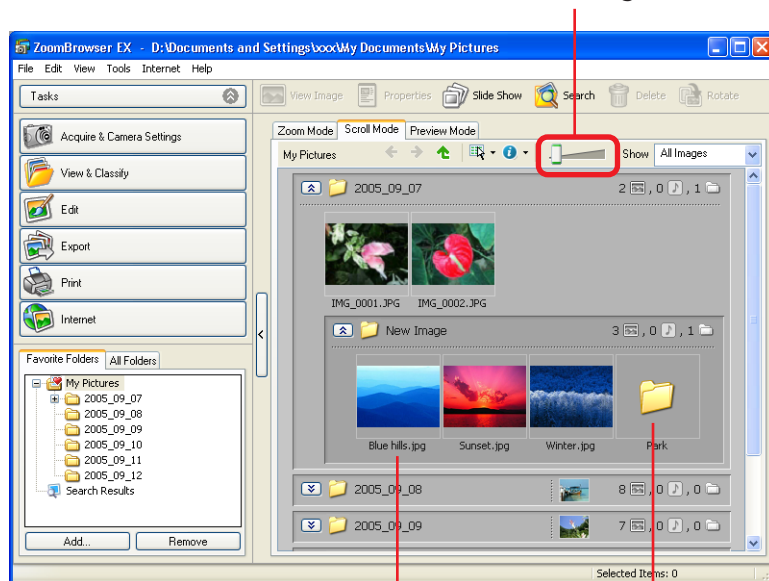


The image thumbnails will display in folders that are up to two levels below the selected folder.


The folder icon shows for folders that are three or more levels below the selected folder.

## Zero Level Folder

The folder is displayed as an icon. You can open it by double-clicking it.

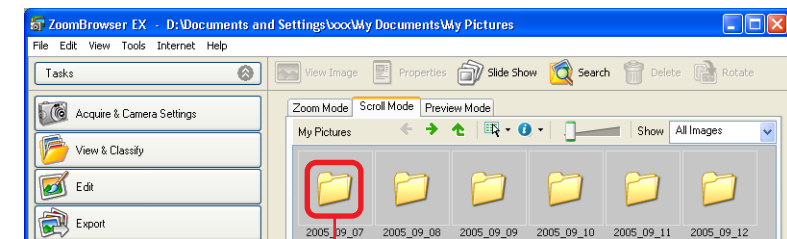

Display the images and subfolders by double-clicking the folder icon.

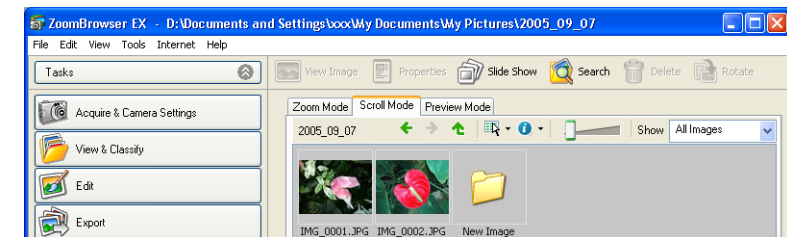


## REFERENCE

- The methods for changing a folder's hierarchical level are explained in "Customizing Preferences (1/2)" in the Appendix.

# Changing the Display Mode (3/3)

## Preview Mode

In this mode, image thumbnails (tiny versions) appear at the bottom of the Browser Area while a larger-scale image of the selected thumbnail and the information panel (which shows the image information) appear in the upper portion. You can advance to other images by clicking the Previous and Next buttons.

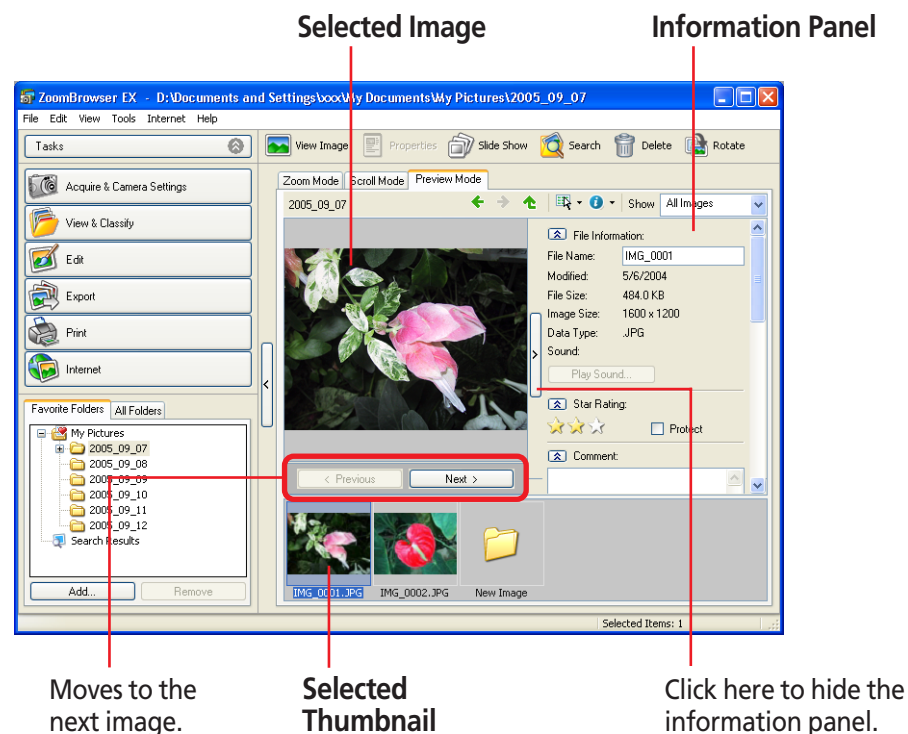



# Changing the Displayed Folder (1/3)


## PROCEDURES



## Opening a Folder Deep in the Hierarchy



### Zoom Mode

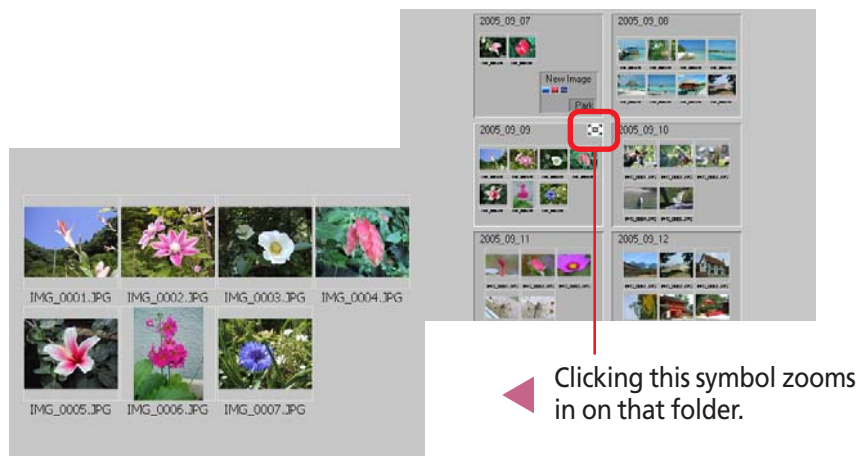When you move the mouse cursor over a folder in the Browser Area, the  appears at the upper right. Clicking the  zooms in that folder. (You can also zoom a folder by double-clicking an area where there is no image.)




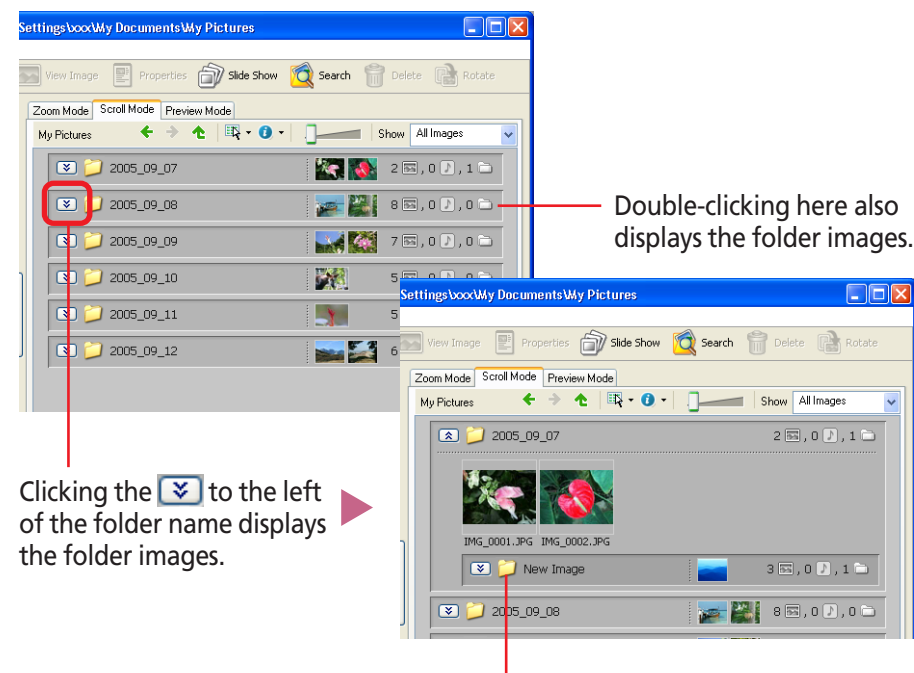
By repeating this step, you can go deeper and deeper into the folder hierarchy.

### REFERENCE

- You can use the  (Back) button to restore the previous window and the  (Forward) button to advance to the next.
- The deeper the folder level, the darker the background color used to indicate a folder frame.

### Scroll Mode

If you click the  to the left of the folder icon in the Browser Area, the images and subfolders in that folder will display.



Clicking the  to the left of the folder name displays the folder images.

Lower Level Folder

By repeating this step, you can go deeper and deeper into the folder hierarchy.


### REFERENCE

- The deeper the folder level, the darker the background color used to indicate a folder frame.

# Changing the Displayed Folder (2/3)

## Preview Mode

At the bottom of the Browsing Area, double-click the icon of a displayed folder to open it and view its images and subfolders.

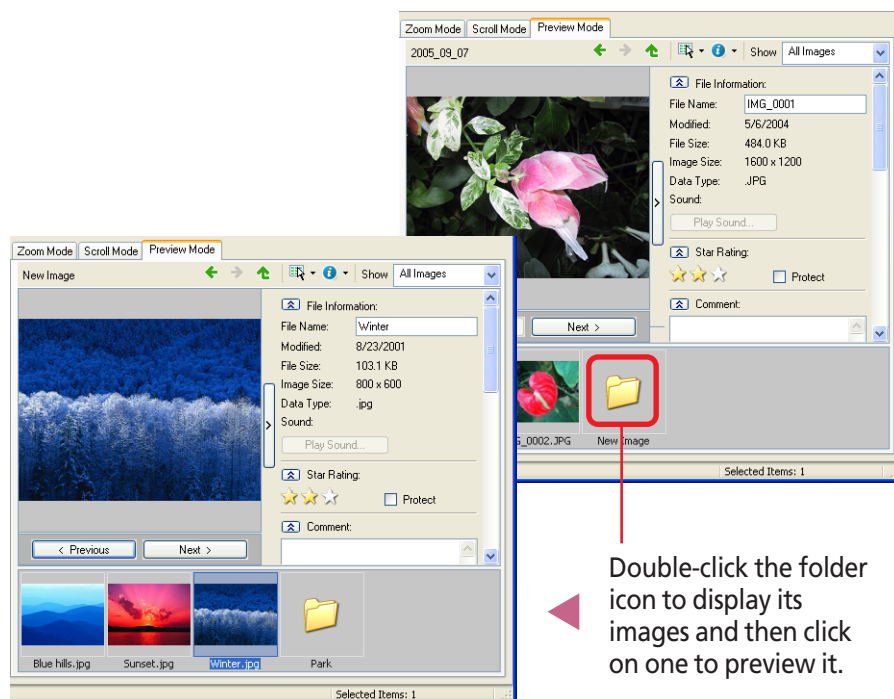

By repeating this step, you can go deeper and deeper into the folder hierarchy.


## PROCEDURES



## Returning to a higher level in the folder hierarchy

When you are deep in the folder hierarchy, you can use the (Up) button to go back to a higher level.

The example below shows the zoom mode, but the procedure is the same for the other display modes.

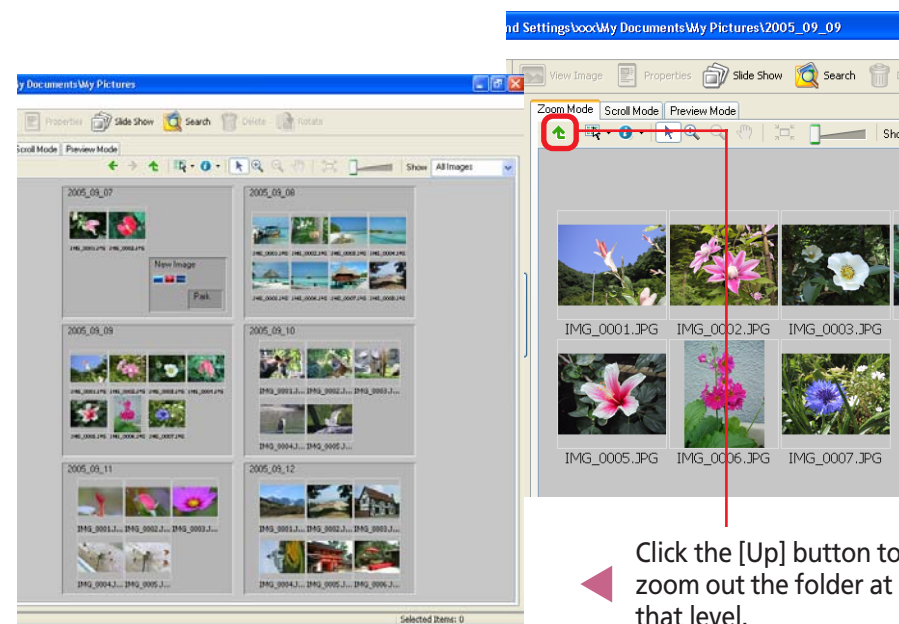

## REFERENCE

- By using the (Back) or (Forward) button, you can move to the folder displayed immediately before, or to the folder displayed before the (Up) button was clicked.



# Changing the Displayed Folder (3/3)


## HINT




### In Zoom mode, you can do this

There are more convenient ways to use the Zoom mode.


#### ■ Zooming in by skipping levels

If you click the  symbol on a folder displayed in the Browser Area, you can skip over the intervening folders and zoom right in on it.

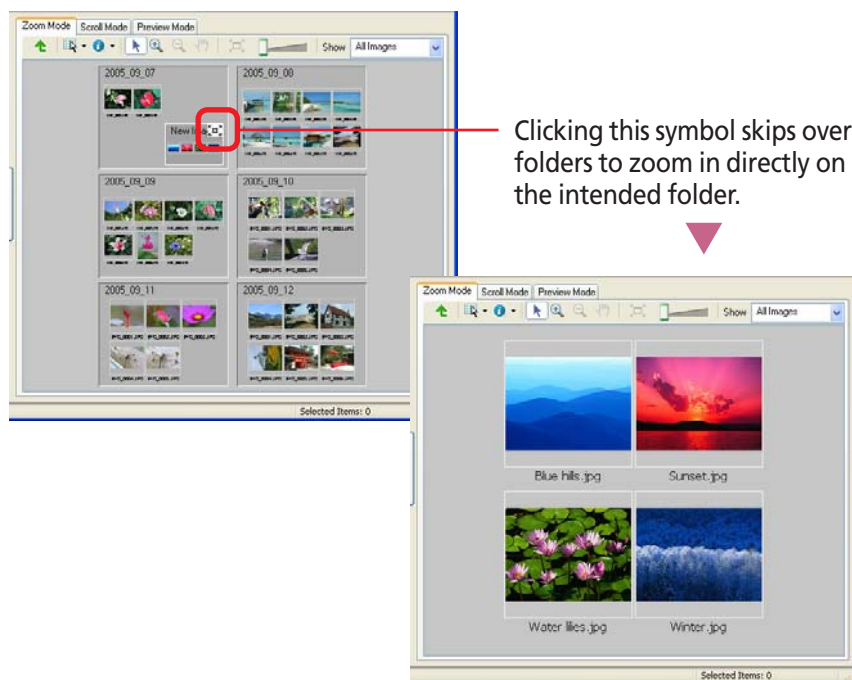

#### ■ Right-Clicking to Zoom In or Out

Right-click on any clear area in the Browsing Area to display a menu like that below. Select the respective [Zoom In to Folder] or [Zoom Out of Folder] option from this menu.

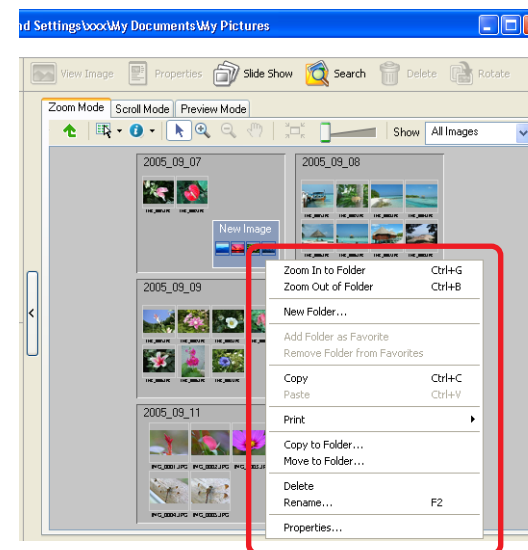

## REFERENCE

- You can get the same result by using the [View] menu. Click a folder. Then, on the [View] menu, click [Zoom In to Folder] or [Zoom Out of Folder].

# Changing the Main Window Display Mode (1/4)

This section explains the methods for filtering images assigned a special Star Rating and for displaying information other than the file name with a thumbnail.


## PROCEDURES



### Filtering Thumbnails by Star Ratings

The Star Rating is a three-level ranking that can be assigned to images. You can limit the images displayed in the Browser Area to only those assigned a Star Rating.

You use the Display Control Panel menu to display only star rated images.

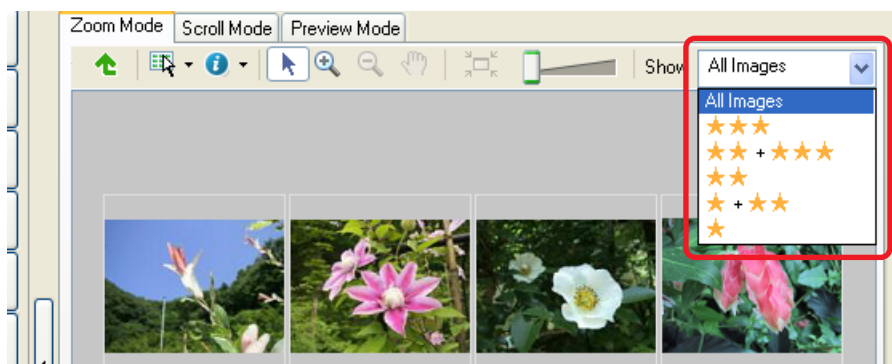

## REFERENCE

- See "Setting Star Ratings" in Chapter 5 for the Star Rating settings procedures.


## PROCEDURES



### Setting the Information Shown with Thumbnails

You can specify the image information shown beneath thumbnails.

Click the (Show Information) menu in the Display Control Panel to open the submenu and place a check mark beside the information category you would like displayed.

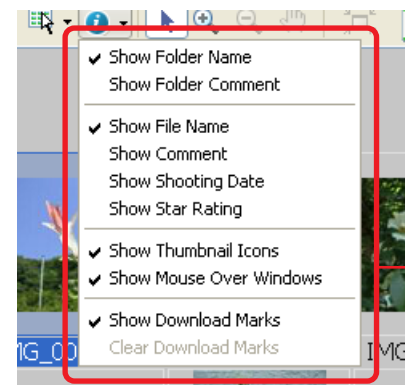

Place a check mark beside the desired information category.

Example with a check mark placed beside the File Name, Shooting Date and Star Rating categories.



## REFERENCE

- You can also specify the image information for display by clicking the [View] menu, opening the [Show Information] submenu and placing a check mark beside the desired category.



# Changing the Main Window Display Mode (2/4)


## PROCEDURES



### Sorting Thumbnails

You can set the criteria by which thumbnails are ordered.

Click the [View] menu, open the [Sort by] submenu and select a sorting criterion.

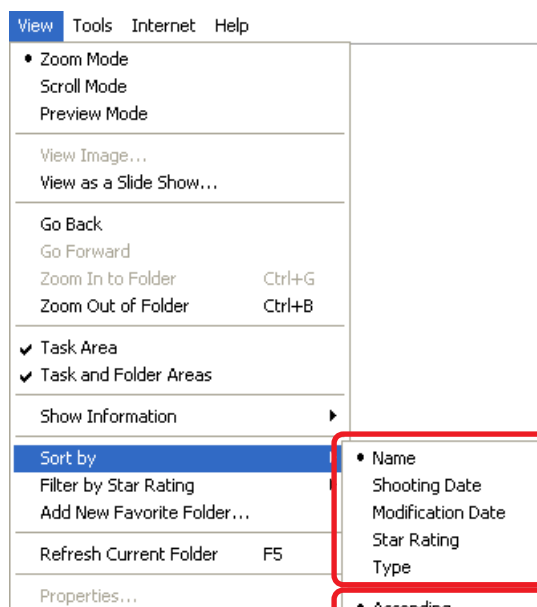

Place a check mark beside the sorting criterion.



You can also sort by ascending or descending order.

## PROCEDURES



### Changing the Thumbnail Display Size (Scroll Mode Only)

In the Scroll mode, you can change the thumbnail display size by moving the slider above the image either left or right.

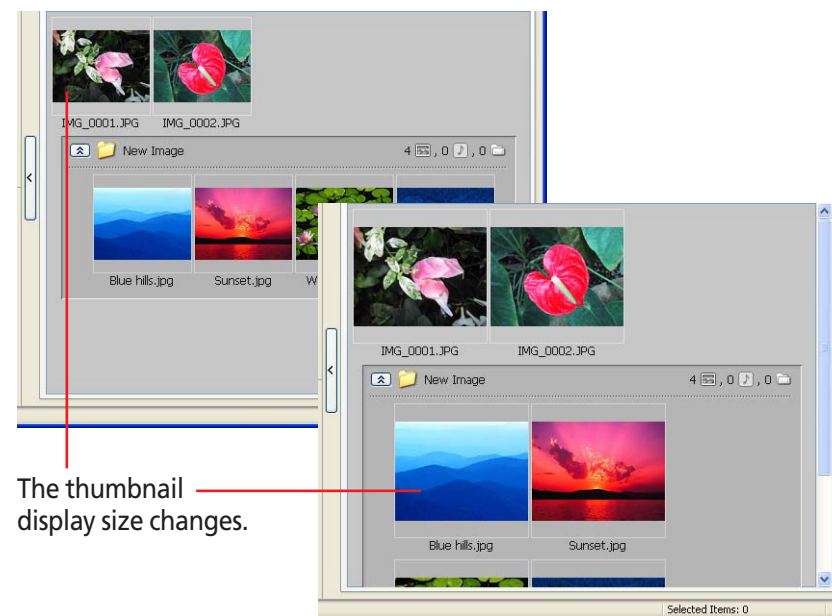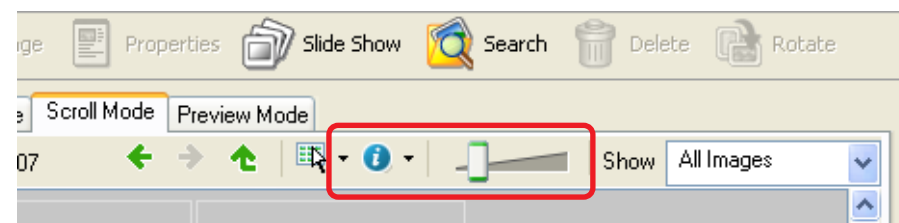

The thumbnail display size changes.

# Changing the Main Window Display Mode (3/4)


## PROCEDURES





## Changing the Display Magnification (Zoom Mode Only)

### ■ Using the Display Size Slider

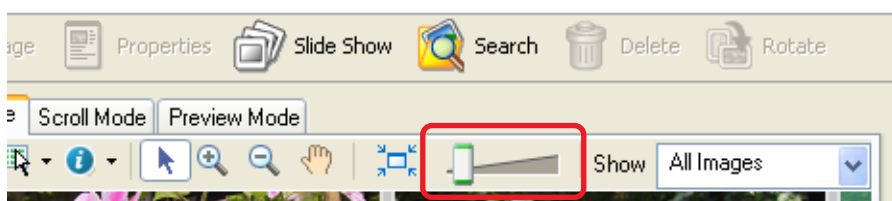In the zoom mode, you can change the display magnification for the entire Browser Area by moving the slider above the image either left or right.




### ■ Using the Zoom In/Zoom Out Buttons

If you click  (Zoom In) on the Display Control Panel, the mouse pointer appears with a plus (+) symbol at its center. If you click on the Browser Area in this state, the display zooms in (magnified display), centered on the clicked area. Similarly, if you click  (Zoom Out) and perform the same actions, the display will zoom out (reduced display).


## REFERENCE

- When the display magnification level is high, a Navigator window such as the one at the right appears. The area enclosed by the red marks indicates the area of the image shown in the Browser Area.

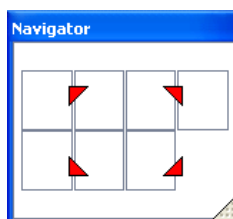


### ■ Changing the Display Position

After clicking the [Pan] button, you can change the portion of the Browser Area displayed by clicking in the Browser Area and dragging the mouse cursor.

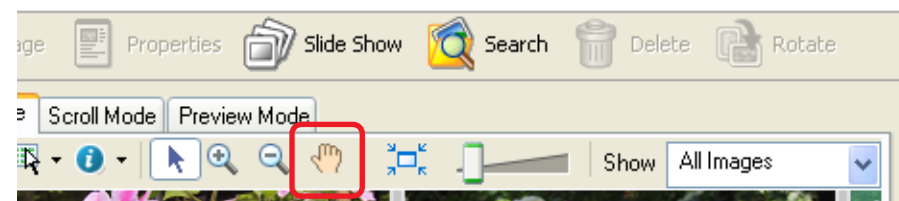

You can also change it by moving the red symbols in the Navigator or by clicking somewhere other than the red symbols.

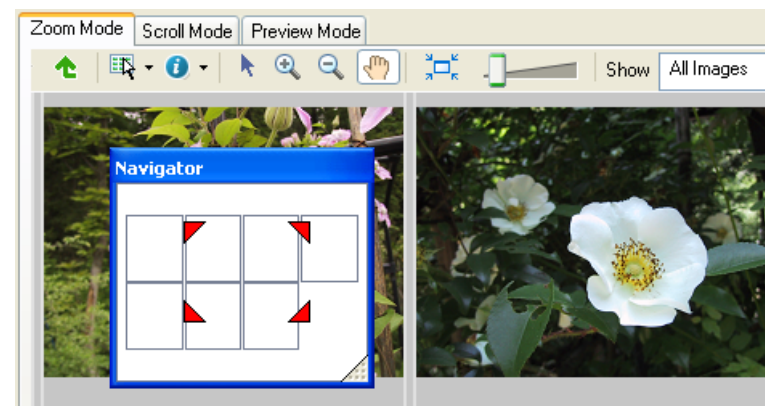

# Changing the Main Window Display Mode (4/4)

## PROCEDURES




### Changing the Task Area and Folder Area Display Modes

You can hide the Task Area and Folder Area to make the Browser Area larger.

#### ■ Hiding the Task Area and Folder Area

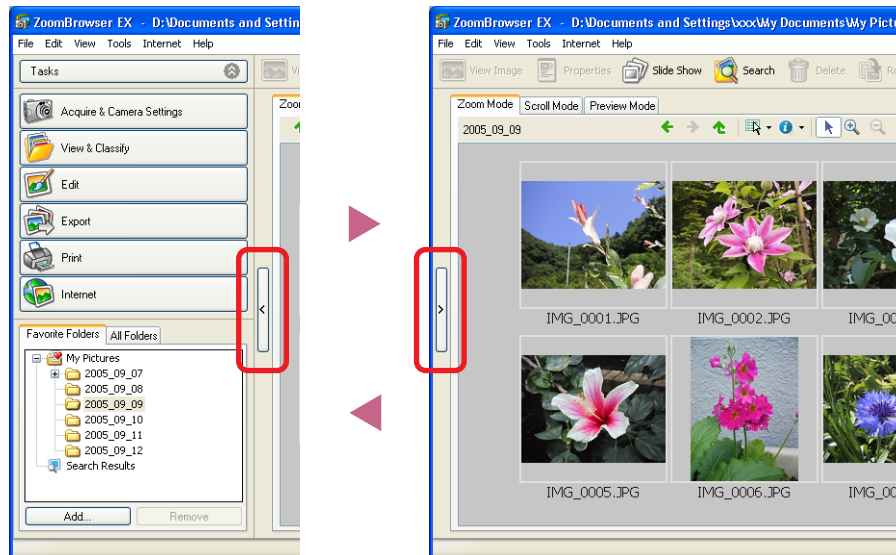

Clicking the [ < ] on the left of the Browser Area hides the Task Area and Folder Area and widens the Browser Area. To return to the original display mode, click [ > ].





## REFERENCE

- You can also hide the Task Area and Folder Area by clicking the [View] menu, selecting [Task and Folder Areas] and removing the check mark from beside the appropriate option.

#### ■ Hiding the Task Area

Clicking the  button at the upper right of the Task Area, hides the Task Area and widens the Folder Area. To return to the original display mode, click the  button.

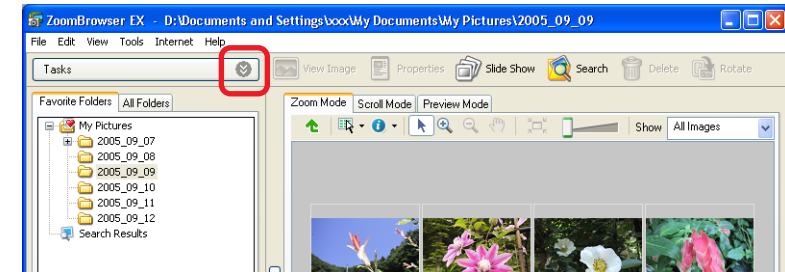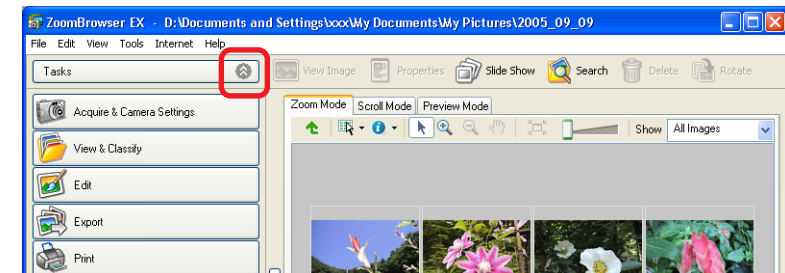

## REFERENCE

- You can also hide the Task Area by clicking the [View] menu, selecting [Task Area] and removing the check mark before its name.

# Checking Images in a Pop-Up Window


You can check images by positioning the mouse pointer over a thumbnail or folder to display a pop-up window. You can confirm that you have the right image when many thumbnails are displayed in the Browser Area.

## PROCEDURES



### Checking Thumbnails

When you position the mouse pointer over a thumbnail, an enlarged thumbnail and its file name display.

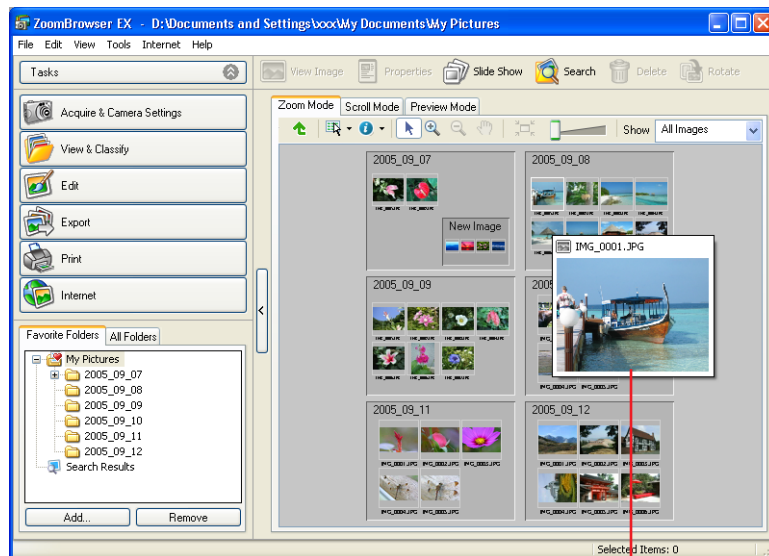


Pop-Up Window

## PROCEDURES



### Checking Folders

When you position the mouse pointer over a folder, the thumbnails of the first four images in the folder display. The folder name also displays in the pop-up window.

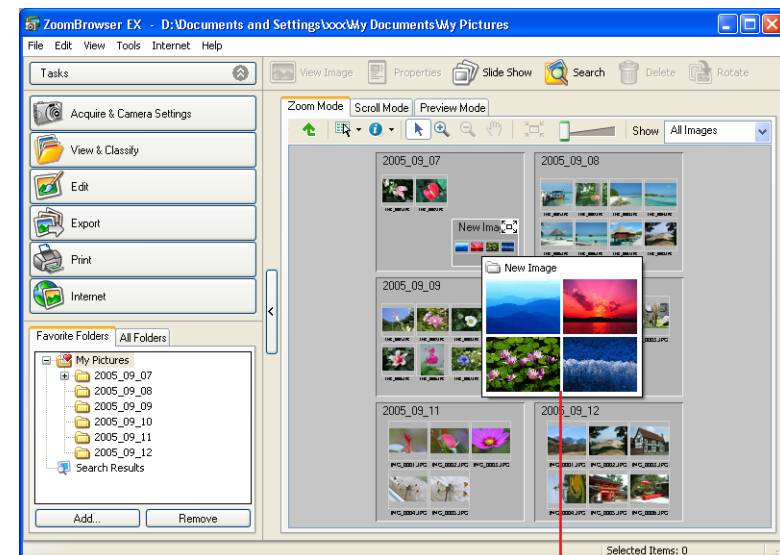

Pop-Up Window

## REFERENCE

- You can also hide the pop-up window by clearing the check mark in the (Show Information) menu from the [Show Mouse Over Windows] option.



# Opening Images


This procedure involves opening the Viewer Window from the Browser Area to open images.

## PROCEDURES




### How to open an image

Double-click the image that you want to open in the Browser Area to open it in the Viewer Window.

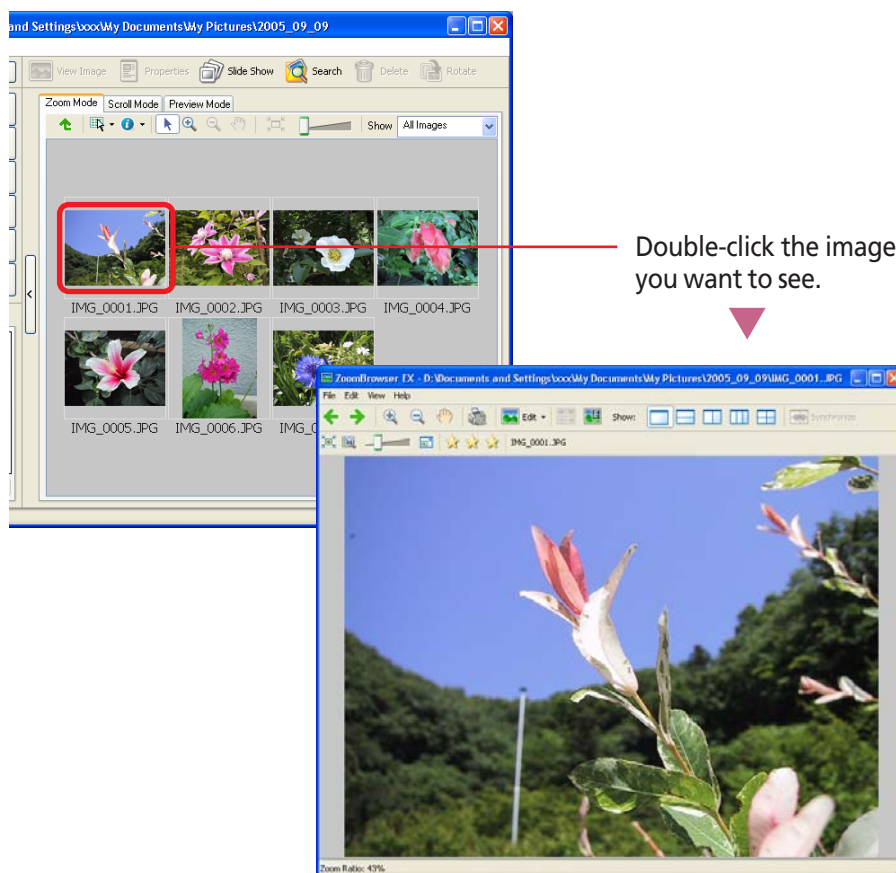

Double-click the image you want to see.

## REFERENCE

- Select an image to open in the Browser Area and then click (View Image) or the [View] menu and select [View Image]. 

## PROCEDURES




### Opening multiple images

You can select multiple images by pressing and holding the [Ctrl] key while clicking on successive images. You can also select a series of adjacent images by pressing and holding the [Shift] key while clicking on the first and last images. Once you have selected multiple images, you can open all of them at once by clicking  (View Image).

## REFERENCE

- The Display Control Panel menu is convenient to use if you intend to select all the images or deselect images.

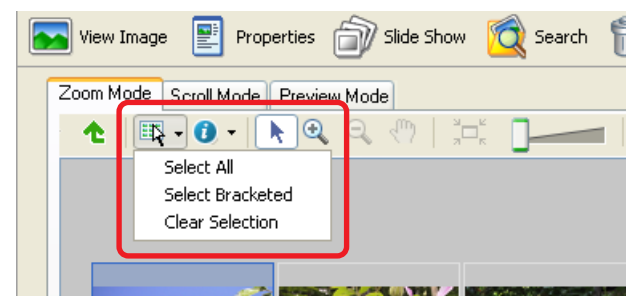

# Using the Viewer Window (1/5)


This section explains how to use the Viewer Window.

## PROCEDURES



### Opening the Previous or Next Image

You can display the image ahead or behind the displayed image by clicking the Previous or Next button in the Viewer Window.

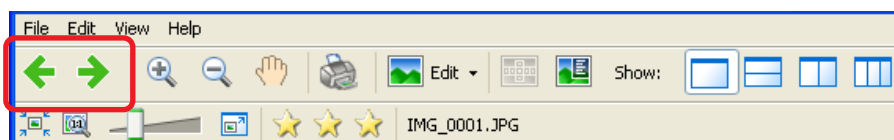


## REFERENCE


- If you select multiple images and display them in the Viewer Window, you can click the Previous or Next button to move the selection between images. If you select one image and display it in the Viewer Window, you can switch to other images within the same folder by clicking these buttons.

## PROCEDURES




### Changing the Display Magnification

You can change the display magnification by moving the slider above the image either left or right. To match the display size to the Viewer Window size, click  (Fit to Window).

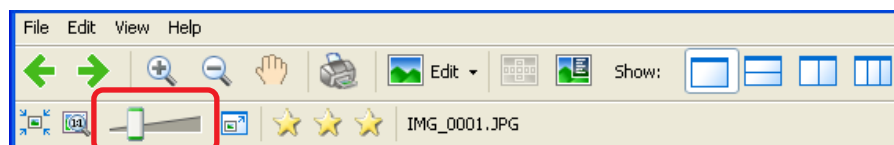

## REFERENCE

- When the display magnification level is high, a Navigator window such as the one at the right appears. The area enclosed by the red marks indicates the area of the image shown in the Browser Area. You can change the area displayed in the Viewer window by moving the red symbols or by clicking anywhere but on the red symbols.

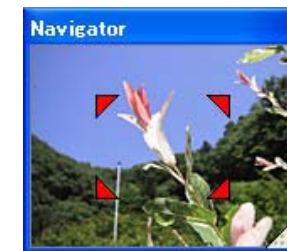


## PROCEDURES



### Using the Full Screen Display

You can display an image at the full screen size by clicking the [Show Image Full Screen] button in the Viewer Window. To restore the standard display, click the image or press any key on the keyboard.

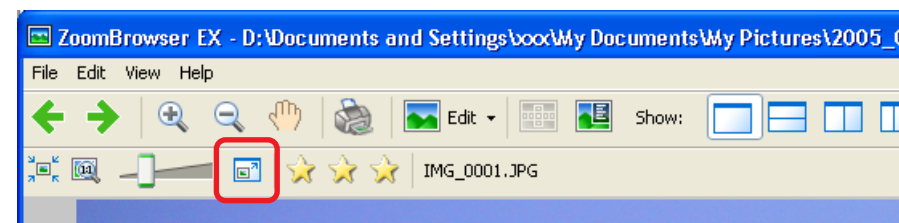

## REFERENCE

- You can also switch to the full screen display by double-clicking the image display area in the Viewer Window, or by clicking the [View] menu and selecting [Full screen].

# Using the Viewer Window (2/5)

## PROCEDURES




### Displaying Multiple Images

You can display and compare two to four images at once in the Viewer Window by clicking the [Split Screen] button. Use this feature to compare images of the same subject shot with different settings or from different angles.



Example of a 4-Image Display

Currently selected image.

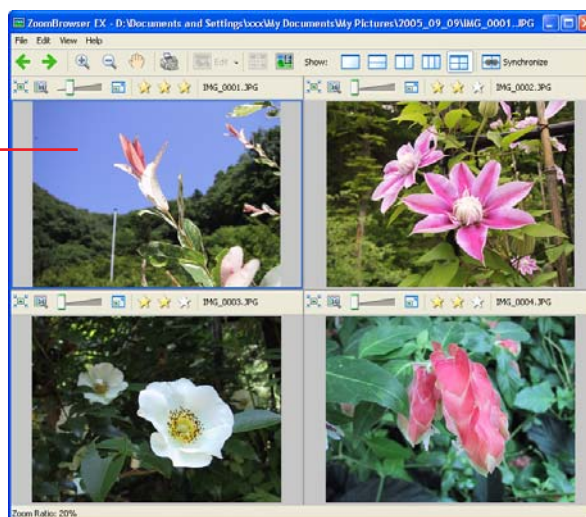


When multiple images are displayed in the Viewer Window, clicking the Back and Next buttons replaces all the images with the next set of images ahead or behind.

## PROCEDURES



### Synchronizing Multiple Images

When multiple images are displayed in the Viewer Window, clicking [Synchronize] sets the display magnification and position on the image to the same for all images.

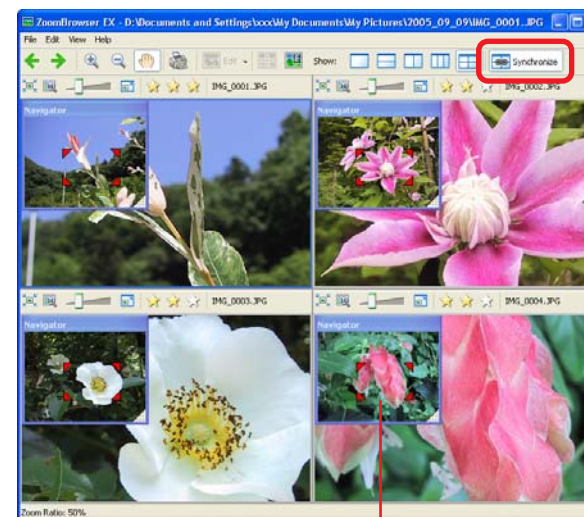

Synchronizes the display magnification and display position.



# Using the Viewer Window (3/5)


## PROCEDURES



### Displaying Shooting Information for Images

The shooting information for images displays when you click the [Show Shooting Information] button.

Shooting Information

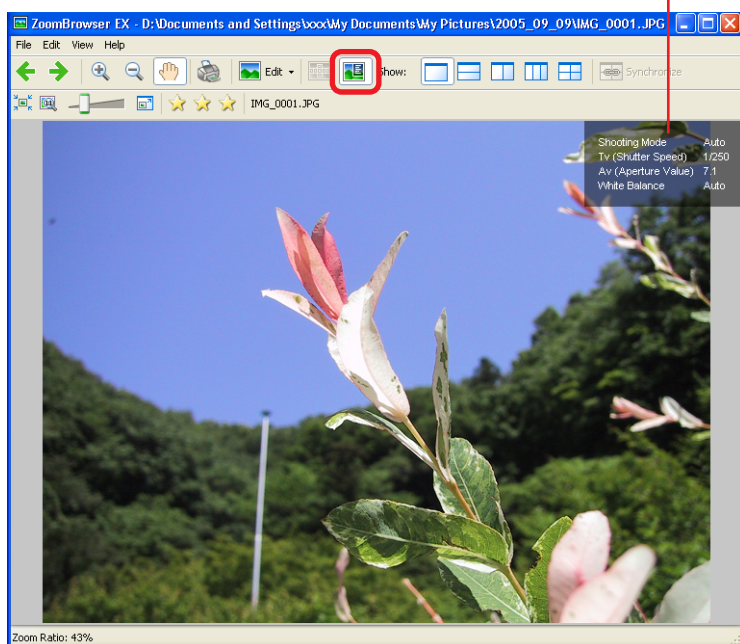


## PROCEDURES



### Displaying the Autofocus Frame

When you click the [Show Auto Focus Points] button, an autofocus frame showing the focus position at the time of shooting will appear.

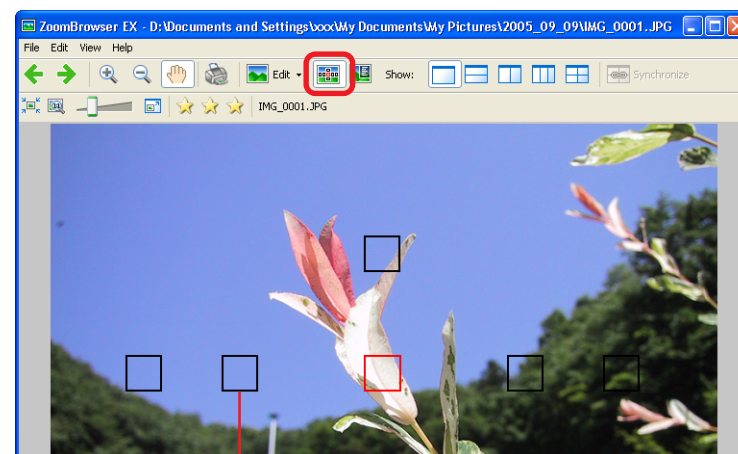

Autofocus Frame

## IMPORTANT

- Please see the guide for the software bundled with your camera to see whether your camera supports the display of the autofocus frame.

## REFERENCE

- You can also display the position of the autofocus frame by clicking the [View] menu and selecting [Show Auto Focus Points].


# Using the Viewer Window (4/5)

## PROCEDURES



### Converting and Displaying RAW Images

RAW images display in the Viewer Window like standard images, but not using the full RAW image data. An easily displayed version is used. Click the [Display Original Image] to convert the original RAW data and display it in the Viewer Window.

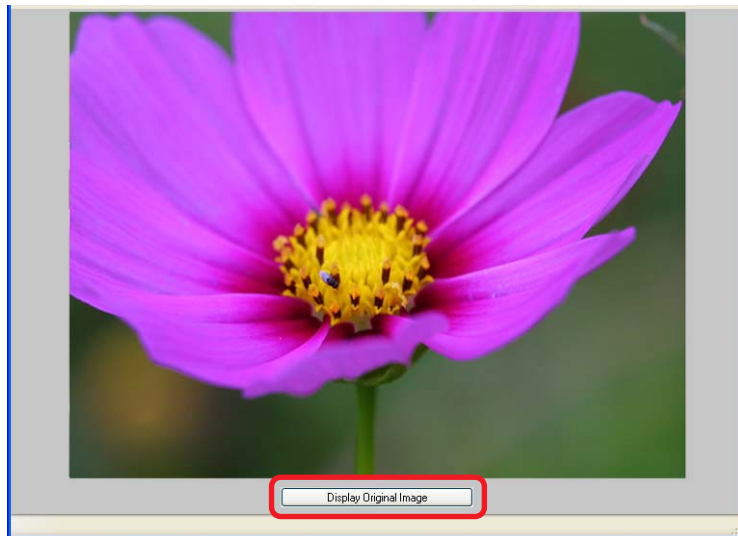

## REFERENCE


- RAW images cannot be edited or saved in the Viewer Window. See "Converting RAW Images" in Chapter 6 regarding editing and saving RAW images.

## PROCEDURES



### Playing Movies

Movie control buttons appear at the window's bottom left when you display a movie in the Viewer Window. Use these buttons to start/stop movies. With Windows XP, you can also extract still images from movies and save them as image files.

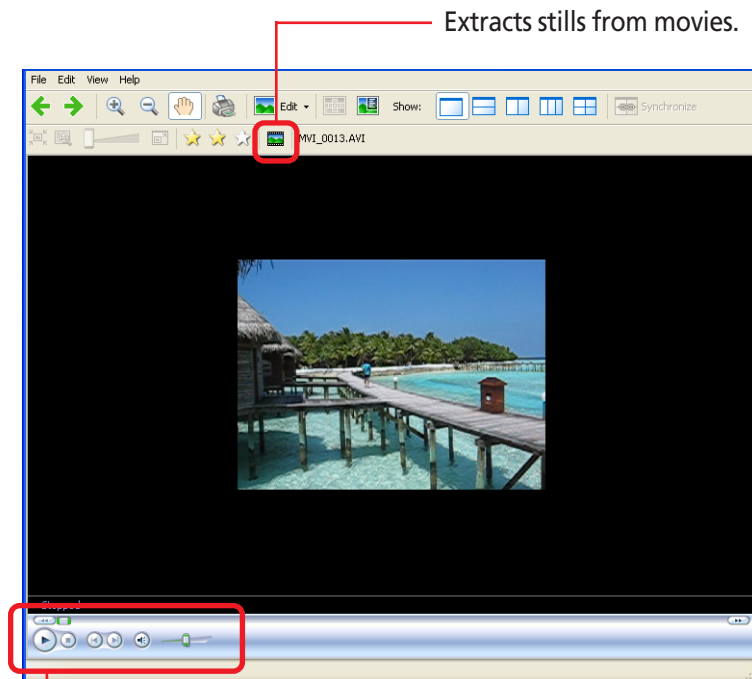


# Using the Viewer Window (5/5)

## PROCEDURES



### Playing Sound Files

When you select a sound file recorded with the camera's Sound Recorder feature in the Viewer Window, the sound file control buttons will appear at the bottom left of the window. You can use these buttons to play and stop sound files.

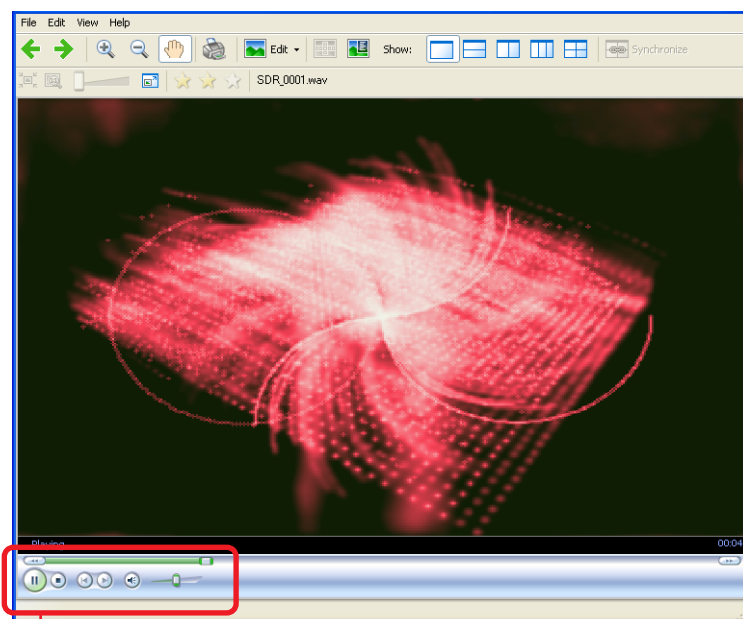


Buttons for controlling sound files.

## PROCEDURES



### Printing Displayed Images


You can print the displayed image by clicking the [Print] button. See *"One Photo Per Page"* in Chapter 2 for printing instructions.

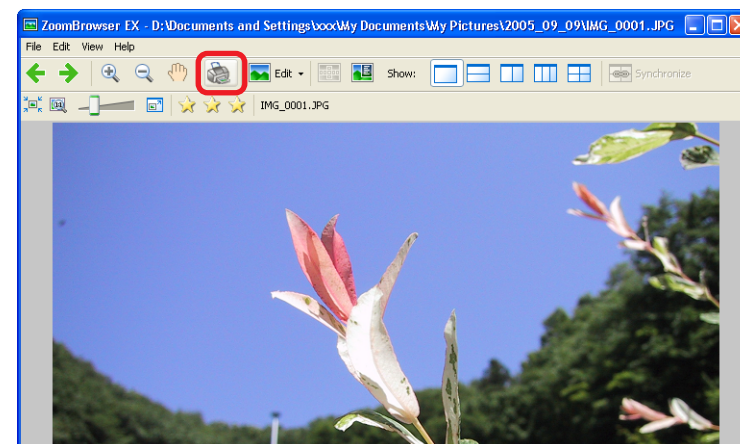

## PROCEDURES



### Closing the Viewer Window

Click  to close the Viewer window, or click the [File] menu and select [Close Viewer].

## REFERENCE

- See *"Editing Images"* in Chapter 6 for information on the Viewer Window's editing function.

# Selecting Images

This chapter explains the features in ZoomBrowser EX for managing images.


In this section we reintroduce the methods for selecting images in the Browser Area as one of the basic image management procedures.

## PROCEDURES



### Selecting a Single Image

Click on an image to select it. The background color of the selected image(s) will change to blue.

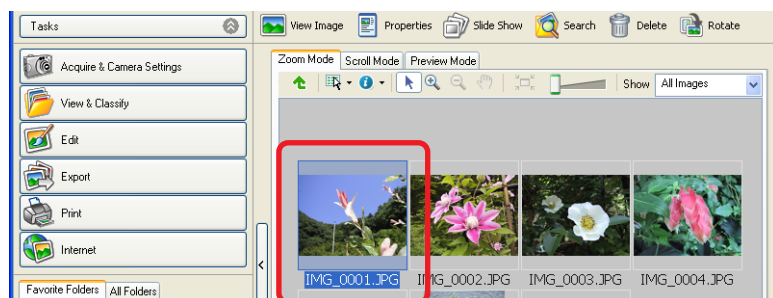

## REFERENCE

- To deselect an image, press and hold the [Ctrl] key while clicking again on the selected image.

## PROCEDURES



 
### Selecting Multiple Images

You can select multiple images by pressing and holding the [Ctrl] key while you click on successive images. You can also select a series of adjacent images by pressing and holding the [Shift] key while clicking on the first and last images.


## PROCEDURES



### Selecting All the Images

You can select all the images in a folder at once by clicking  (Advanced Select) on the Display Control Panel and selecting [Select All] from the menu.

You can also click the [Edit] menu and choose [Select All].

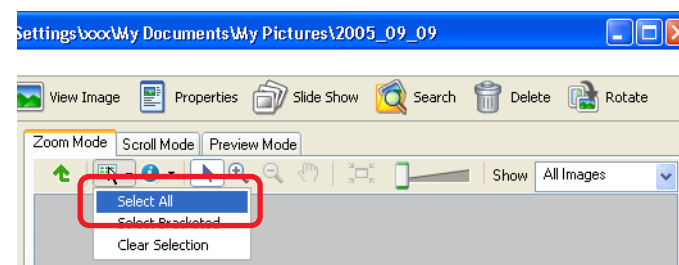

## PROCEDURES



### Deselecting All Images

Clicking  in the Display Control Panel and selecting [Clear Selection] from the menu deselects all the images. Or you can click the [Edit] menu and select [Clear Selection].

## REFERENCE

- You can change the image selection method to the Toggle Selection method. See the "Selection Tab" section in "Customizing Preferences (2/2)" in the Appendix for instructions on changing the selection method.



# Setting Star Ratings (1/2)

This section explains the procedures for setting Star Ratings used in image searches and to display subsets of images.

## EXPLANATION



### What is a Star Rating?


You can assign one of three ratings to an image. When a camera image is downloaded to the computer it is assigned a two-star ☆☆ rating.

## PROCEDURES



### Setting the Star Rating

To set a rating for an image, set the Browser Area to Preview mode, select the image, place a check mark beside [Star Rating] in the information panel and select a rating.

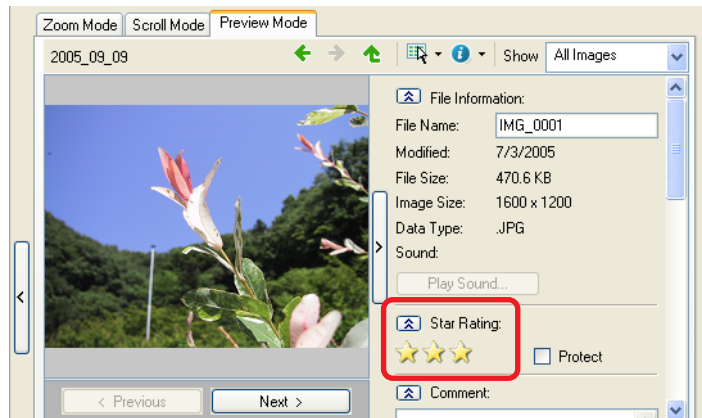



## Other Settings Methods for Star Ratings

### Menu Method

Select the image in the Browser Area, click the [Edit] menu and select [Change Star Rating] in the submenu, followed by your ratings choice.

### Properties Window Method


Select the image in the Browser Area and click  (Properties). Set the Star Rating in the Properties window that displays.

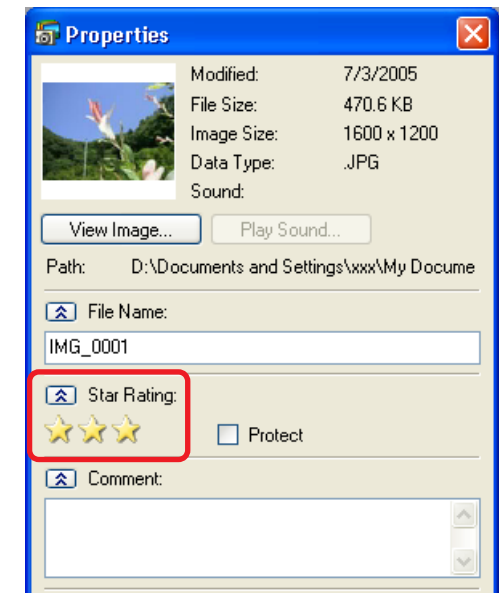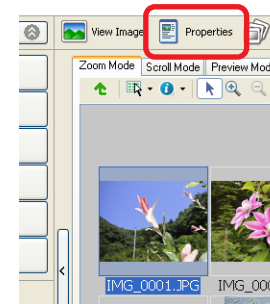

# Setting Star Ratings (2/2)

## Viewer Window Method

Display the image in the Viewer Window and select a Star Rating.

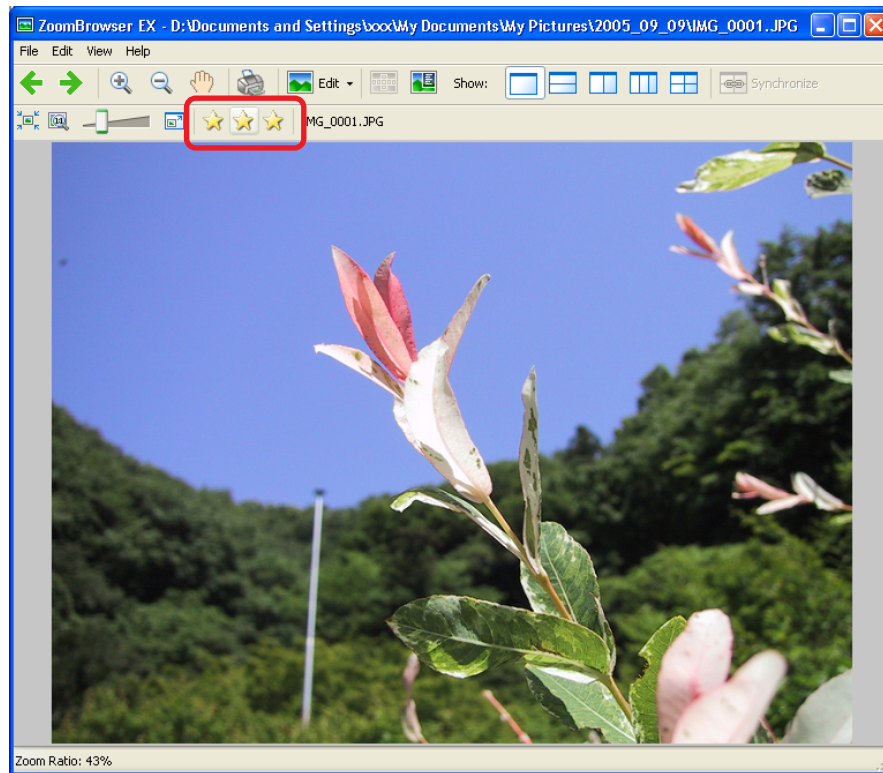

## Slide Show Method

While a slide show is in play, click the ★ symbol at the window's bottom right to set the Star Rating for the displayed image.



# Assigning Keywords (1/2)

This section explains the procedures for assigning keywords to images for searches.

## EXPLANATION



### What is a Keyword?


A keyword is information used to perform searches on images. Select a keyword that matches the image content from the keywords in categories such as People, Places, Events or Others. For example, if you have an image from a family holiday to the ocean, you might assign keywords such as Family in the People category, or Beach in the Places category or Holiday in the Events category.

## PROCEDURES




### Assigning Keywords

1. Set the Browser Area to the Preview mode and select an image.
2. Click [View/Modify Keywords] in the information display panel.

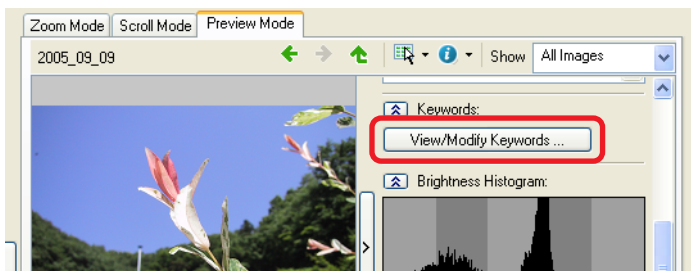

The View/Modify Keywords window will display.

3. Place a check mark beside appropriate words in the various categories, such as People, Places or Events, and click [OK].

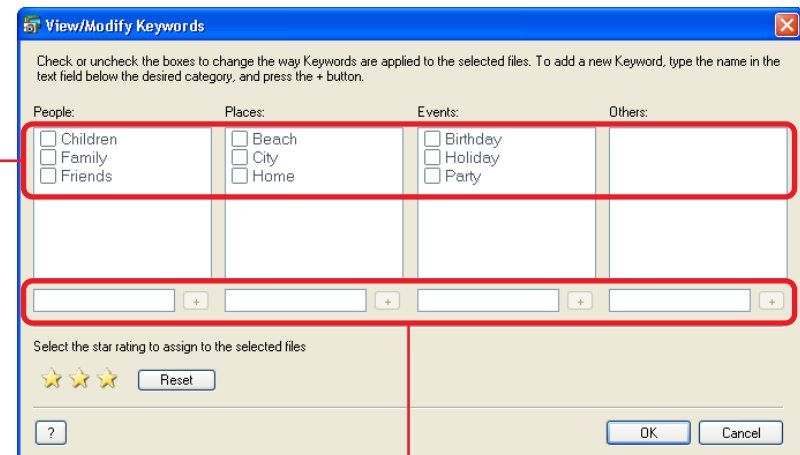

Place a check mark beside appropriate keywords.

To add a new keyword, type it in the box and click [+].



# Assigning Keywords (2/2)

## HINT




### Other Ways to Assign Keywords

#### ■ Menu Method

Select an image in the Browser Area, click the [Tools] menu and select [View/Modify Keywords].

#### ■ Properties Window Method


Select an image in the Browser Area and click  (Properties). In the Properties window, click [View/Modify Keywords] and assign keywords.

## PROCEDURES



### Managing Keywords

1. Click the [Tools] menu and select [Manage Keywords]. The Manage Keywords window will open.
2. Add, delete or restore keywords.  
You can use the following features in this window.

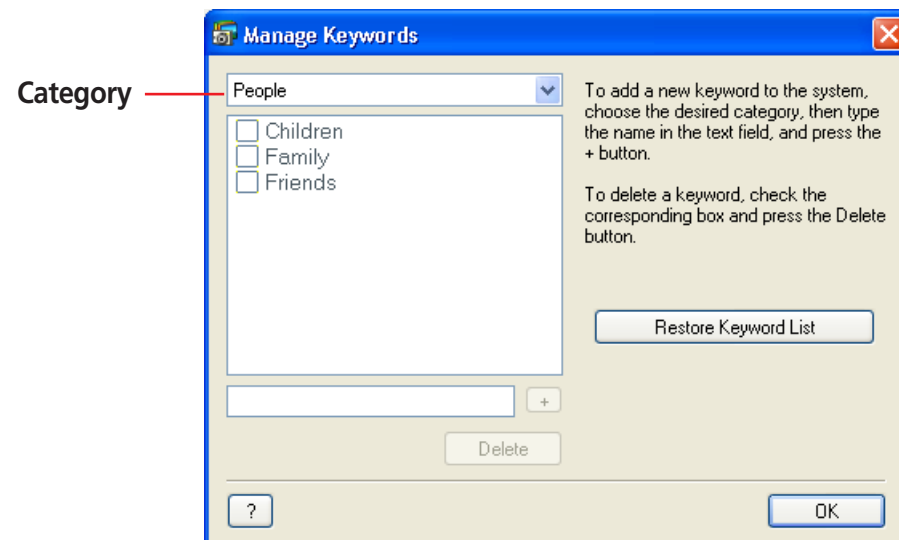

#### ■ Add Keywords

Select a category from the list box, type a new keyword into the text box at the bottom of the list and click [+].

#### ■ Delete Keywords

Select a category from the list box, place a check mark beside the keyword and click [Delete].

#### ■ Restore Keyword List


This function restores the keyword list based on the keywords assigned to images. This is convenient if you deleted a keyword that was used in the past.

# Classifying Images

You can classify selected images into folders by the shooting dates.

1. Click [View & Classify] in the Main Window, followed by [Classify into Folder].
2. Confirm that [1. Select Images] is selected, and select the images to classify in the Browser Area.

3. Click [2. Specify Classification Settings] and set the classification method.
4. Click [3. Finish].  
The program will start classifying the images.

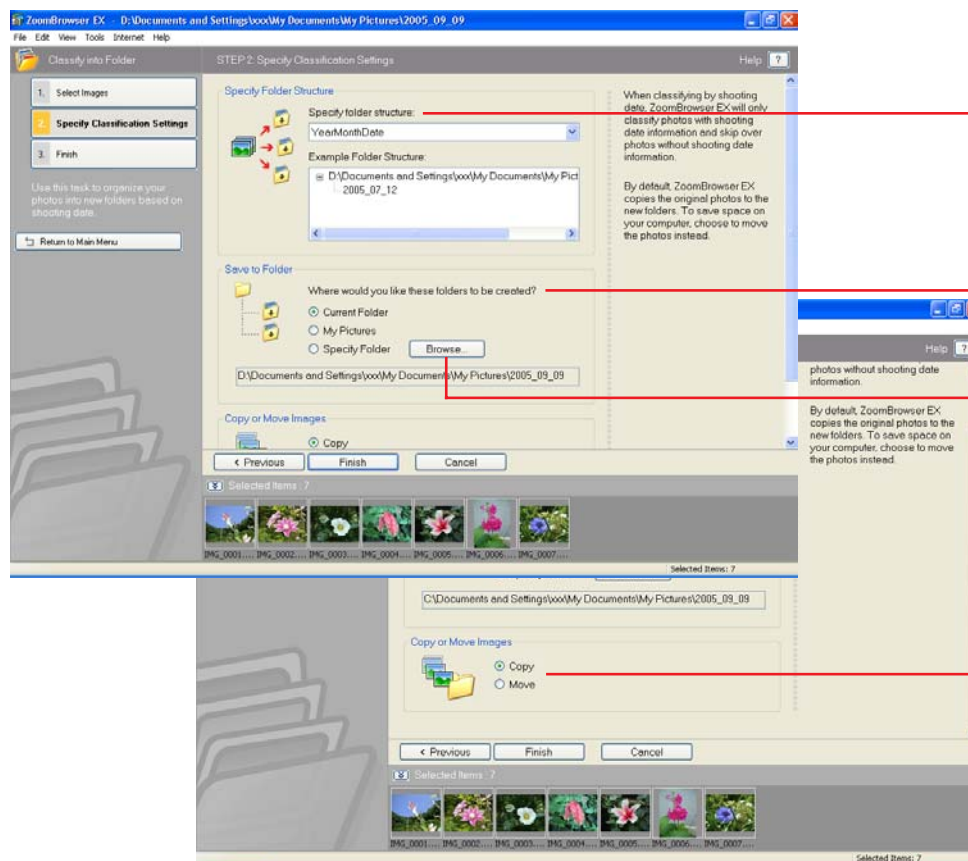

Select the classification format (folder structure).

Select the destination folder.

Sample of an actual folder name that will be created.

Select [Copy] to retain the original file or [Move] to shift it to the new location.

# Renaming Images (1/2)

This section explains the procedures for changing an image name (image file name).

## IMPORTANT

- Renaming an image in ZoomBrowser EX renames the actual file on your PC.

## REFERENCE

- Because an extension (indicating the type of the file) is automatically assigned, do not include an extension in the name. (In the file named [xxx.JPG], for example, the [.JPG] portion is called the file name extension.)


### PROCEDURES



## Using the Rename Function


- Select an image, click the [File] menu and select [Rename].

① Click an image to rename.

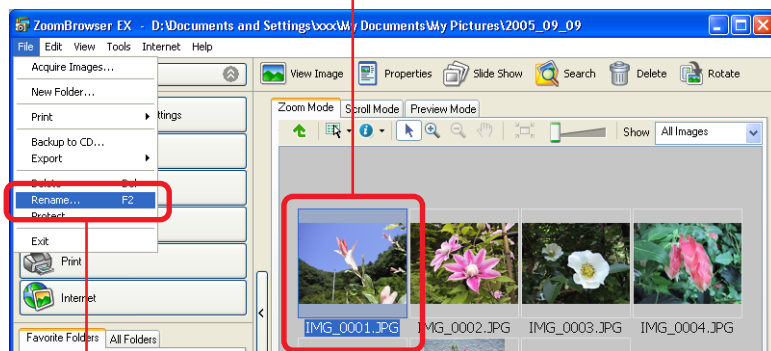

② Click [Rename].

A dialog similar to that below will appear.

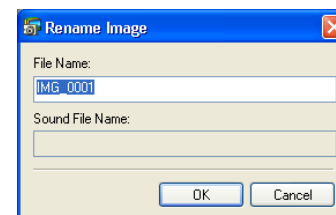

2.

Type a new name and click [OK].

The name will change.


You can also rename a sound that is attached to an image.

### PROCEDURES



## Using the Preview Mode

If you select an image in the Browser Area in Preview mode, you can also change its name in the information panel.

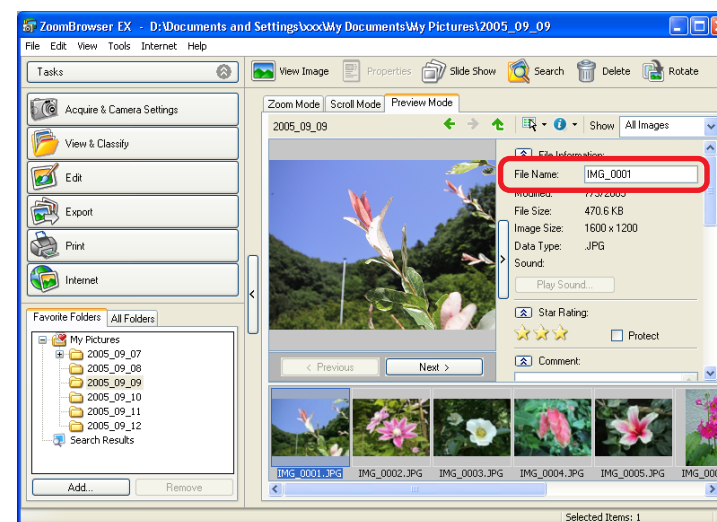

# Renaming Images (2/2)


## PROCEDURES



### Changing Multiple Image File Names

You can rename multiple image files at once.

1. Click [View & Classify] in the Main Window, followed by [Rename Multiple Files].
2. Confirm that [1. Select Images] is selected, and select multiple images in the Browser Area for renaming.
3. Click [2. Specify Rename Settings] and set the renaming method.

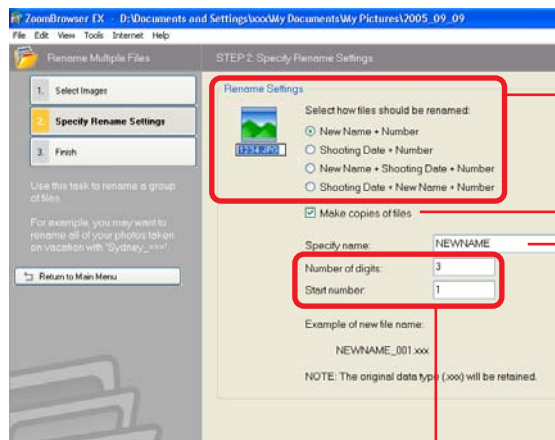

Select a name type.

Place a check mark here if you wish a file with the new name to be created separately from the original file.

Type the text in the "new name" spot for the type above.

Set the number of digits and the starting number for the number portion of the type selected above.


4. Click [3. Finish].  
The program will start renaming the images.

## PROCEDURES



### Renaming Folders

1. Select a folder, click the [File] menu and select [Rename].
2. Input a new name and click [OK].  
The name will change.  
If you select a folder in the Browser Area in Preview mode, you can also change its name in the information panel.

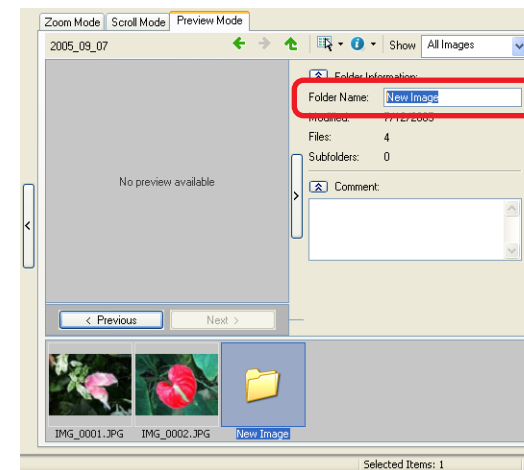

# Searching Images (1/2)


You can search images using such criteria as Star Ratings, revision dates, shooting dates, comments or keywords.

## REFERENCE

- For information about Star Rating settings, see “Setting Star Ratings” and for information about keyword settings, see “Assigning Keywords” in this chapter.

1. Click [View & Classify] in the Main Window, followed by [Search].
2. Confirm that [1. Select Search Region] is selected, and select a folder in the Browser Area.  
To search all images and folders in the Browser Area, click in the Display Control Panel and select [Select All] from the menu.
3. Click [2. Specify Search Conditions] and set the conditions.

Sets whether images are searched according to all the parameters or just one.

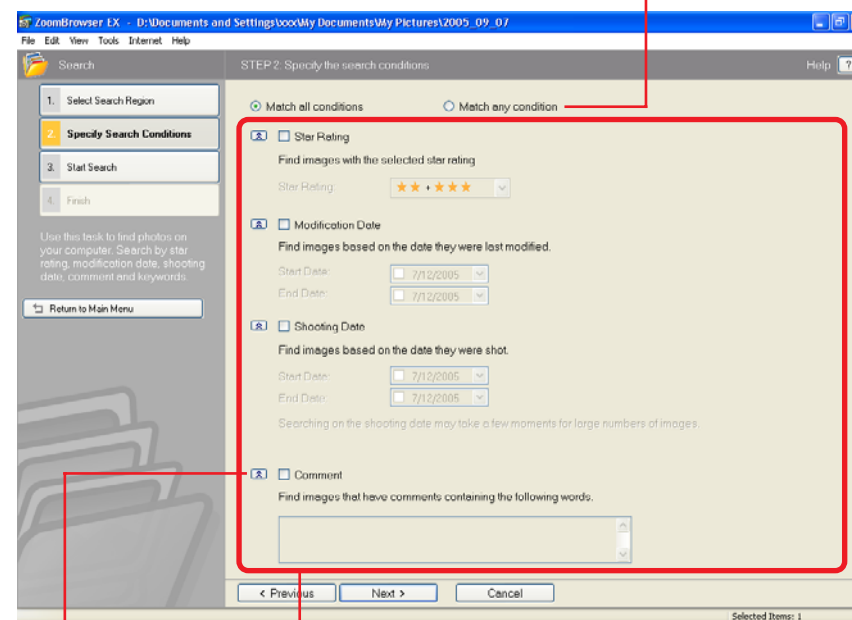

Set the search parameters here.  
First, place a check mark in the parameter you wish to use.  
Next, if you selected the modification or shooting date, set the date range.  
If you selected Star Rating, select a rank.  
If you selected the keyword option, select the keywords.

Clicking here allows you to hide the search parameters.




# Searching Images (2/2)

## 4. Click [3. Start Search] after you have set the parameters.

A set of images corresponding to the search parameters will display.


## 5. Confirm the search results and click [4. Finish].

To modify the search parameters, repeat steps 3–4.

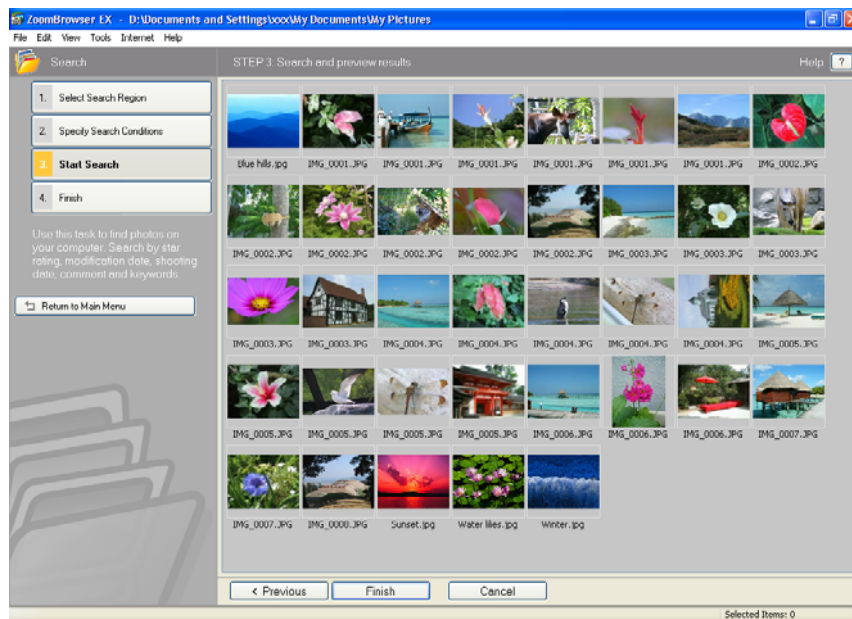

This concludes the search process.


When you click [OK] in the confirmation dialog, the “Search Results” folder is created in the Main Window and displays the images matching the search parameters.

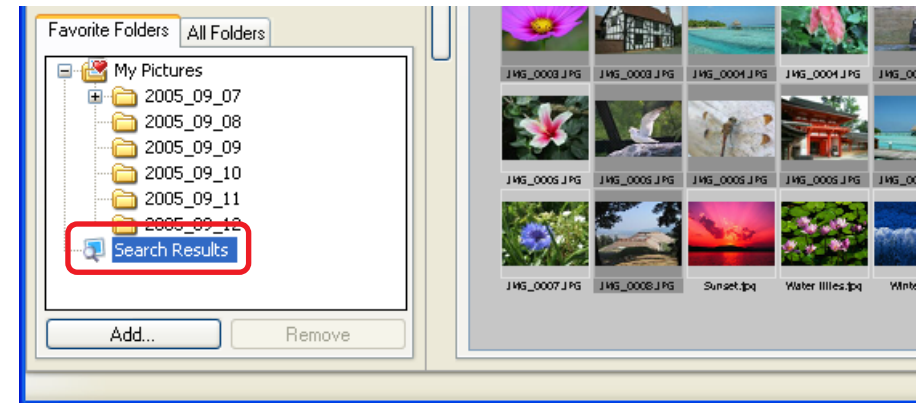

## IMPORTANT

- The original image will also be deleted when you delete an image from the Search Results folder.

## REFERENCE

- You can select, print or copy the images in the Search Results folder to another.
- Images will remain registered in the Search Results folder until you close ZoomBrowser EX or perform another search.
- You can also perform a search by clicking the  (Search) function button.

# Moving or Copying Images (1/4)

This section explains how to move or copy images between folders. It is convenient to conduct these procedures in the zoom mode.

## REFERENCE


- Moving or copying images in ZoomBrowser EX affects the actual location in which those images are stored on your PC.

### PROCEDURES



## Moving an image in the Browsing Area

You can move an image in the Browsing Area simply by using a drag-and-drop operation.

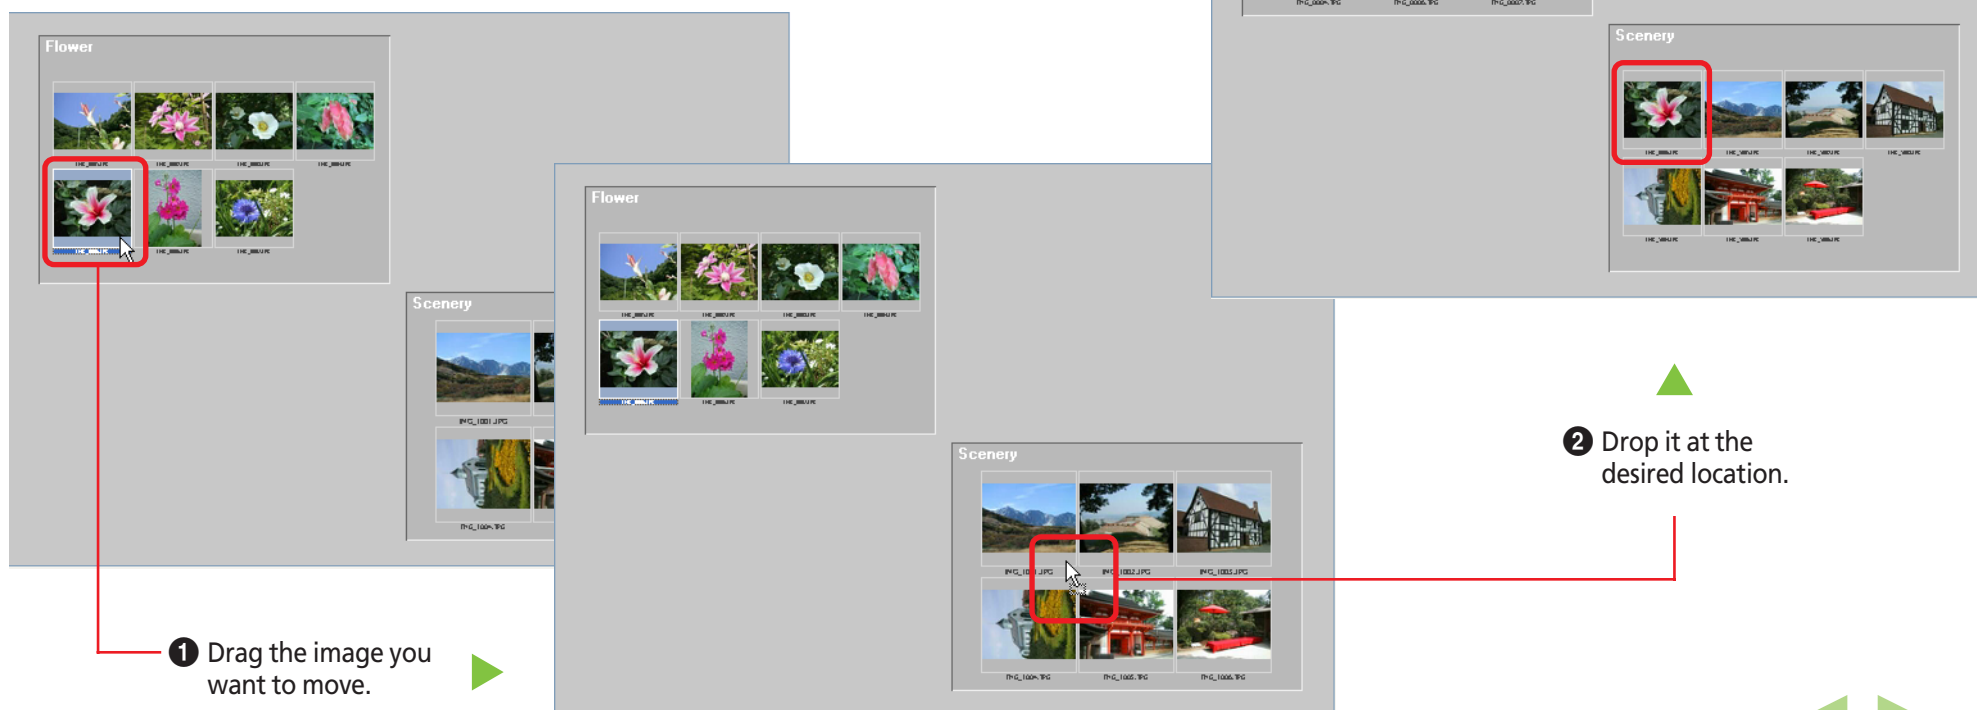




# Moving or Copying Images (2/4)

## PROCEDURES



### Copying an image within the Browsing Area

To copy an image, before you drop the image you are dragging, press and hold the [Ctrl] key and release the mouse button, while still holding the key.

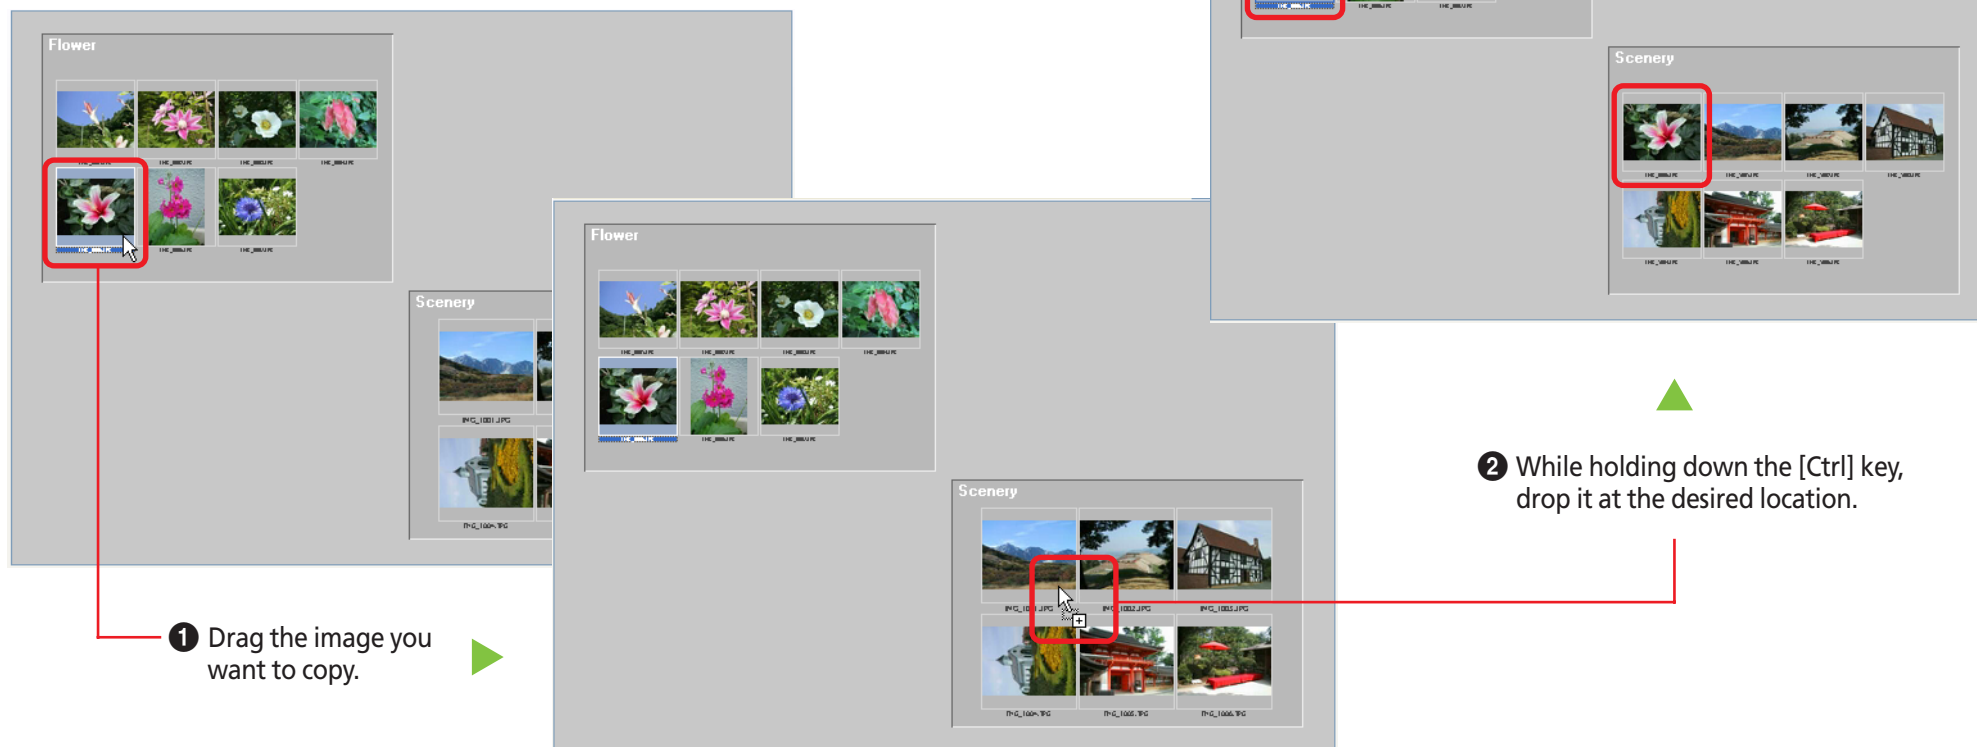


# Moving or Copying Images (3/4)

## PROCEDURES




### Moving or Copying an Image from the Browsing Area to the Folder Area

You can move or copy images between different folders by dragging them from the Browsing Area to the Folder Area and dropping them in the target folder.

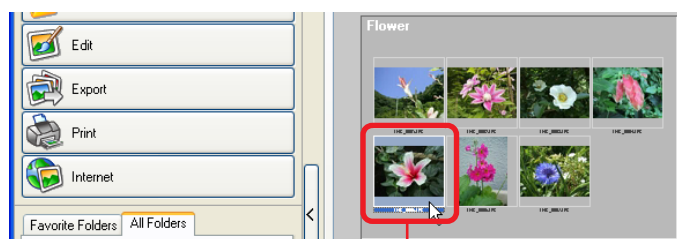

1 Drag the image you wish to move.

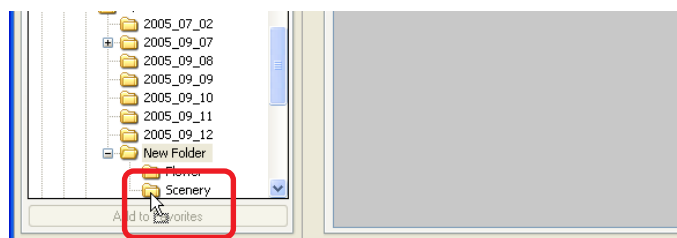

2 Drop it in the target folder.

## REFERENCE


- To copy an image from the image folder you are in at the moment to a different image folder, proceed the same way. Hold down the [Ctrl] key before dropping the image and release the mouse button while holding the key over the target library.

## PROCEDURES



### Copying by Dragging a File Icon from a Windows Window

You can also copy an image by dragging its file icon from an open Windows window and dropping it onto the ZoomBrowser EX window.

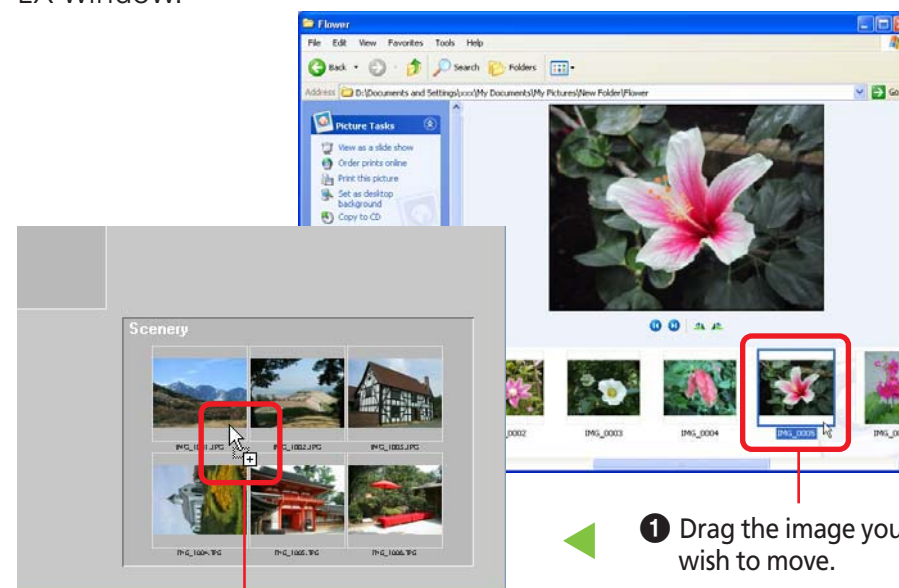

1 Drag the image you wish to move.

2 Drop it in the target folder.

## REFERENCE

- On the other hand, when you drag an image from the Browsing Area of ZoomBrowser EX to Windows Explorer, the image is also automatically copied.

# Moving or Copying Images (4/4)

## HINT



### Additional ways of moving or copying images

#### ■ Moving or copying many images at once

You can select multiple images by pressing and holding the [Ctrl] key while you click on successive images. You can also select a series of adjacent images by pressing and holding the [Shift] key while clicking on the first and last images. Once the images are selected, you can move or copy them all together with standard drag and drop procedures.

 
#### ■ Moving or copying a complete folder

In addition to moving or copying individual images, you can move or copy an entire folder. In the Zoom display mode, select the folder by clicking inside it where there are no images. Then move the folder by dragging and dropping it, or copy the folder by first pressing down and holding the Ctrl key, and then dragging and dropping the folder. See “Changing the Display Mode” and “Selecting Folders” in Chapter 4 for information about display modes and folder selection.

#### ■ Copying from the menu

Select one or more images, click the [Edit] menu and select [Copy]. Next, select the target folder in the Folder Area, click the [Edit] menu and select [Paste]. (This operation is not available with Windows 98 SE.)

#### REFERENCE

- You can select all the folders and images presently displayed in the Browser Area by clicking  in the Display Control Panel and selecting [Select All] from the menu or by clicking the [Edit] menu and selecting [Select All].

# Deleting Images (1/2)


This section explains how to delete images and folders you no longer need.

## PROCEDURES



### How to delete an image


1. Select an image in the Browser Area to delete.
2. Click (Delete).

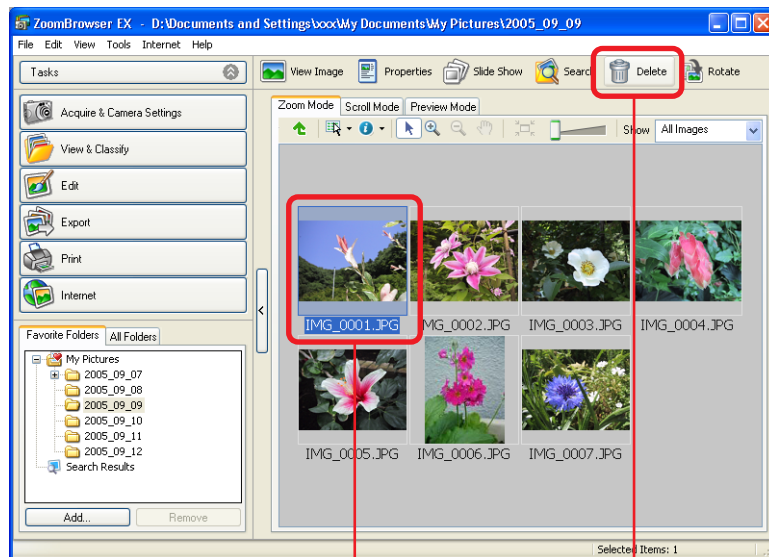

1 Click an image.

2 Click [Delete].

3. Click [Yes] when a confirmation dialog like the one below appears.

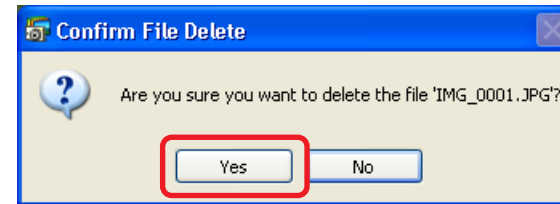

## REFERENCE

- If you accidentally delete a required image, double-click the [Recycle Bin] icon on the Windows desktop to open it. Select the image and, in the Recycle Bin Tasks section, click [Restore]. (With Windows 2000/Windows Me/Windows 98 SE in web page view mode, select the image and then click [Restore this item back to its original location] at the left side of the window.) When you switch back to ZoomBrowser EX and click the [View] menu and select [Refresh Current Folder], the image will reappear in its original location.


# Deleting Images (2/2)

## HINT



### Other ways of deleting images

#### ■ Deleting multiple images

You can select multiple images by pressing and holding the [Ctrl] key and clicking on successive images or by pressing and holding the [Shift] key while clicking on images. You can delete multiple images at once by selecting them and clicking  (Delete).

#### ■ Deleting images from the File menu

Click an image. Then, click [Delete] on the [File] menu.


## REFERENCE

- To completely delete images from the computer after completing the procedures above, double-click the [Recycle Bin] on the Windows desktop to open it and, in the Recycle Bin Task section, click [Empty Recycle Bin]. (With Windows 2000/Windows Me/Windows 98 SE in web page view mode, click [Empty Recycle Bin] at the left side of the window.)

## PROCEDURES



### Deleting Folders

1. Select a folder in the Browser Area to delete.
2. Click  (Delete).  
You can also delete a folder by selecting it, clicking the [File] menu and selecting [Delete].

## IMPORTANT

- All of the actual images and subfolders in a folder are deleted from the computer in this procedure.

# Rotating Images

This topic explains the procedures for changing the orientation of images.

## PROCEDURES




### How to rotate an image

1. Select an image to rotate.

2. Click  (Rotate).


The rotation settings window will display.

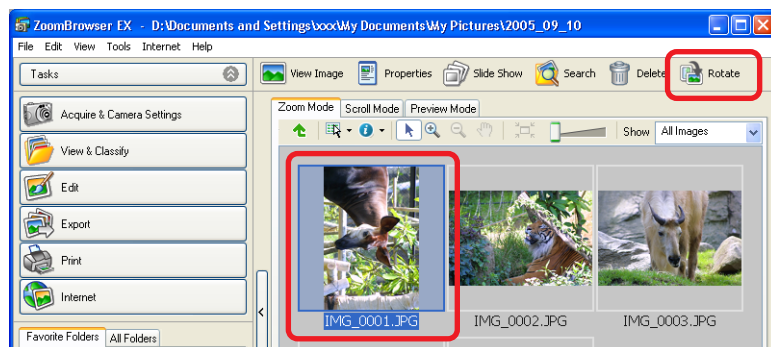


3. Set the rotation direction and angle and click [OK].

Selects the direction and angle of rotation.

Place a check mark here to change the orientation of the image data itself.

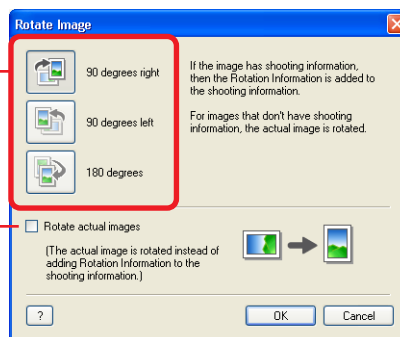

If a check mark is not placed in the [Rotate actual images] option, only the image display is rotated and the original image is left unchanged. The symbol to the right displays whenever there is a difference between the orientation of the displayed image and the original.

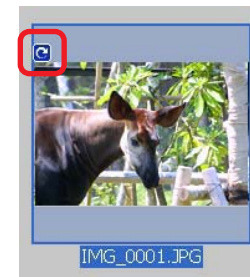

## REFERENCE

- You can rotate the original image to match the orientation of the displayed image by clicking the [Edit] menu and selecting [Rotate According to Rotation Information].

## HINT



### Other ways of rotating images

#### Rotating multiple images

You can select multiple images by pressing and holding the [Ctrl] key and clicking on successive images or by pressing and holding the [Shift] key while clicking on images. You can rotate multiple images at once by selecting them and carrying out the rotation procedure.

#### Using the Menu to Rotate Images

Rotate images by selecting the image, clicking the [Edit] menu and selecting [Rotate Image] from the submenu and a direction of rotation.



# Viewing Image Properties (1/3)

This procedure is for viewing various types of information about the selected image.

## PROCEDURES



## Viewing Information in the Properties Window

1. Select an image in the Browser Area in Zoom or Scroll mode.
2. Click (Properties).  
The Properties window will display.

You can view various types of information in this window, such as the image revision date and file size, shooting date and time and camera shooting settings. In addition, you can change the file name, set Star Ratings and keywords, and type comments. To close the Properties window, click the (Closebox).

## REFERENCE

- Images shot with the camera and then processed and saved by another editing program may lose the shooting information.
- If you select multiple images and display the Properties window, clicking [Previous] and [Next] switches between the Properties windows for the images in the selection.
- You can also view the image information by selecting an image, clicking the [View] menu and selecting [Properties].

Displays the Viewer Window.

You can play a sound if one is attached to an image.

You can rename the file.

Place a check mark here to prevent images from being overwritten or deleted.

Types a comment.

Assigns keywords.

Histogram

The information displayed here will vary according to your camera model and the settings used at the time of shooting.

You can display the image ahead or behind of the displayed image.

Sets Star Ratings.

Click here to show or hide more categories.


# Viewing Image Properties (2/3)

## PROCEDURES



### Viewing Information in the Preview Mode

If you set the display mode to the Preview mode and select an image, you can view the information for that image. You can view various types of information about the image in this window, including the revision date or file size, shooting date and time, and the camera shooting settings. In addition, you can change the file name, set Star Ratings and keywords, and type comments.

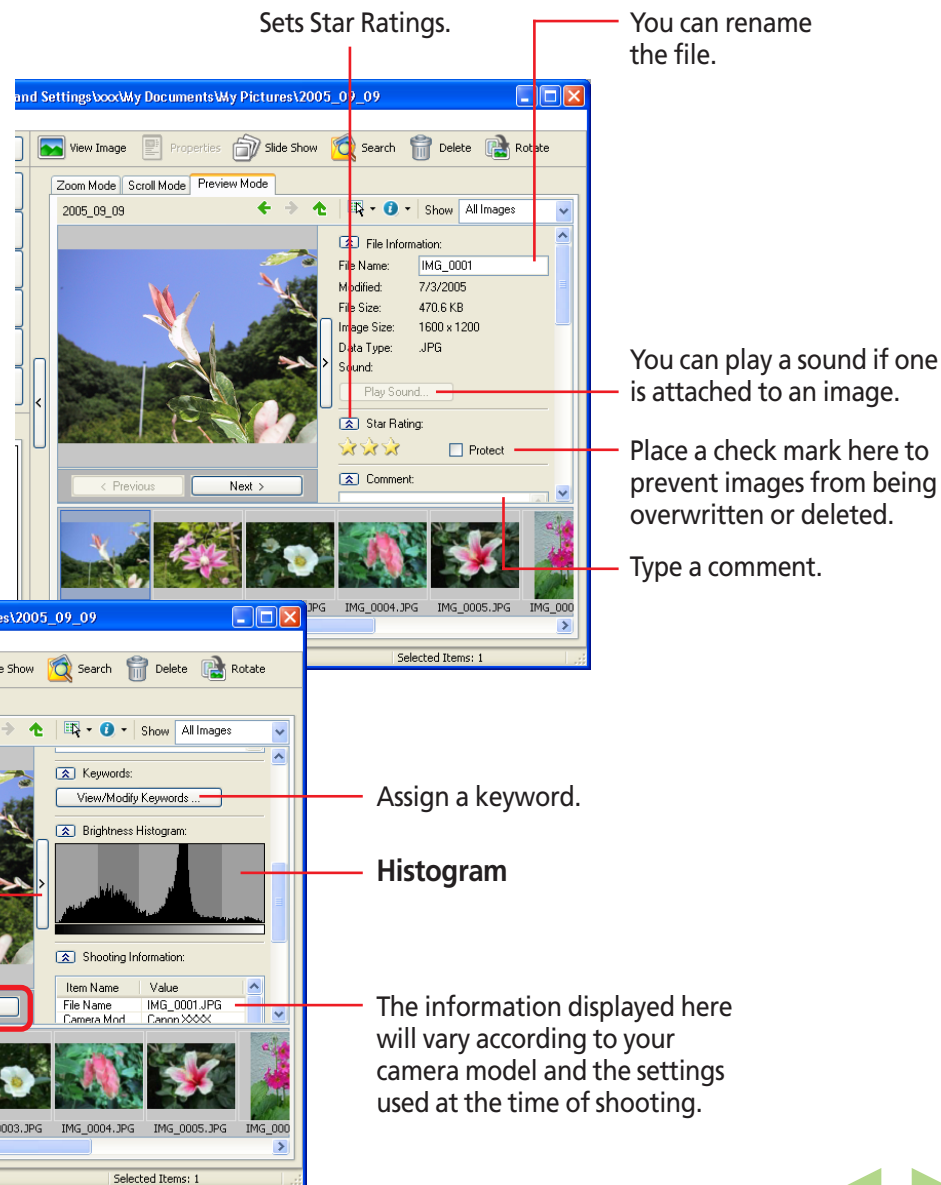

# Viewing Image Properties (3/3)


## PROCEDURES



### Viewing Information in the Viewer Window

Shooting information will display overtop the image when you click [Show Shooting Information] when an image is displayed in the Viewer Window.

Shooting Information

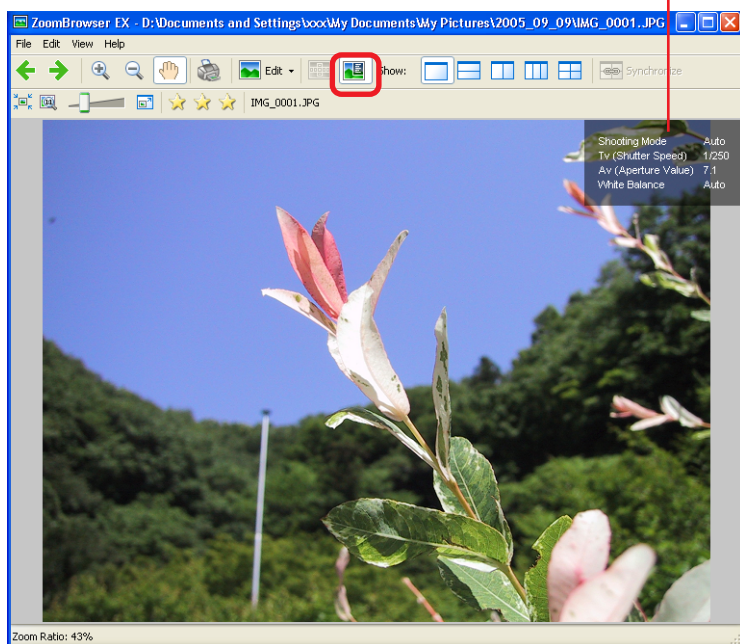

## REFERENCE

- The methods for changing the font type and size for the displayed information are explained in “Customizing Preferences” in the Appendices.

# Creating Folders


This section explains how to create a new folder within an existing one.

## PROCEDURES




## Creating Folders


1. Select a folder in the Folder Area.  
You will be creating a new folder within the folder selected here.

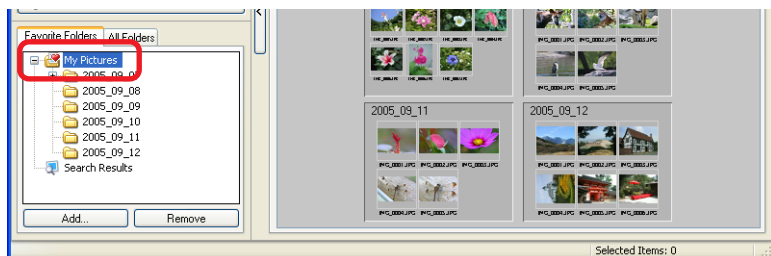

2. Click the [File] menu and select [New Folder].

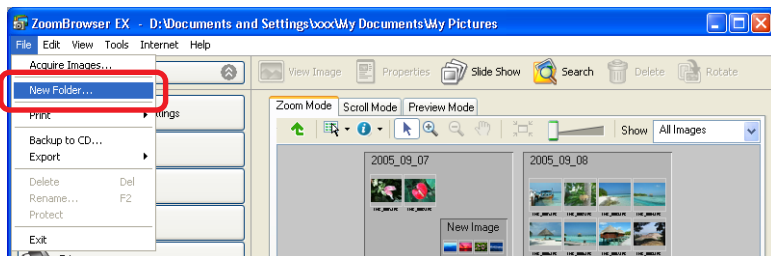

3. Type a name for the new folder and click [OK].  
You have created a new folder.

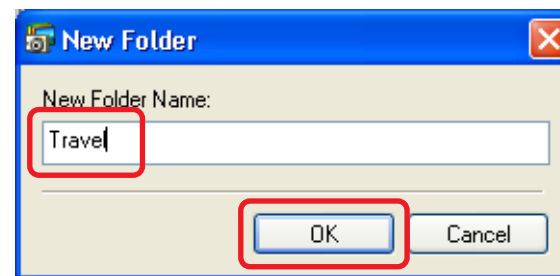

## REFERENCE

- See "Renaming Images (2/2)" for the procedures for changing folder names.
- See "Deleting Images (2/2)" for the procedures for deleting folders.

# Refreshing Folders

This section explains how to refresh or update a folder.

## EXPLANATION



### What Does It Mean to Refresh a Folder

Adding, moving, copying or editing an image or a folder within ZoomBrowser EX ensures that it is updated and appears correctly in the Browsing Area.

However, the information ZoomBrowser EX possesses and the actual file contents can be different when an image file is moved or copied using Windows functions or edited with a separate program.


In this case, the “current state of the folders” has to be checked and updated. This is what is meant by refreshing a folder.

## PROCEDURES



### Refreshing Folders

Click the [View] menu and select [Refresh Current Folder]. This will update ZoomBrowser EX's information about all the folders.

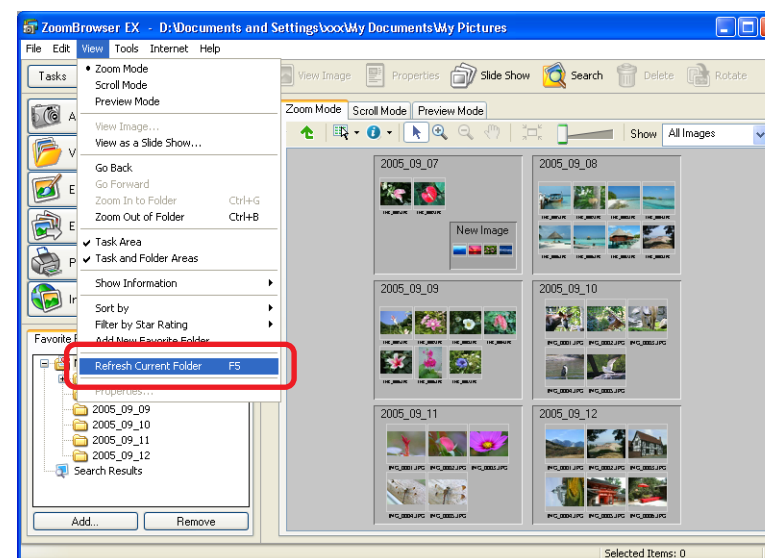



# Editing Images (1/10)


This chapter explains the methods for handling images managed by ZoomBrowser EX. This section explains the procedures for editing images displayed in the Viewer Window.

## EXPLANATION



### About the Editing Features

You can perform the following editing operations in the Viewer Window.

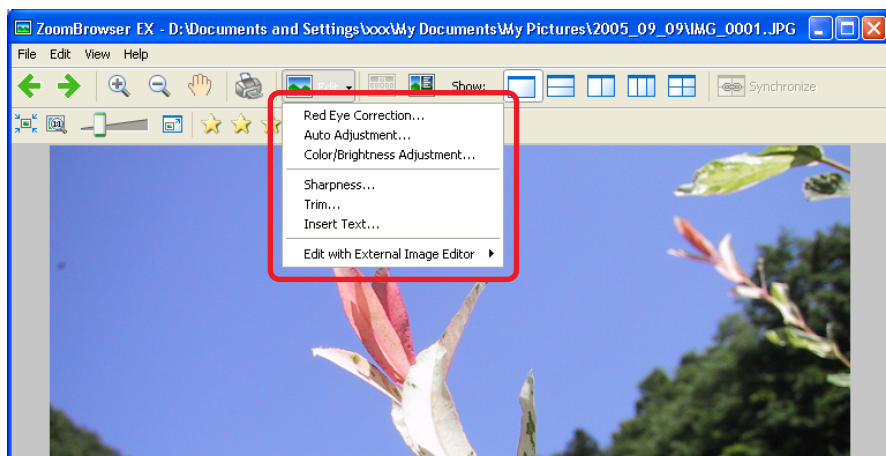

#### ■ Red Eye Correction

Use this to correct images in which people's eyes appear red.

#### ■ Auto Adjustment

Use this to automatically adjust the image color balance.

#### ■ Color/Brightness Adjustment

Use this to change image appearances by adjusting the brightness, saturation, contrast, RGB (red, green, blue) intensity, levels, and tone curve.

#### ■ Sharpness

Use this to emphasize and clarify the outlines of people and objects.

#### ■ Trim

This function trims portions of images. Use it to cut away unwanted parts of the image.

#### ■ Insert Text

Use this to write text on images.

#### ■ Edit with External Image Editor

See "Editing Images with Other Programs" in this chapter.

The procedures for these editing features are explained starting from the next page.

### IMPORTANT

- These editing procedures cannot be used on RAW images or movies.




# Editing Images (2/10)

## PROCEDURES



## Red Eye Correction

This corrects the red portion of eyes that appear red. Click  (Edit) in the Viewer Window and select [Red Eye Correction] to open the red eye correction window.


## REFERENCE

- You can also start the red eye correction procedure by clicking the [Edit] menu in the Viewer Window and selecting [Red Eye Correction].

### Auto Mode

- Select [Auto Mode] and click [Start].  
Red eyes will automatically be corrected.
- Click [OK] when it finishes correcting.

Select this to have it automatically perform the red eye correction.

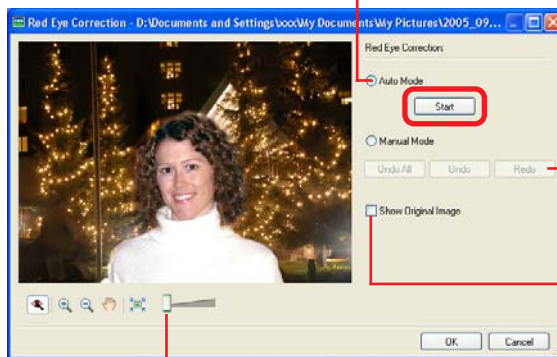


You can change the display magnification.

### Manual Mode

- Select [Manual Mode].
- Move the mouse cursor over the red eye portion and click the relevant portion.  
When you position the mouse pointer over red eyes, the corresponding area will be highlighted.
- Click [OK] when it finishes correcting.

Select this to choose manual red eye correction.

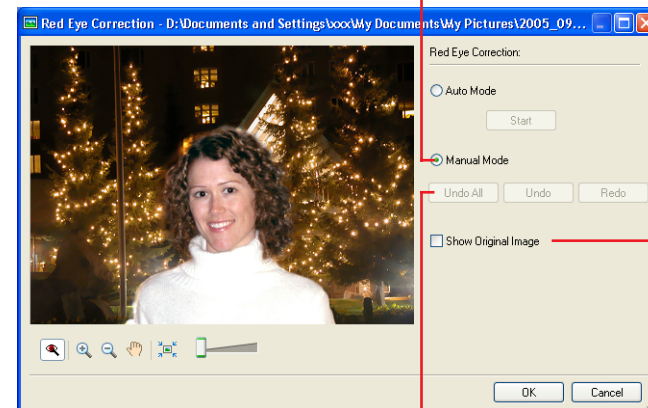

Click [Undo All] to restore the image to its pre-correction state.  
Click [Undo] to cancel the action immediately preceding.  
Click [Redo] to reinstate an action canceled with the Undo button.

You can compare the pre-correction image and the post-correction image by placing a check mark here and having the pre-correction image appear.


# Editing Images (3/10)

## PROCEDURES



### Auto Adjustment

Automatically adjusts the image color balance and brightness.

1. Click  (Edit) in the Viewer Window and select [Auto Adjustment].


The Auto Adjustment window will open.

## REFERENCE

- You can also start the auto adjustment procedure by clicking the [Edit] menu in the Viewer Window and selecting [Auto Adjustment].

2. Click [Auto Adjust Image].

3. Click [OK].  
This completes the auto adjustment process.

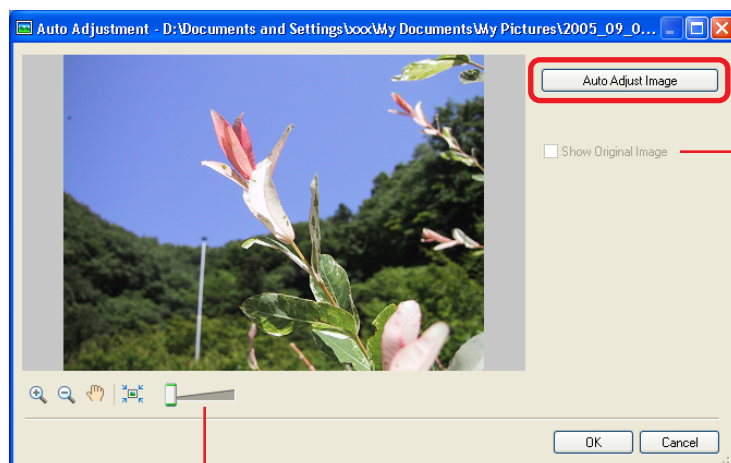

If you add a check mark, you can switch between and compare the pre-adjustment image and the post-adjustment image.

You can change the display magnification.

# Editing Images (4/10)

## PROCEDURES



### Color/Brightness Adjustment

Adjusts the brightness, saturation, contrast, RGB intensity, levels and tone curve.

1. Click  (Edit) in the Viewer Window and select [Color/Brightness Adjustment].


The Color/Brightness Adjustment window will open.

## REFERENCE


- You can also start the color/brightness adjustment procedure by clicking the [Edit] menu in the Viewer Window and selecting [Color/Brightness Adjustment].

2. Select an adjustment method in the next section, make the adjustments in each window and click [OK].

Select an adjustment method here.

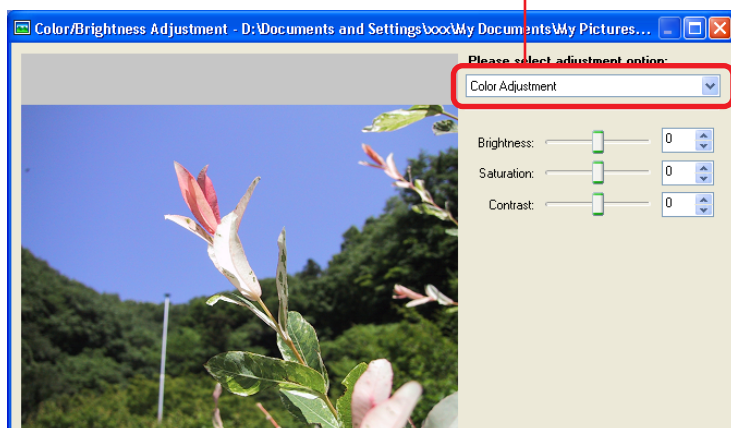

## Common Elements for Each Adjustment Method

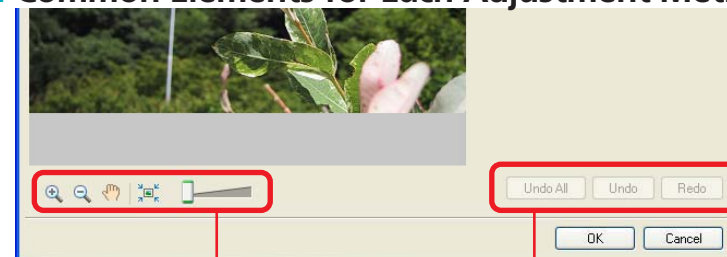


You can change the display magnification and display area.

Click [Undo All] to restore the image to its pre-adjustment state.  
Click [Undo] to cancel the action immediately preceding.  
Click [Redo] to reinstate an action canceled with the Undo button.

## Color Adjustment Window


Adjusts the brightness, saturation and contrast.

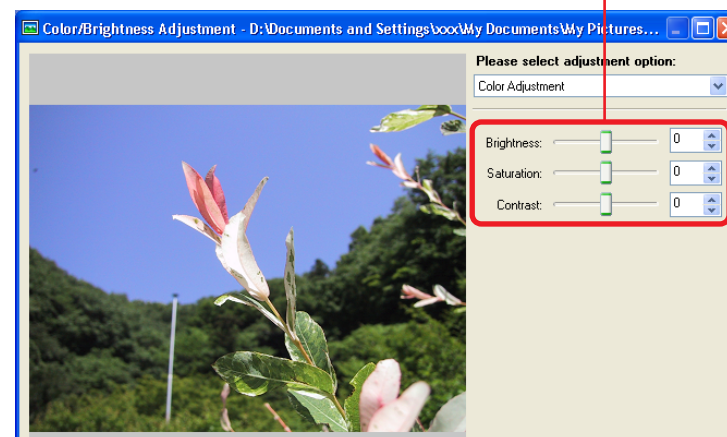

# Editing Images (5/10)


## ■ RGB Adjustment Window

You can adjust the RGB (red, green, blue) intensity.

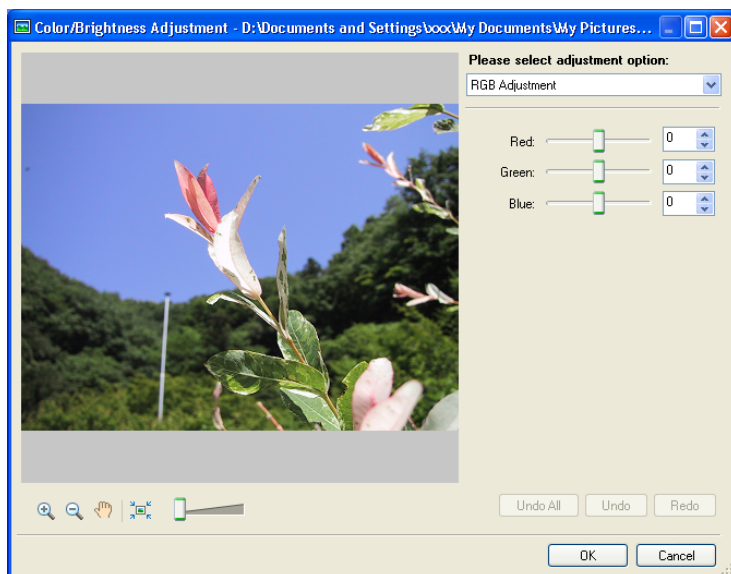

## ■ Level Adjustment Window

You can adjust an image's highlights (brightest portions), shadows (darkest portions) and mid-tones while viewing its histogram.

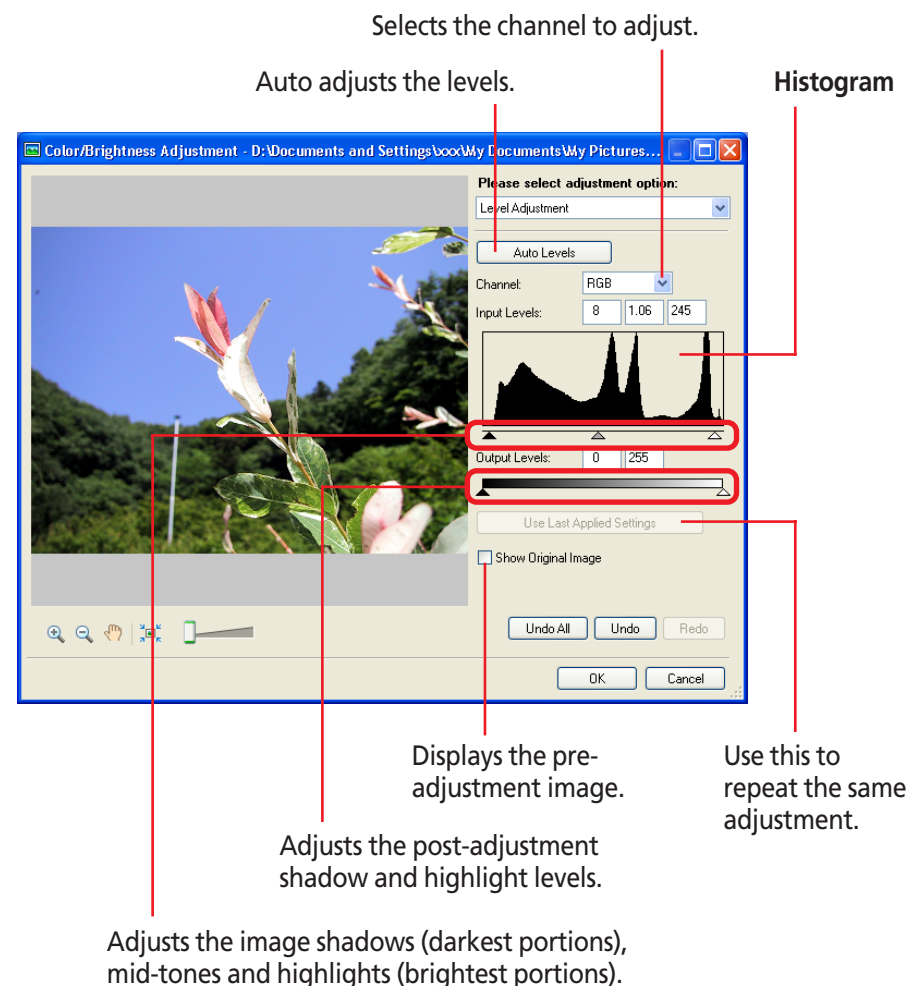


# Editing Images (6/10)

## ■ Tone Curve Adjustment Window

You can adjust image brightness and color balance using a tone curve (a revisable graph plotting the input and output brightness data).

Selects the channel to adjust.

Click on a point to  
alter the tone curve.

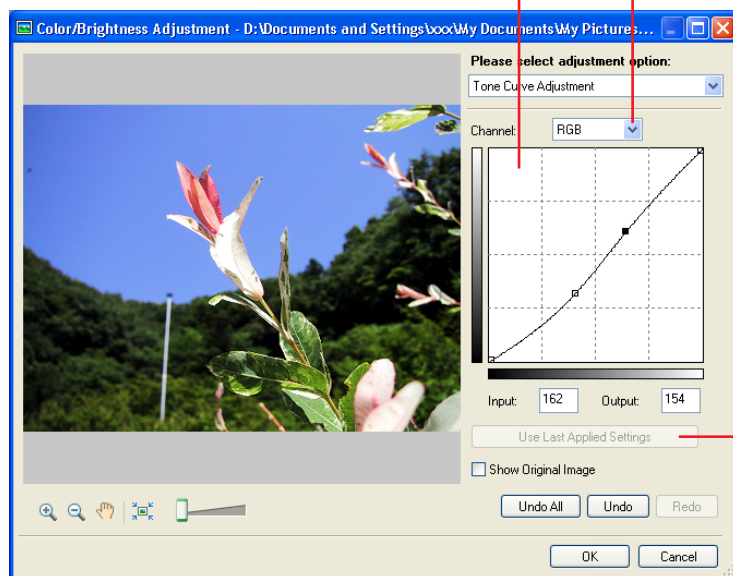

Use this to  
repeat the  
same  
adjustment.

## REFERENCE

- You can delete a point on the curve by selecting it and pressing the [DEL] key.



# Editing Images (7/10)

## PROCEDURES



### Adjusting Sharpness

Use this to emphasize and clarify the outlines of people and objects.


1. Click (Edit) in the Viewer Window and select [Sharpness].

The Sharpness window will open.

## REFERENCE


- You can also start the sharpness adjustment procedure by clicking the [Edit] menu in the Viewer Window and selecting [Sharpness].

2. Select the [Sharpen] or [Unsharp Mask] tab, adjust the settings in the respective windows and click [OK].

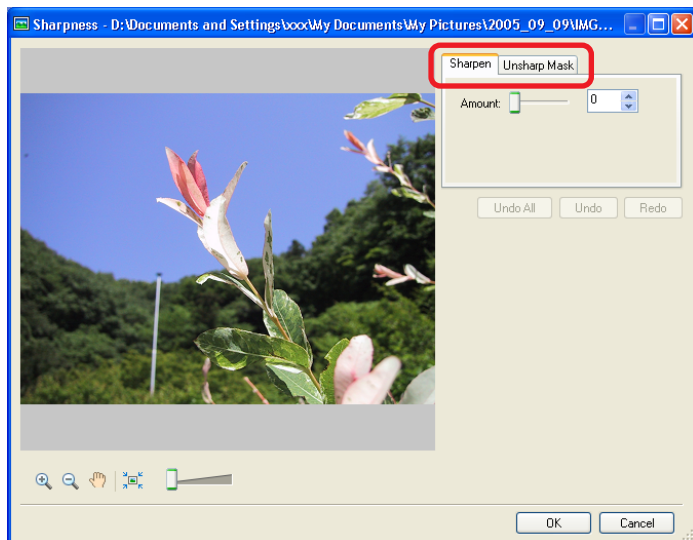


## Sharpness Window

Sets the magnitude of the effect.

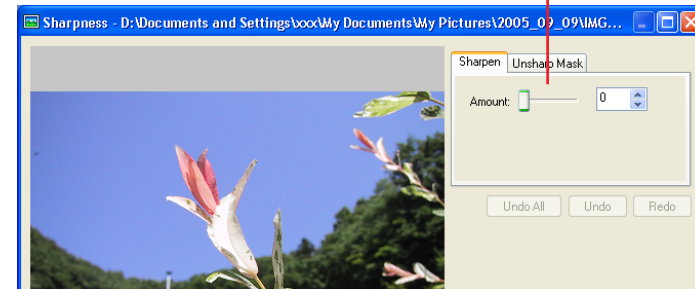

## Unsharp Mask Window

Sets the magnitude of the effect, its radius (the area over which it will search for contours) and threshold (basic value determined to be a contour).

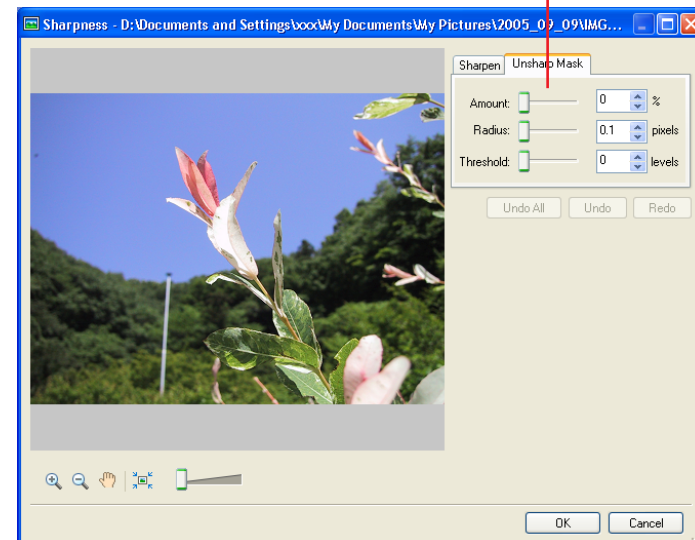



# Editing Images (8/10)

## PROCEDURES




### Trim

Use this to delete unnecessary portions of the image and leave only the necessary portions.

1. Click (Edit) in the Viewer Window and select [Trim] to open the Trim Image window.
2. Position the mouse pointer over the image and drag it to select the trimming area.

Drag to specify the trimming area.

You can also specify the trimming area with numbers.

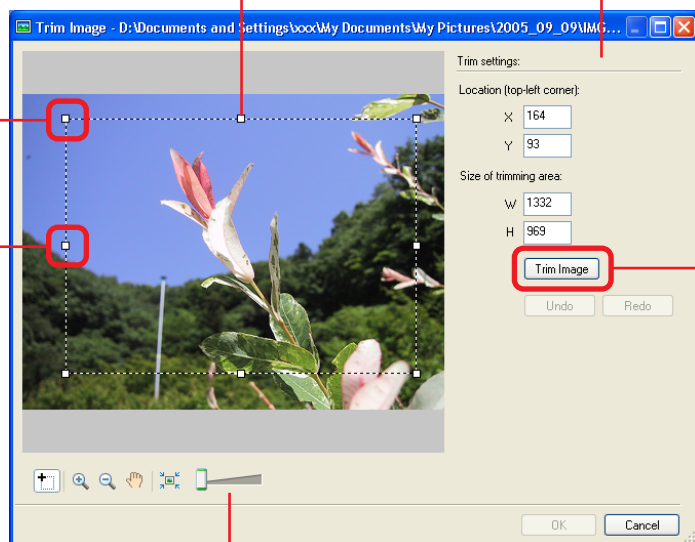

You can change the display magnification.

You can adjust the trimming area by dragging the corners or center points of the sides.

3.

Click [Trim Image]

The specified area is trimmed.

4.


Check the trimmed image and click [OK].

This completes the trimming procedure.

## REFERENCE

- You can also start the trimming procedure by clicking the [Edit] menu in the Viewer Window and selecting [Trim].

Use this to reset the specified area.

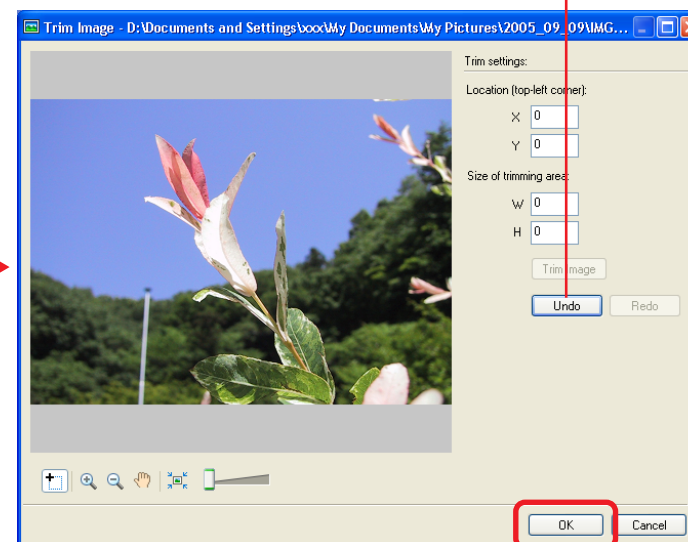


# Editing Images (9/10)

## PROCEDURES



### Insert Text

Use this to place text on the image.

1. Click  (Edit) in the Viewer Window and select [Insert Text].

The Insert Text window will open.


### REFERENCE

- You can also start the text input procedure by clicking the [Edit] menu in the Viewer Window and selecting [Insert Text].

2. Move the mouse cursor over the image and click where you would like to place the text.

Dragging (or clicking) on the window displays a text frame. Next, input the text into the box at the right.

You can change the display magnification and display area.

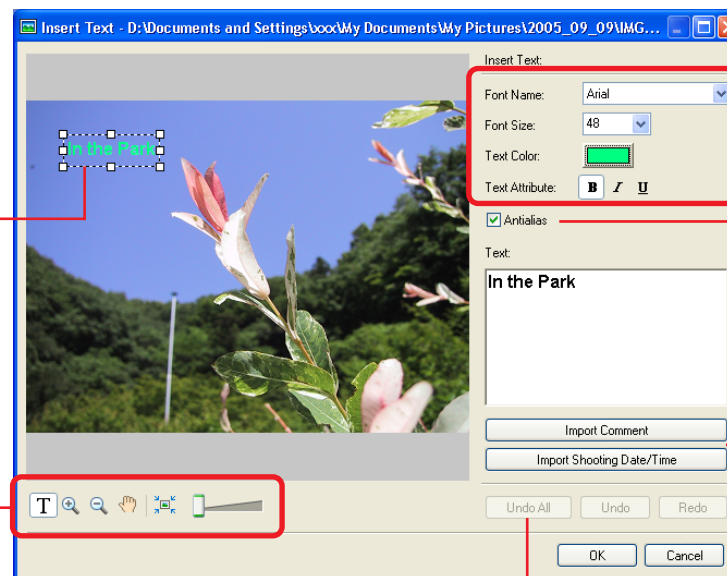

Sets the font, font size, text color and text attributes.

Place a check mark here to have the text edges blend into the image.

Inserts comments attached to the image or the shooting date/time.

Click [Undo All] to restore the image to its pre-adjustment state.  
Click [Undo] to cancel the action immediately preceding.  
Click [Redo] to reinstate an action canceled with the Undo button.

3. Input text and set the font type, size and other attributes.

4. Click [OK].  
This completes the text input process.

### REFERENCE

- You can move the text frame by dragging it.
- You can change the text frame size by dragging the corners or mid-points on the sides.

# Editing Images (10/10)

## REFERENCE

- You can use the following tools when editing.



### Zoom In/Zoom Out Button

Zooms in or out (makes a portion of the image appear larger or smaller). The Navigator window appears when the image is zoomed in.



### Pan Button

(Only available when the image is zoomed in)  
Clicking and dragging changes the position of the zoomed-in area of the image.



### Fit to Window Button

Sets the image display size to the window size.



### Display Size

Changes the image display magnification.

- Restores the window to an editable state for red-eye correction, trimming and inserting text when the [Zoom In], [Zoom Out] or [Pan] buttons have been used.



### Red Eye Correction Button

(Only available in the manual red eye correction mode)



### Trim Button

(Only available when trimming)



### Text Button


(Only available when inserting text)

## PROCEDURES



## Saving under a Different Name

You can leave the original image file untouched and save the edited image in a new file under a different name. After editing the original, click the [File] menu in the Viewer Window and select [Save As] to open the Save dialog. Set the file name, format and image quality and click [Save].

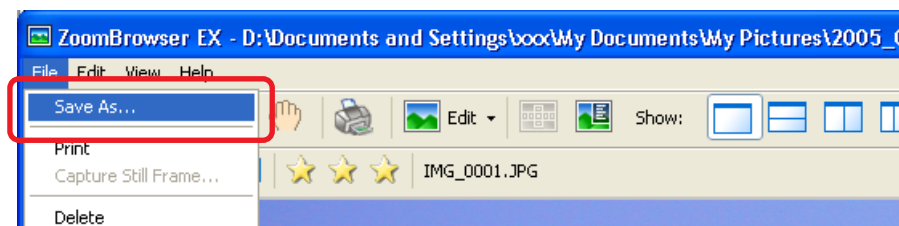


## PROCEDURES



## Overwriting the Image


To overwrite the original image file with the edited image data, use the Save dialog from the Saving under a Different Name procedure and save the file leaving the file name the same as the original. (The original file name is displayed in the Viewer Window.)

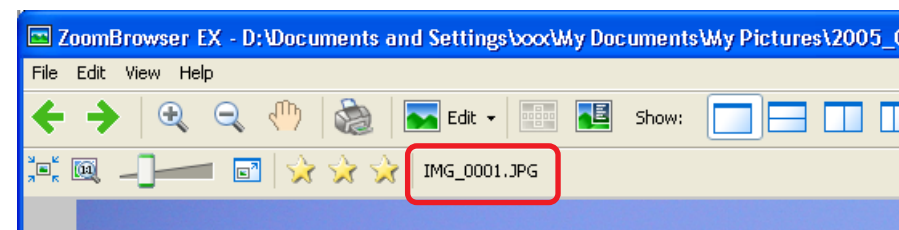

# Editing Images with Other Programs

This section explains how to start other image editing programs to edit an image selected in ZoomBrowser EX.


## REFERENCE


- If you installed the image editing program included with your product (contained on the Solution Disk), it should automatically be registered in the ZoomBrowser EX menu.
- To register other programs, click  (Edit) in the Viewer Window and select [Edit Image with External Tool], followed by [Manage List], and register the programs.

## PROCEDURES



## How to start other image editing programs

1. Click  (Edit) in the Viewer Window, select [Edit with External Image Editor] and select an editing program from the submenu.

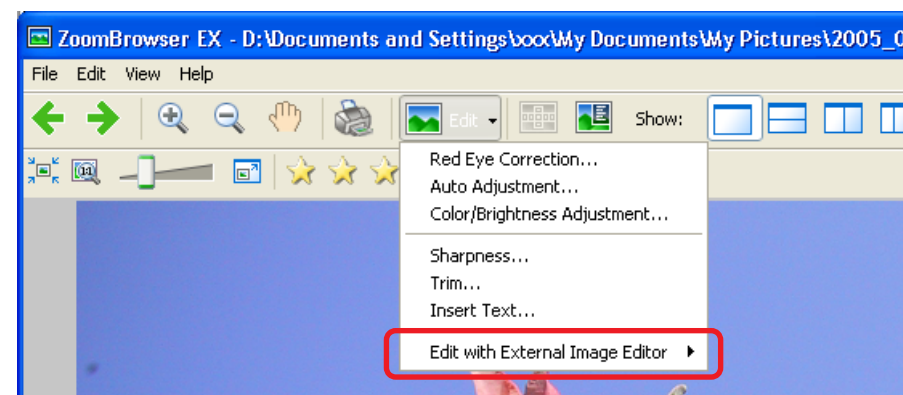

The image editing program will start and open the selected image in it.

## REFERENCE

- You can also edit images by clicking [Edit] in the Task Area of the Main Window, followed by [Edit Image] and [2. Select Image Editing Tool], and selecting [Edit with external image editor].

# Sending Images by E-mail (1/2)

This section explains how you can send images in e-mail.

## IMPORTANT

- To use this function, your e-mail program must be set up as a MAPI client. For detailed information on how to set up your e-mail program, refer to the documentation that comes with it.

## PROCEDURES



## How to send an image by e-mail


- Click [Internet] in the Main Window, followed by [Email Images].
- Confirm that [1. Select Images] is selected, and select the images in the Browser Area.  
You can select multiple images or a folder and have the images in the folder included in the e-mail attachment.

- Click [2. Change Image Size] and set the image size and quality.

Use this option if you do not want to change the size of the image.

Select the long or short side and set the image size in numbers.

Use this option if you want to reduce the size of the image.

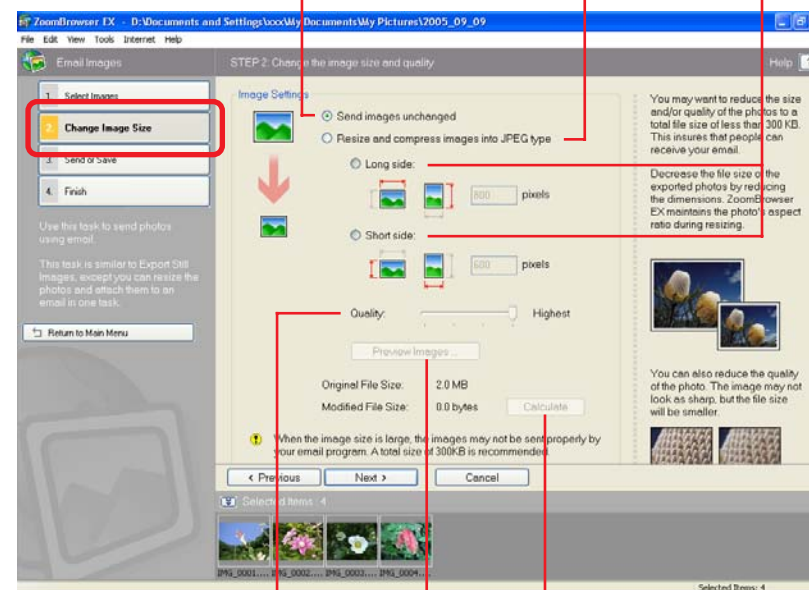

Specify the image quality. (The lower the quality, the rougher the image becomes, but the size of the file also becomes smaller.)

Use it to check the file size when you actually compress the image. (The file is displayed in the "Total size of changed images" category.)


Use it to check the image quality as it will appear when compressed. (A preview image will display.)



# Sending Images by E-mail (2/2)

4. Click [3. Send or Save] and select whether to create a new e-mail or save the image.

Start the e-mail program and send the e-mail immediately.

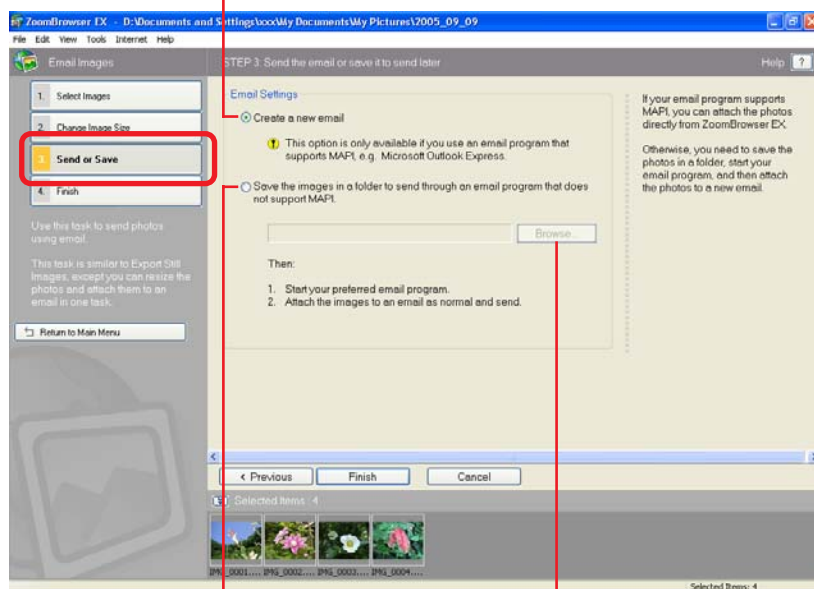


Save the image on the disk first.

If you selected [Save the images in a folder to send through an email program that does not support MAPI.], click [Browse] to specify a destination.

5. Click [4. Finish].

- If You Selected [Create a new email]:  
Your e-mail program will start and the selected images will appear as an attachment in the message window. Input the address, subject and your comments and send the message.

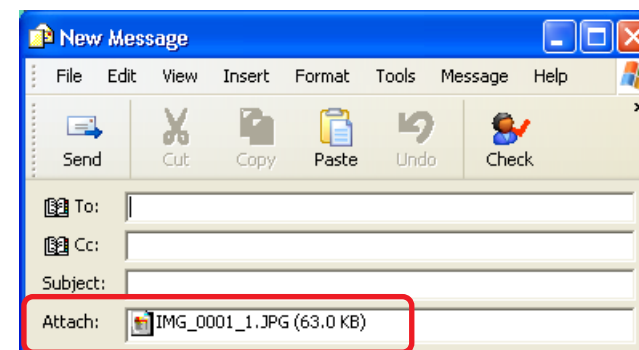

- If You Selected [Save the images in a folder to send through an email program that does not support MAPI.]:  
The images will be saved to the specified destination. To send the images by e-mail, start your e-mail program and attach the saved image files to a message.

## REFERENCE

- You can also send images by e-mail by clicking the [Internet] menu and selecting [Send Images by Email].
- Some e-mail programs might not be able to start automatically (those without MAPI support). In this case, save the image to the disk, start the e-mail program and attach the image to an e-mail message.



# Exporting Images (1/4)


This section explains how to change the size, resolution or data type of a selected image and write it to a new file, and to export an image for use as a screen saver or wallpaper. It also describes how to export the shooting information to a text file.

EXPLANATION



## Export Formats

The following types of image export formats are available.

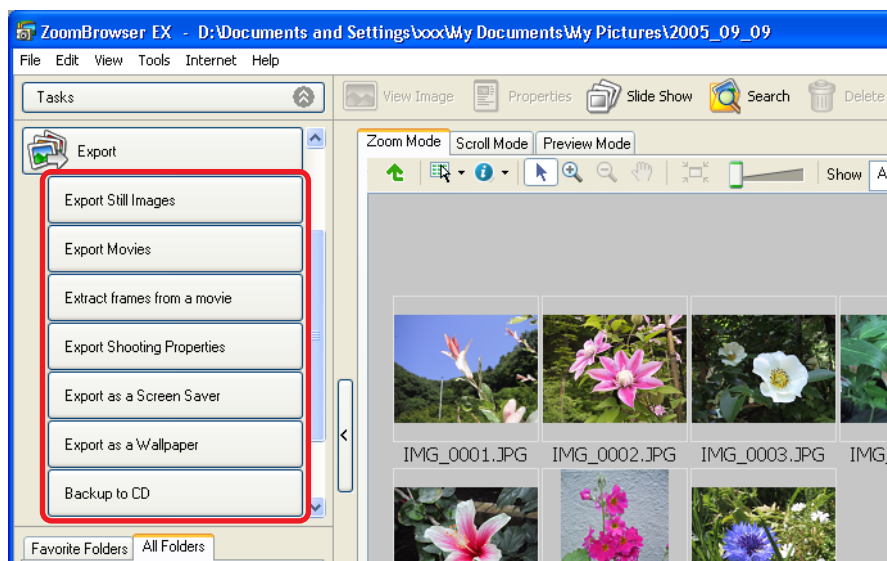

### Export Still Images

You can change the data type and/or image size and save it to a new file. Select one of three data types: JPEG, TIFF or Windows Bitmap (BMP). You can also add identifying characters to the start of the file name.

### Export Movies

You can change the movie size or type and export it as a different movie file. See "Exporting Movies" for an explanation of the procedures.

### Extract Frames from a Movie

This feature extracts still images from movies and saves them as image files (Windows XP only). See "Extracting Frames from a Movie" for more detailed instructions.

### Export Shooting Properties

You can select specific items from the shooting information and export it to a text file.

### Export Images as a Screen Saver

You can export an image as a screen saver file.

### Export an Image as a Wallpaper

You can export an image as a wallpaper file. This function will not work with multiple files selected.

### Backing Up to a CD

This feature copies and saves images to CD-R/RW disks. See "Saving Images to CD-R/RW Disks" for more detailed instructions. (Windows XP only)

## REFERENCE

- The shooting information is saved along with the image when you save an image as a JPEG in the Export window.

# Exporting Images (2/4)

## PROCEDURES



### Exporting Images

1. Click [Export] in the Main Window and select the export format in the next menu.
2. Confirm that [1. Select Images] is selected, and select the images in the Browser Area.  
You can select multiple images or a folder and have the images in the folder included.
3. Click [2. Specify Export Settings] and set the export settings.  
The settings content varies according to the export format. The following page explains the features and procedures for each window.  
Be sure, however, to note the file name and destination when exporting so that you do not lose track of the exported file.
4. Click [3. Finish].  
This will export the image(s).

## EXPLANATION



### Export Still Images

Click [3. Finish] after specifying the settings.

Changes the image size.

Changes the image type.

Calculates the post-conversion file size.

Destination Folder

Changes the destination folder.

Adds a prefix to the file name.

# Exporting Images (3/4)

EXPLANATION




## Export Shooting Properties

Click [3. Finish] after specifying the settings.

Place check marks beside the export categories you want.

You can insert or remove all check marks at once.

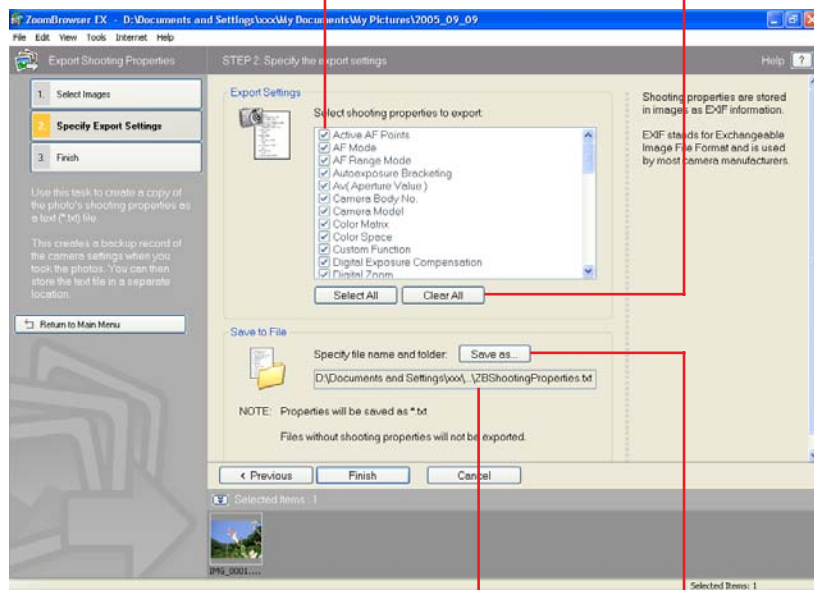

**Destination Folder**

Changes the destination folder (you can also specify a file name).

EXPLANATION




## Export as a Screen Saver

Click [3. Finish] after specifying the settings.

Place a check mark here to imbed the selected image as a new screen saver file (select an image size in the category immediately below).

Calculates the post-conversion file size.

You can preview the post-conversion image.

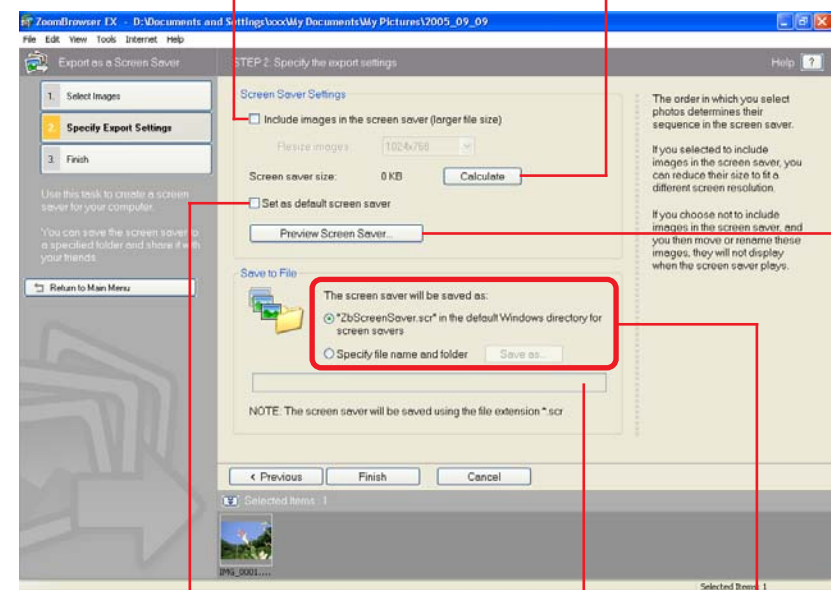

Place a check mark here to make it the default screen saver.

**Destination Folder**

Changes the destination folder (you can also specify a file name).

# Exporting Images (4/4)

## EXPLANATION




### Export as a Wallpaper

Click [3. Finish] after specifying the settings.

Selects a display method  
for the wallpaper.

Select whether to save it to the folder  
used by Windows for wallpaper or  
another destination.

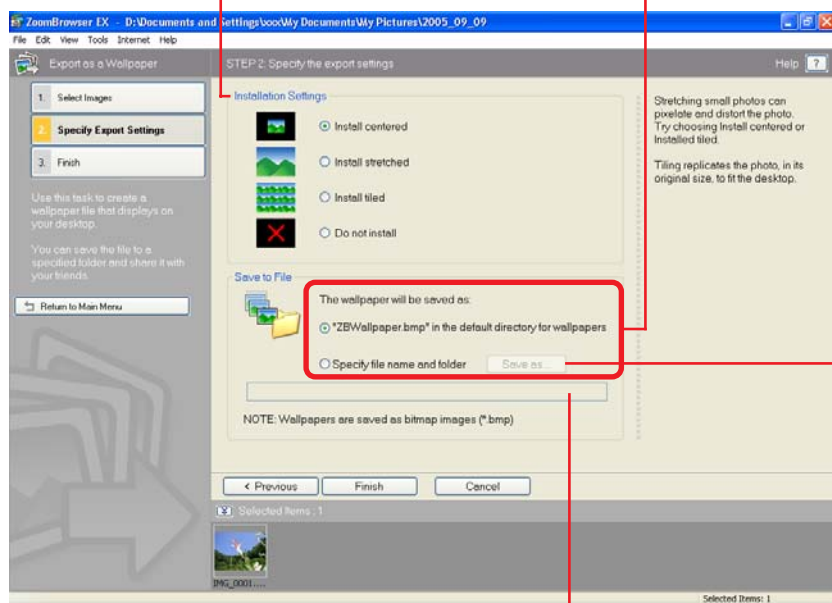

Destination Folder

Changes the destination folder  
(you can also specify a file name).

# Running a Slide Show (1/2)

This section explains how to run a slide show displaying images in sequence in the full-screen mode.

## PROCEDURES




### Setting and Starting a Slide Show

1. Click [View & Classify] in the Main Window, followed by [View as a Slide Show].
2. Confirm that [1. Select Images] is selected, and select the images in the Browser Area.  
You can select multiple images or a folder and have the images in the folder included.  
The images will display in the order they are selected here.
3. Click [2. Setup Slide Show] and set the display method for the slide show.

Select the transition effect to be used when moving from one slide to another (When you click an effect, you can get a preview of how the effect looks) If you want the transition effects to be randomly assigned, select [?].

Selects whether to display the slide show continuously (left button) or quit after displaying it once (right button).

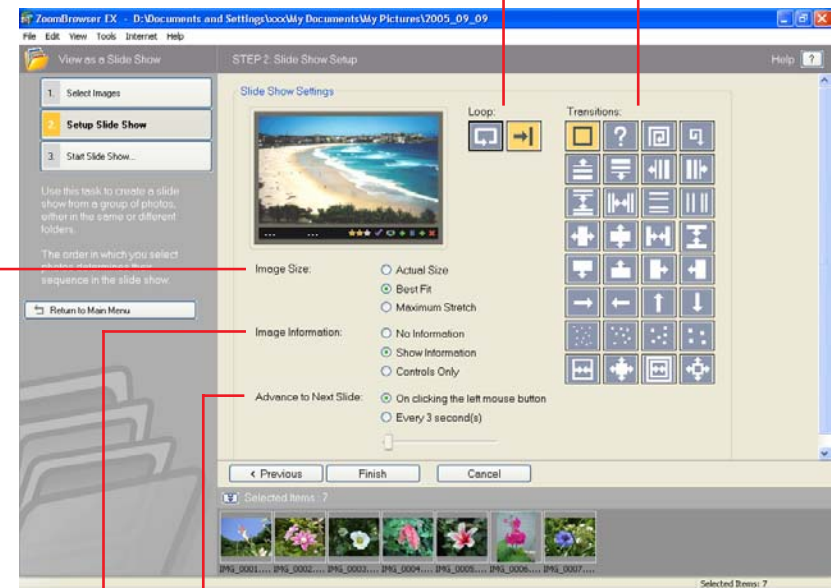

Select [On clicking the left mouse button] to have the slides proceed manually, not automatically.

Select [Every X second(s)] to have the slides advance automatically and set an interval in seconds with the slider.

Selects the display methods for image information, such as the file name and titles, and the control panel (explained on the next page).

Select the Image Size option to be used when displaying the images.



# Running a Slide Show (2/2)


## 4. Click [3. Start Slide Show].

The slide show starts.



The file name and control panel will display if the [Show information] option was selected in the [Image Information] section shown in the settings on the previous page.

## REFERENCE

- To view all images in a folder in a slide show, it is convenient to select [Select All] from the Display Control Panel menu (  ).
- You can also start a slide show by clicking the  (Slide Show) function button.

 
## EXPLANATION



## Slide Show Control Panel

While running a slide show, you can use the control buttons at the bottom right of the window to control the show.

From left to right, the Back button, Pause button and Next button.



Click here to end the slide show.

### Print Settings Button

You can select an image to print. After the slide show ends, the image for which this button was clicked displays in the print window.

### Select Images Button

You can select images. After the slide show ends, the image for which this button was clicked appears in the selected state in the Browser Area.

### Star Rating Settings Button

You can set the Star Rating for an image while it is displayed.



# Adding Sounds to Images

You can add sounds to your images and play them later as necessary.

## REFERENCE


- Sound files attached to images must be of the WAVE type (file name extension is ".wav") or of the MIDI type (".mid" or ".midi").
- Sound files recorded with the camera's Sound Recorder feature are also attached to the image.

## PROCEDURES



### How to add a sound to an image

1. Select an image in the Browser Area.
2. Click the [Edit] menu and select [Add/Remove Sound].  
The following dialog box appears.

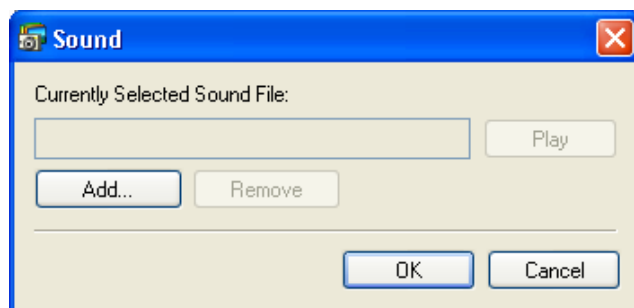


3. Click [Add].  
The file dialog box will appear.
4. Select a sound file and click [Open].

5.

Click [OK].

Sound is added to the image. A symbol similar to the one on the right displays on images with sounds attached.

This mark indicates an image with a sound.

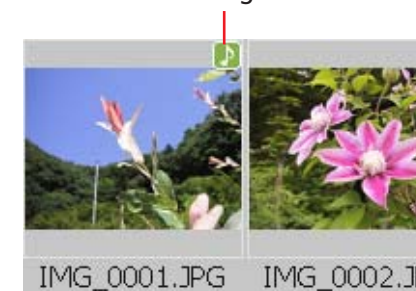

## REFERENCE


- To remove a sound from an image, select the image, click the [Edit] menu and select [Add/Remove Sound], then click [Remove]. Finish by clicking [OK] to have the sound removed.
- When you add a sound to an image, the sound file is copied to the same folder as the image.

## PROCEDURES



### How to play a sound added to an image

Select an image with a sound attachment, click the [Edit] menu and select [Play Sound].

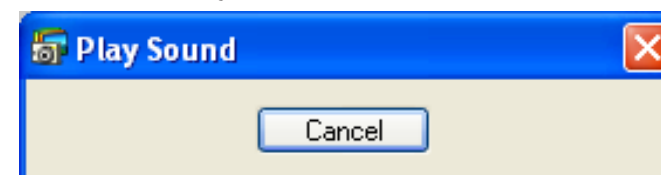

## REFERENCE

- You can also play sounds by clicking the [Play Sound] button that appears in the information display panel when the display mode is set to Preview or that appears in the Properties window.

# Printing Images

## EXPLANATION



## Two Printing Methods

You can select between the following two methods for printing images.

### One Photo per Page Print

This method prints one image per page. You can use it to print images like photos with ease. If you select more than one image, the corresponding number of pages are printed.



This method is explained in “*Printing a Single Image on a Single Page*” in Chapter 2.

### Index Print

This method prints a selection of multiple images in columns and rows in an index format.




This method is explained on the next page in “*Index Print.*”

## REFERENCE

- You can select the program to use for printing by clicking [Print] in the Main Window and selecting [Print Using Other Software].


# Index Print (1/2)

1. Click [Print] in the Main Window, followed by [Index Print].

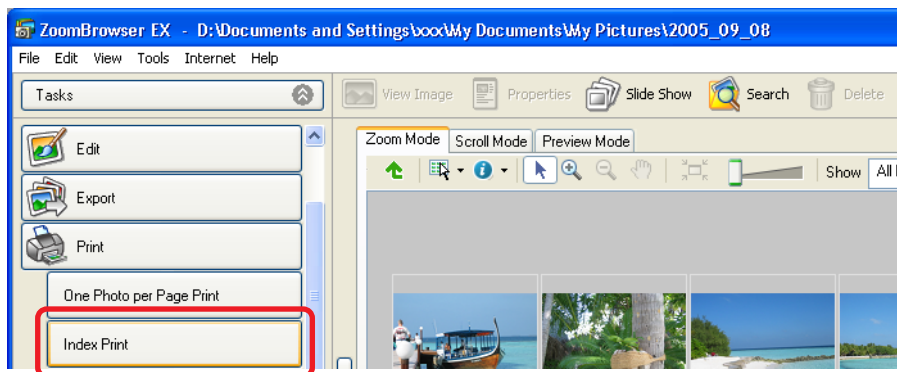

2. Confirm that [1. Select Images] is chosen and select images for printing.

The background of the selected images changes to blue.

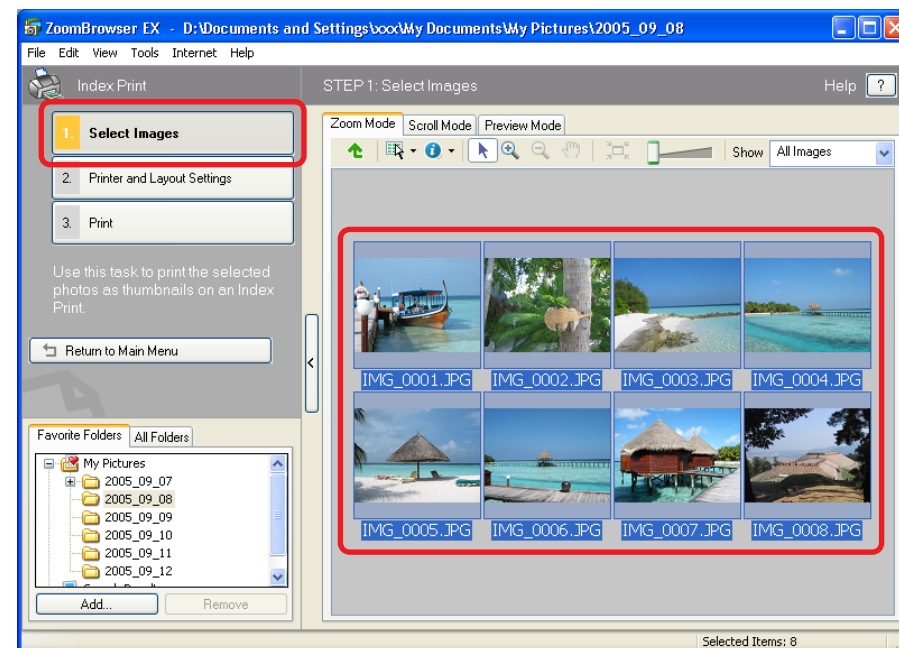

## REFERENCE

- You can select multiple images by pressing and holding the [Ctrl] key while you click on successive images. To deselect an image, hold down the [Ctrl] key and click the image again.

# Index Print (2/2)

**3.** Click [2. Printer and Layout Settings] and set the categories as desired.

**4.** Click [3. Print].  
Printing will start.

Sets the printer and paper size settings.

Sets the number of print copies.

Sets the number of rows and columns.


Sets the print settings for shooting information, comments, headers, footers and page numbers.

Rotates images.

Click this to use the trimming function (crops a portion of the image).

The functions in this section can be used after any one of the images displayed below is selected.

Click this button to switch between pages if the printout is more than one page long.

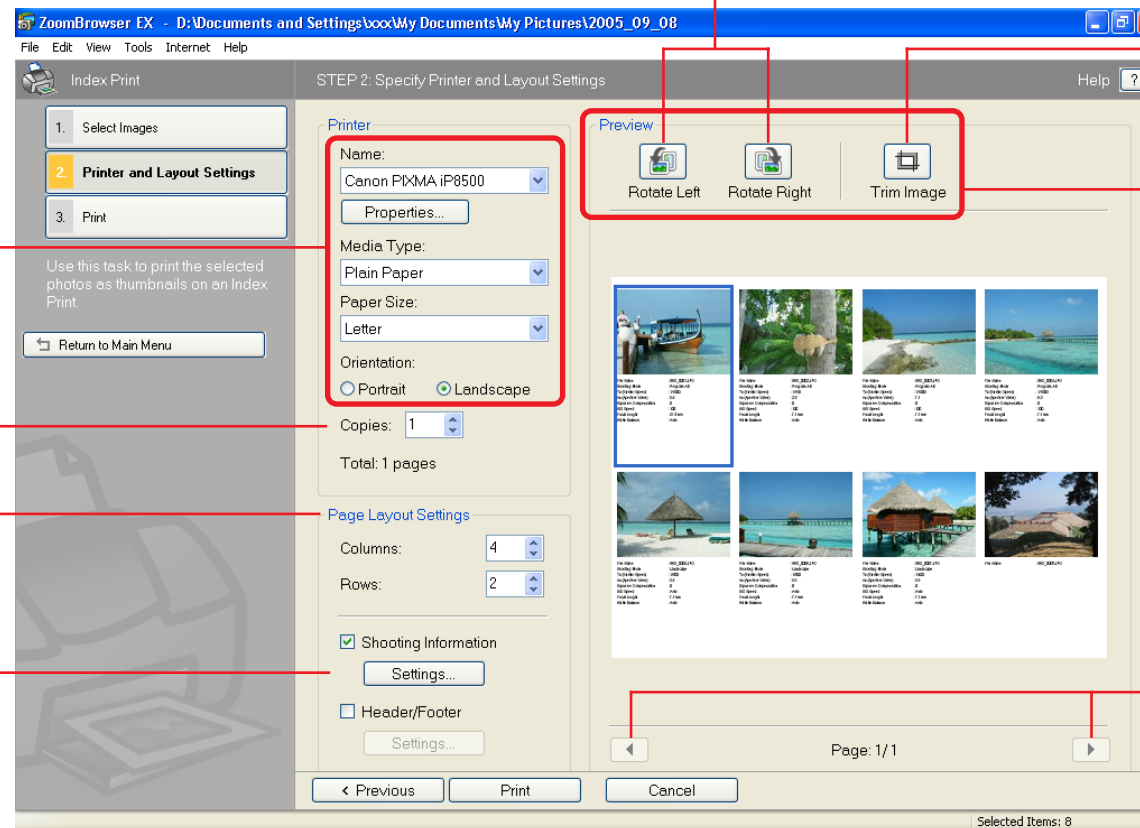

# Using My Camera Maker (Windows XP and Windows 2000 only) (1/3)


The following section introduces the [My Camera Sound Maker] function, which allows you to record and edit the start-up sound, shutter sound, operation sound and self-timer sound.

## PROCEDURES



### Starting My Camera Maker

1. Click the [Edit] menu in the Main Window and select [Manage My Camera].

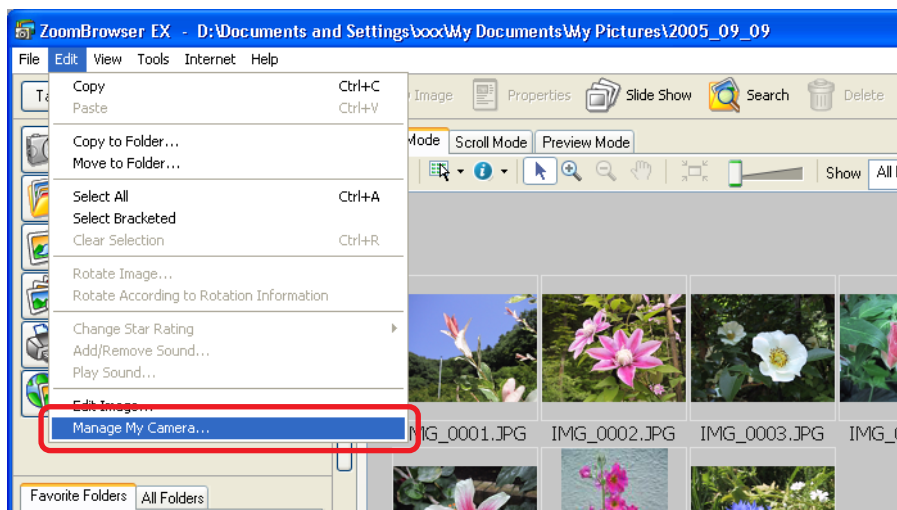

The My Camera window will open.

2. Click the [Set individually] tab, followed by [Create My Camera Data].


The My Camera Maker window will open.

## PROCEDURES



### Creating a Start-Up Image

1. Select the [Start-Up Image] tab in the My Camera Maker window.
2. Click [Open] and open the image file that will become the start-up image.
3. Select the desired area of the image and click [Cut]. This will create the start-up image.

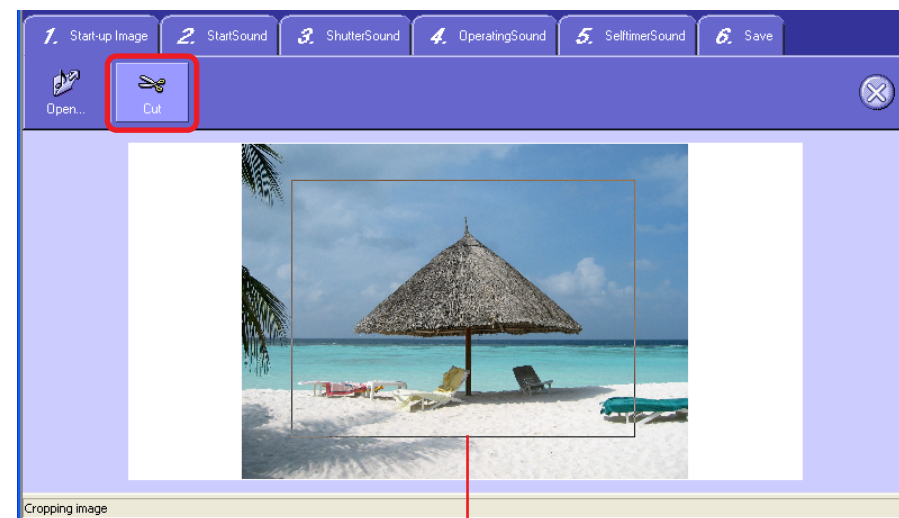

Drag the corners or sides of the frame to set the area.

# Using My Camera Maker (Windows XP and Windows 2000 only) (2/3)

## PROCEDURES



### Creating a My Camera Sound

1. Select any tab in the My Camera Maker window from [2. StartSound] to [5. SelftimerSound].
2. Create and edit sounds using the buttons in the window shown to the right.

## IMPORTANT

- The "Sound time" will display in red if the sound file exceeds the time limit.  
If this happens, select the desired sound portion using the blue and red switches and select [Cuts both switches, before blue and after red] from the [cut] menu to delete unnecessary sound portions.  
In addition, when you select [Limits blue and red switch to within limit time], the switches can no longer be moved outside of the time limit width.

## REFERENCE

- The Volume switch setting affects the volume of the sound file to be saved. In other words, if you turn down the volume of a sound you recorded on the computer because it is too loud when you play it, the sound will have a low volume when you upload it to the camera. So when the playback volume is too loud on the computer, turn down the volume of the speakers.

Use these tabs to switch between sound files for recording and editing.

Click here to record sounds.

Click here to open sound files.

Change the file type.

Cuts out unnecessary sound portions.

Ends the recording.

StartSound Creating

Adjusting the slider's blue and red switch cuts the sound.  
When the sound is too long and fine adjustment is difficult, you can delete unnecessary portions with the cut button.  
When sound adjustment is completed, click save tab to save.

1. Start-up Image 2. StartSound 3. ShutterSound 4. OperatingSound 5. SelftimerSound 6. Save

Record... Open... Sound type Cut

Sound time: 0.9 Sec

Volume

Sets the blue and red switches.

Plays sounds.

The blue and red switches designate the sound range. (You can delete useless sections by clicking the [Cut] button after having selected the desired sound portion with the switches.)

Shows from where the sound starts to play.

Volume

Moves blue and red switches freely  
Limits blue and red switch to within limit time




# Using My Camera Maker (Windows XP and Windows 2000 only) (3/3)

## PROCEDURES



## Saving Data

Switch to the Save window in the [5. Save] tab.

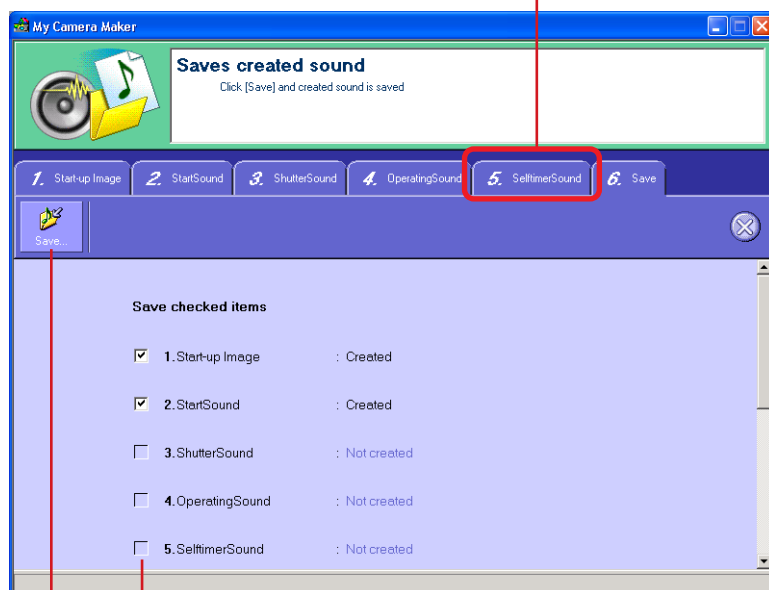

Select the sound to be saved.


Click here to save a sound (A window allowing you to name the file will display).

## REFERENCE

- The actual file name is composed of the name of your choice in the first part, followed by characters specifying the image or sound type (\_OP01 or \_SS01) and the extension (.JPG or .WAV) in the latter part.
- When a number of different types of sounds are saved at the same time, the first part of their file name will be the same.


# Playing Sound Files

Sound files recorded with the camera's Sound Recorder feature can be downloaded like regular image files to the computer. The sound file symbol will appear on the thumbnails in the Browser Area.

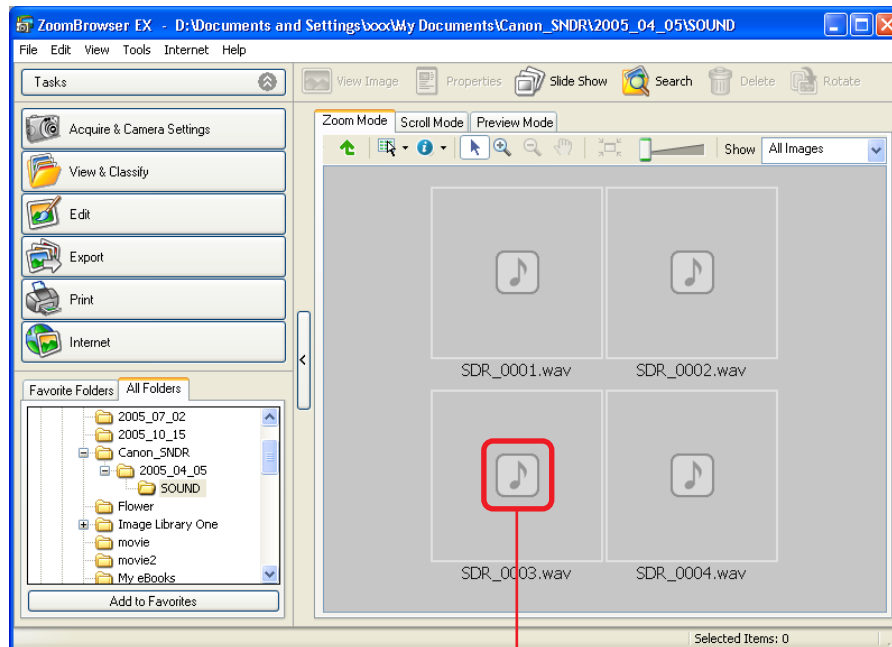

Sound File Symbol

Double-clicking a thumbnail causes the Viewer Window to display and play the sound.

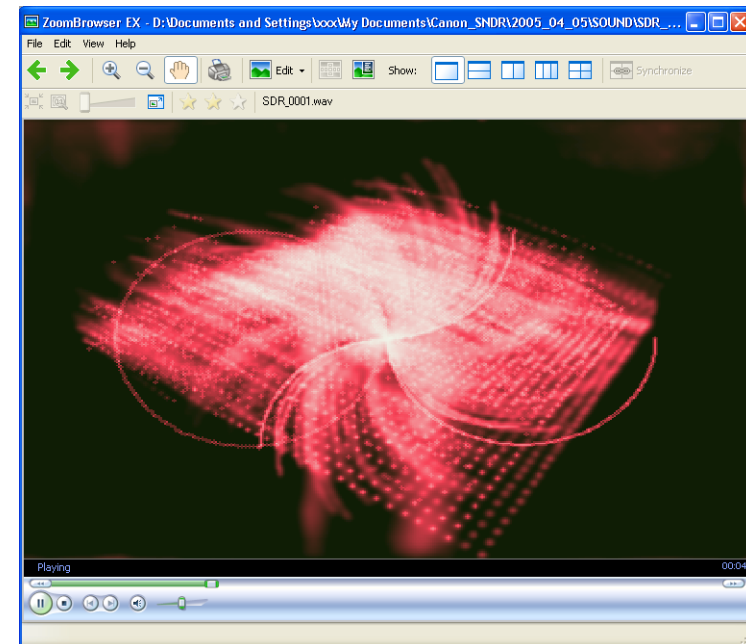


## REFERENCE

- You can also replay a sound file by selecting it in the Main Window, clicking the [Edit] menu and selecting [Play Sound]. In addition, you can replay a sound file by clicking the [Play Sound] button that appears in the information display panel when the display mode is set to Preview and that appears in the Properties window.

# Playing Movies

ZoomBrowser EX supports movies.

You can download movie files and display them in the Browser Area just like ordinary images. The movie thumbnail and movie icon will show in the Browser Area. (Only the movie icon appears for QuickTime movies.)

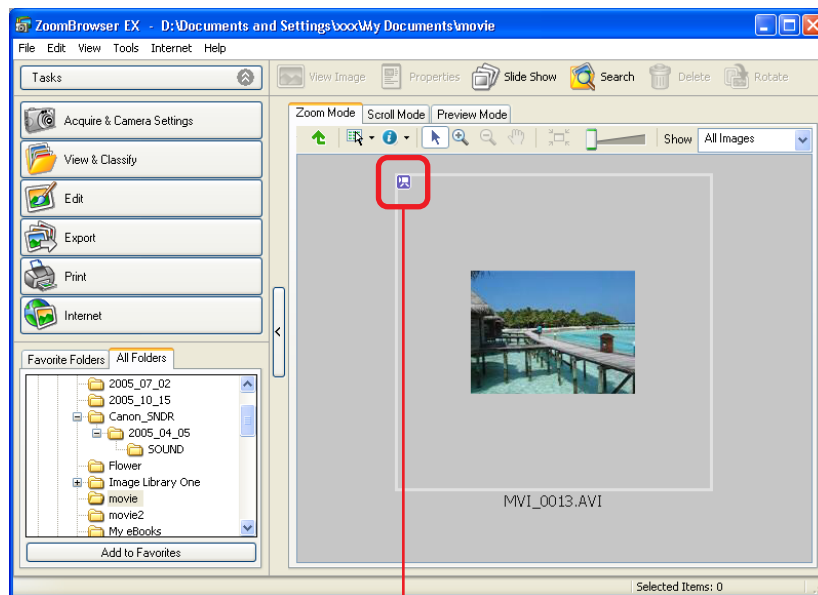


Movie Icon

## IMPORTANT

- The QuickTime program is required to play movies on the Windows 2000, Windows Me and Windows 98 SE operating systems. See the *Software Starter Guide* and install QuickTime.

Double-clicking a thumbnail causes the Viewer Window to display and play the movie.

You can save the displayed scene as a still image.

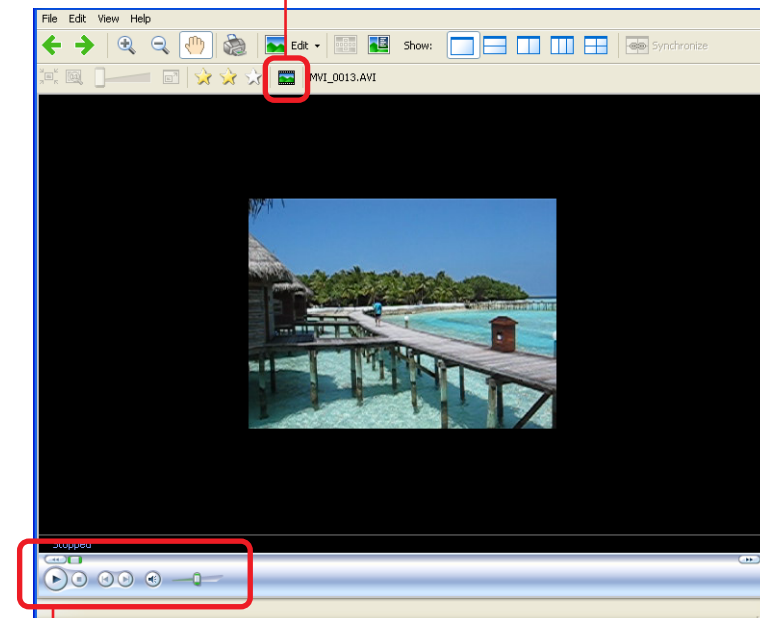

You can play movies and control the sound volume.

# Editing Movies (1/4)

You can create movies by adding various effects: linking movies and still images that have been downloaded to a computer, superimposing titles and other text, and adding background music.

## IMPORTANT

- If you are using Windows 2000, Windows Me or Windows 98 SE, the QuickTime program is required to edit movies. See the *Software Starter Guide* and install QuickTime.

## REFERENCE

- Movies are saved as Motion JPEGs (AVI).

## PROCEDURES




## Procedures for Editing Movies

1. Click [Edit] in the Main Window, followed by [Edit Movie].
2. Confirm that [1. Add Images] is selected, and select the images (movies or stills) in the Browser Area.  
You can select multiple movies or still images.
3. Follow steps 2 to 5 at the left of the window and click [6. Exit] when you finish editing the movie.  
The features and procedures for each step are explained on the following pages.

Follow these steps to proceed.

Click this button for detailed help with operating procedures.

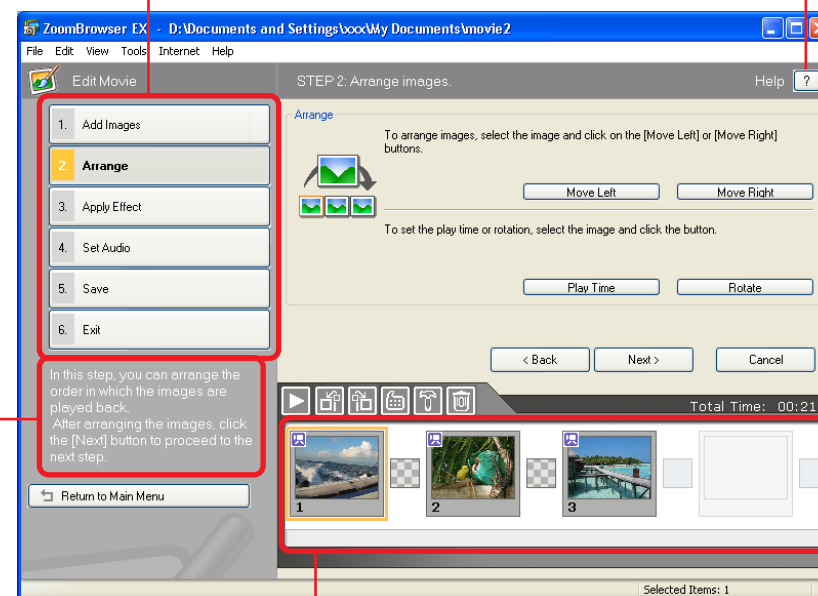

Guidance

Storyboard Area

Displays thumbnails of the selected images.  
Links images in order from left to right.

# Editing Movies (2/4)

EXPLANATION




## Features of the Storyboard Area

Changes the order of the selected images.

Displays the properties of the selected image.

Deletes the selected image from the storyboard area.


Click this button to play the movie being edited.

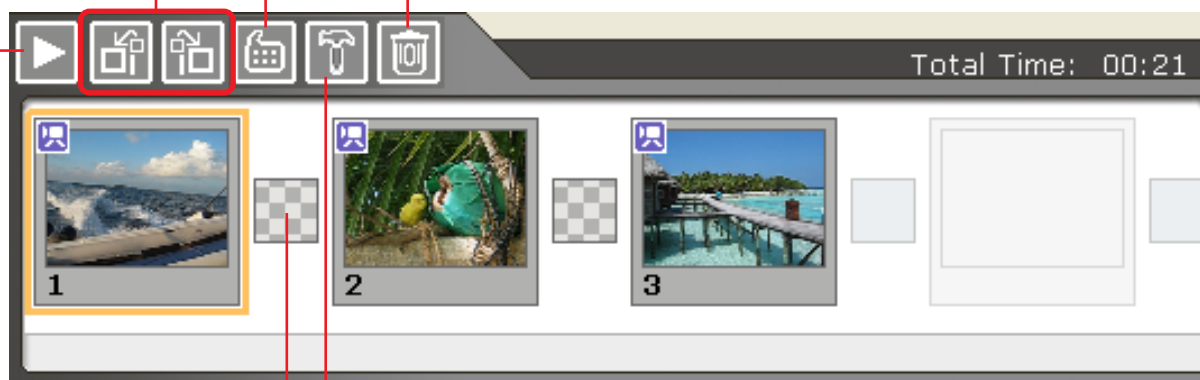

### Transition Box

Displays the icon of the transition effect used to link adjacent images.

Displays a dialog with the general movie editing settings.

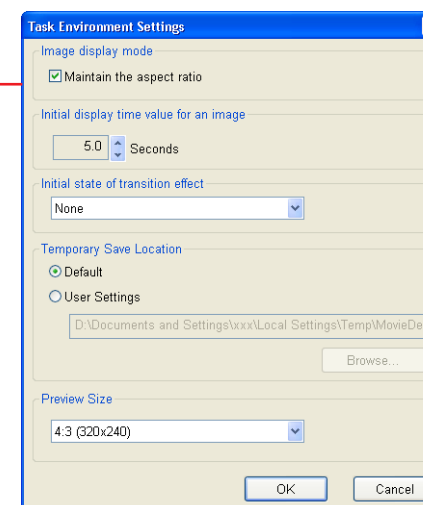


# Editing Movies (3/4)

EXPLANATION



## Features of the [2. Arrange] Window

Moves the image selected in the storyboard area one position to the left or right.

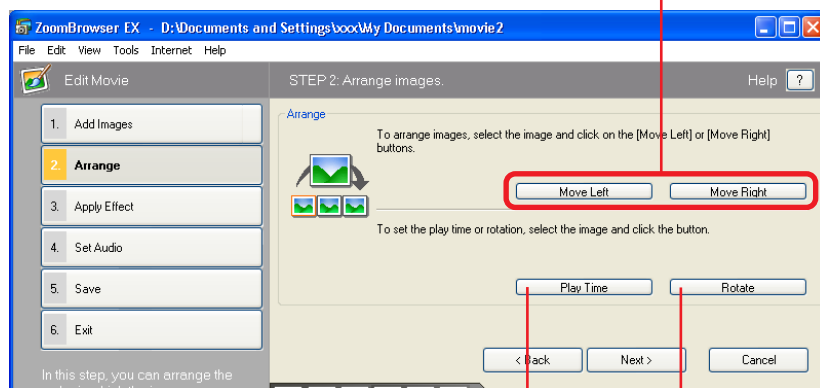

You can set the playback range (start and stop points) of a movie selected in the storyboard area by clicking this button.

You can set the play duration of a still image selected in the storyboard area by clicking this button.

You can rotate or flip the selected image.


EXPLANATION



## Features of the [3. Apply Effect] Window

Superimposes titles and other text on the image selected in the storyboard area.

You can set the font, display duration, display position and scrolling attributes of the text.

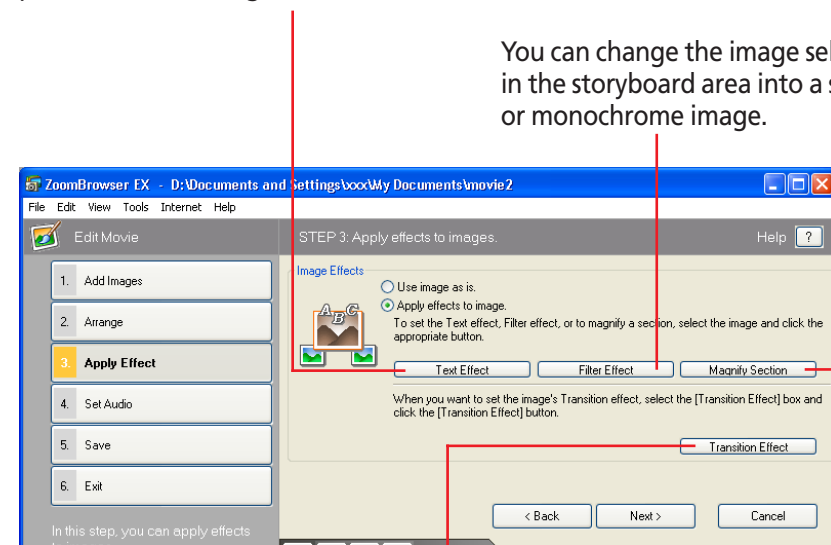

You can change the image selected in the storyboard area into a sepia or monochrome image.

You can set the transition effect between images by selecting the transition effect box in the storyboard area and clicking this button.

Magnifies a portion of the selected image.




# Editing Movies (4/4)

EXPLANATION



## Features of the [4. Set Audio] Window

You can link MP3 and WAV audio files as background music or sound effects. When you link a sound file using this procedure, a bar appears under the thumbnail in the storyboard area indicating the duration of the audio file.

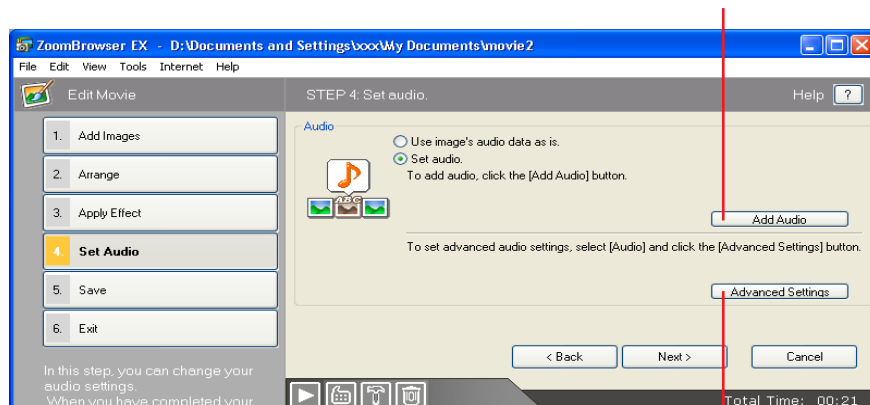

You can adjust the volume or set the fade-in or fade-out effect for a movie or its linked audio file by selecting it in the storyboard area and clicking this button.


## REFERENCE

- Sound files recorded with the camera's Sound Recorder feature can also be linked as background music or sound effects.

EXPLANATION



## Features of the [5. Save] Window

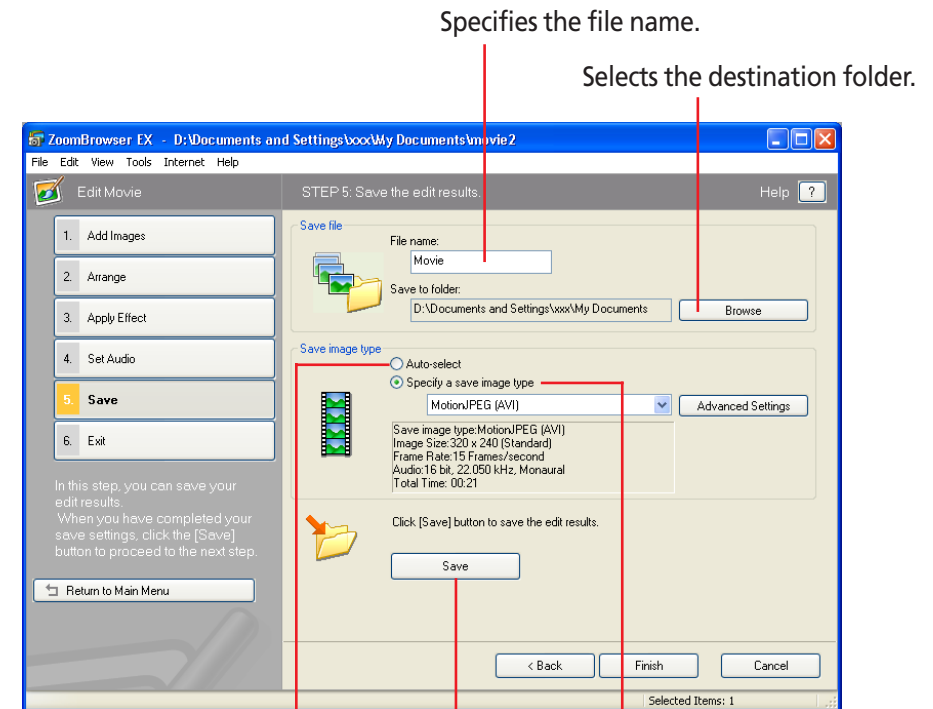

Select this to save it with standard settings.

Saves the file.

Select this to make advanced settings. You can set the size (horizontal and vertical pixel counts), frame rate (frames per second) or audio settings of the movie as it will be saved by selecting [Motion JPEG (AVI)] in the list below and clicking [Advanced Settings].

# Exporting Movies (1/2)

This feature changes a movie to another file type or size and exports it.

## PROCEDURES




### Procedures for Exporting Movies

1. Click [Export] in the Main Window, followed by [Export Movies].
2. Confirm that [1. Select Movies] is selected, and select a movie in the Browser Area.  
You can select multiple movies.
3. Follow steps 2-4 at the left of the window to proceed and click [5. Start export] to finish.

The features and procedures for each step are explained on the following pages.

Follow these steps to proceed.

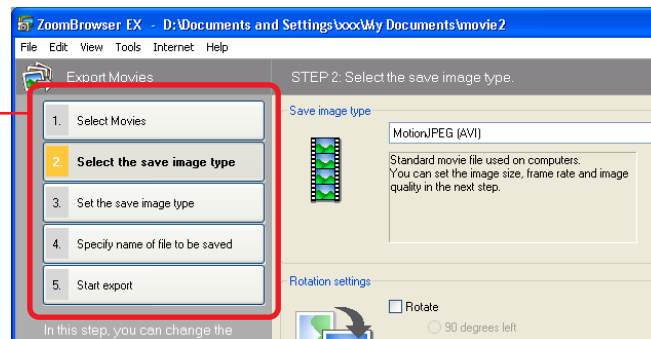


## EXPLANATION



### Features of the [2. Select the save image type] Window

Select the format to save the movie file.

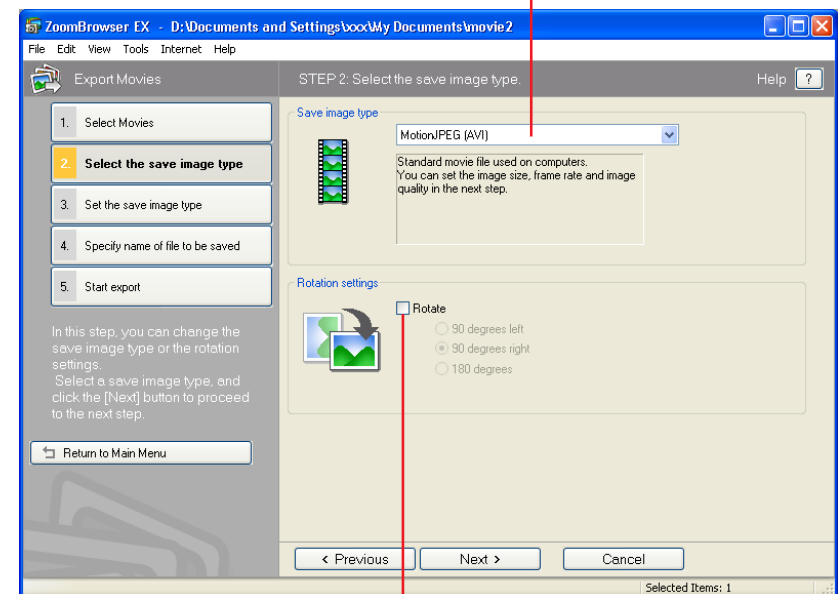

To save the movie in a rotated orientation, click here to add a check mark and specify a rotation direction.  
This feature is handy for rotating and saving movies shot with the camera held vertically.


# Exporting Movies (2/2)

## EXPLANATION



### Features of the [3. Set the save image type] Window

To change the size of the movie being exported, select [Zoom specification] or [Size specification] and set the size.

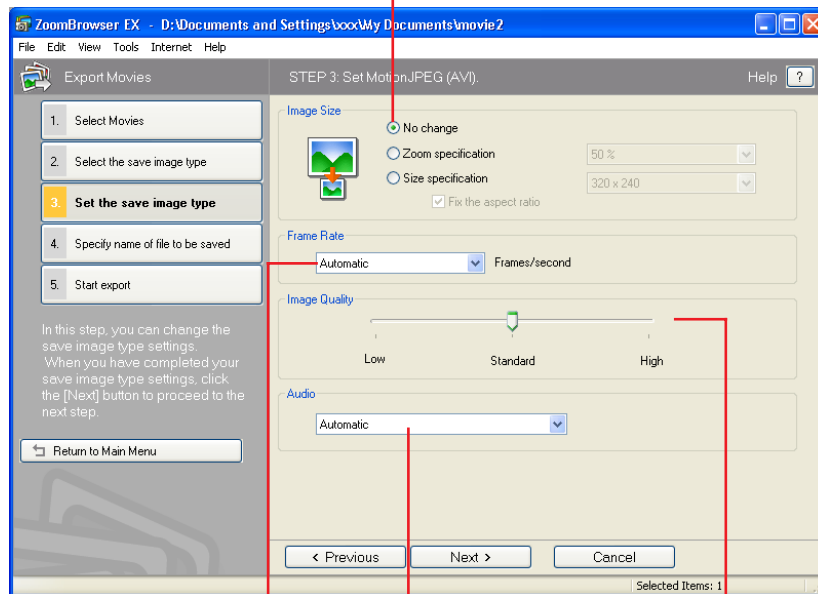

Selects the number of frames displayed each second.

Selects the audio quality.


Sets the image quality. Although less image degradation occurs the higher the image quality is set, the file size becomes larger.

## EXPLANATION



### Features of the [4. Specify name of file to be saved] Window

To save the movie under its original file name, select [Same as original image]. To assign sequential numbers in a multiple movie selection, select [Assign Sequence No.] and specify a root name to precede the numbers.

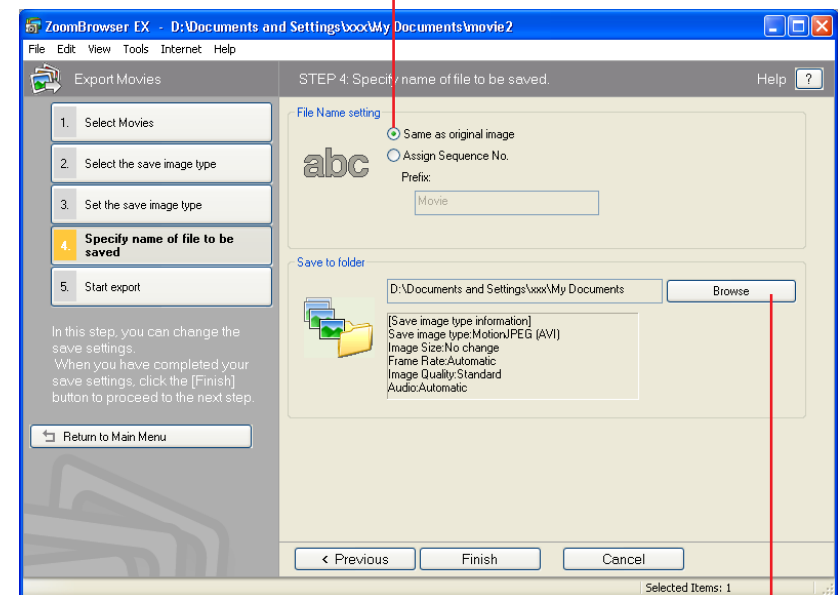

Selects the destination folder.

# Extracting Frames from a Movie (Windows XP only) (1/2)

This feature extracts still images from movies and saves them as image files. It can only be used with the Windows XP operating system.

## REFERENCE


- You can also save the specified image as a still from the Viewer Window.

## PROCEDURES




## Extracting Frames from a movie

- Click [Export] in the Main Window, followed by [Extract frames from a movie].

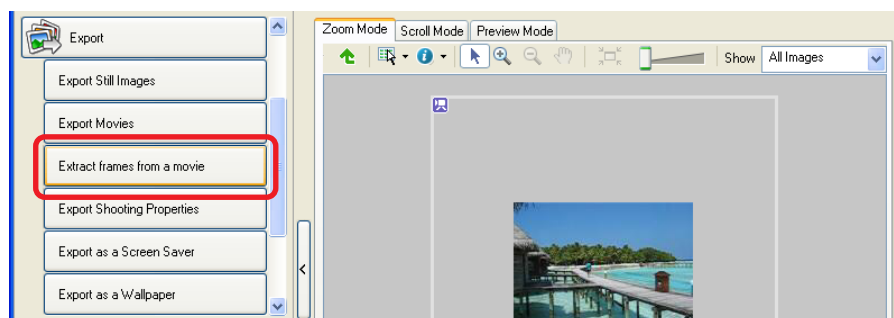

- Confirm that [1. Select movie] is chosen and select a movie in the Browser Area.
- Click [2. Set extraction method] and select the still extraction method.

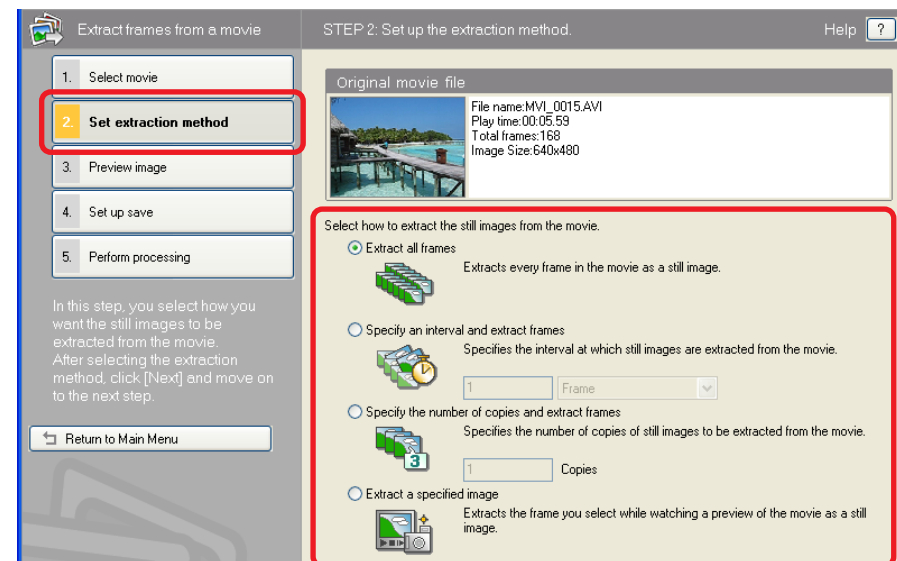

### ■ Extract All Frames

Extracts all frames in the movie as stills. Please note that the image numbers and file sizes may be large.

### ■ Specify an Interval and Extract Frames

Extracts frames as stills from a specified frame range or time interval.

### ■ Specify the Number of Copies and Extract Frames

Extracts a specified number of stills from the entire movie. The extraction interval is calculated based on an equal distribution of the specified number of stills.

### ■ Extract a Specified Image

Extracts stills from scenes that catch your attention.

# Extracting Frames from a Movie (Windows XP only) (2/2)


- 4.** Click [3. Preview image] and check the extracted stills. If you selected [Extract a specified image] in the previous window, the movie will display in the upper part of the window. Display the images you want and click the [Add] button. (You can add as many stills as you wish.)

Rotates images (all).

Changes the thumbnail size.

Clears or adds check marks from or to all at once.

Clears check marks from all the preceding or subsequent images.

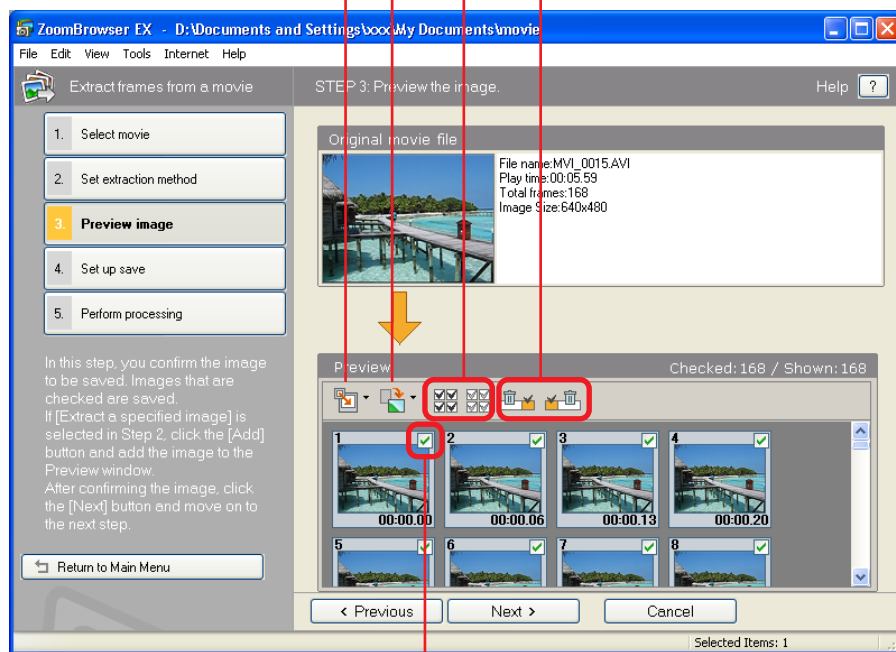


Saves images with check marks only.

- 5.** Click [4. Set up save] and specify a destination and file name.

Sets the file name.

Sets the destination folder.

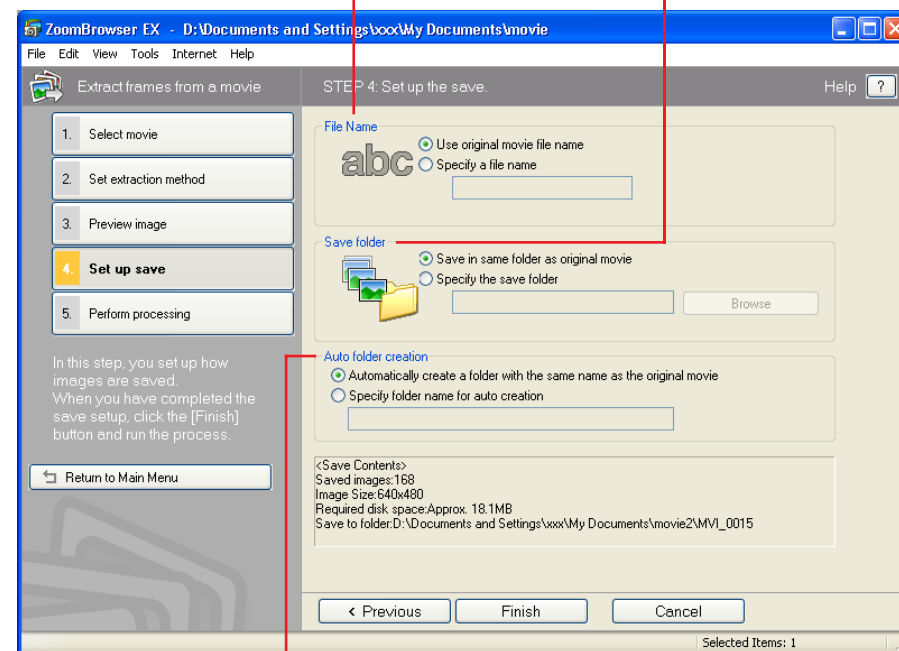

Sets the folder name for auto play.

- 6.** Click [5. Perform processing]. Stills will begin to be extracted.

# Converting RAW Images (1/6)

If your camera supports RAW images you can handle higher quality images.

However, since they are a special type of image, they cannot be opened by many image editing programs. It is first necessary to convert them into standard image files.

This section explains conversion procedures.

## IMPORTANT

- See the user guides for your camera to check whether your camera supports RAW images or not.

## REFERENCE

- RAW images are extremely high-quality images that are not subject to any deterioration due to compression processing.
- See the Help file for conversion details. You can open the Help file after clicking [Process RAW Images] in Step 2 by clicking the [Help] menu in the Main Window that opens.


## PROCEDURES



## Converting RAW Images

1. Select a RAW image in the Browser Area.
2. Click [Edit] in the Main Window, followed by [Process RAW Images].

When the window showing the procedures for converting and adjusting RAW images appears, click [OK].

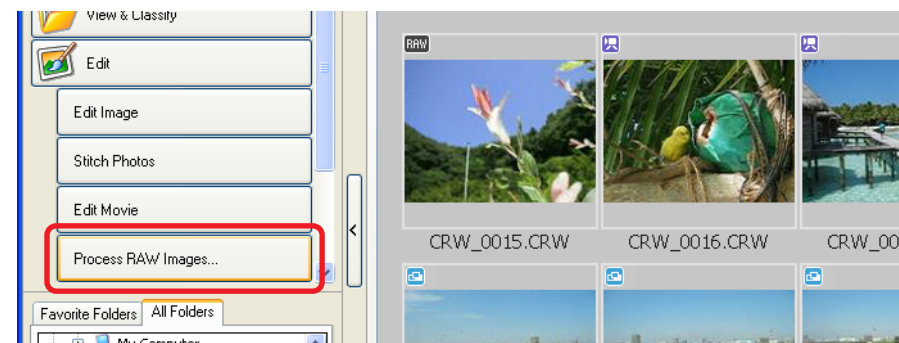

As shown on the next page, the Main Window, Navigator window, and Image Quality Adjustment Window will display.

## REFERENCE

- You can also convert images by clicking the [Tools] menu and selecting [Processing RAW Images].




# Converting RAW Images (2/6)

## Main Window

The conversion is conducted in this window.

You can use this button to switch between images and set various conversion settings, such as the image rotation.

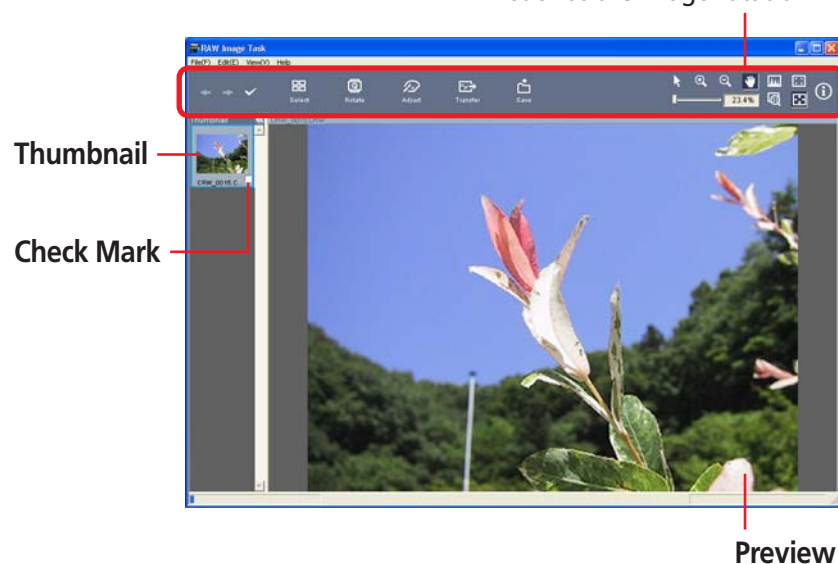


## Navigator Window




You can change the area of the preview image displayed when it is zoomed in the Main Window by dragging these red symbols.

## Image Quality Adjustment Window

You can adjust the brightness, contrast and coloration of a RAW image as it is converted. See the *Features of the Image Quality Adjustment Window* for details.

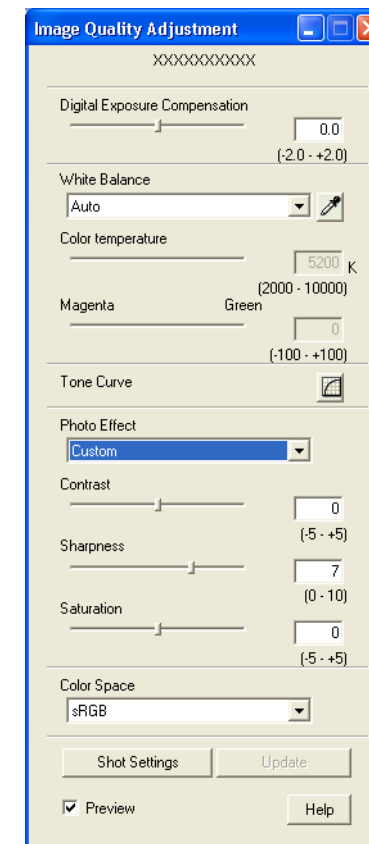

## REFERENCE

- If the Navigator is not displayed, you can click the [View] menu in the Main Window and select [Show Navigator] or click the  in the window's upper right.

# Converting RAW Images (3/6)


3. Adjust the image quality as required in the Image Quality Adjustment Window.
4. Click the [Save] button in the Main Window, set the image type and save destination, and then click [Save].

Selects images that will be saved with the same settings.

Selects the image type, compression ratio and resolution.

Sets the destination folder for the image file.

You can change the image file name.

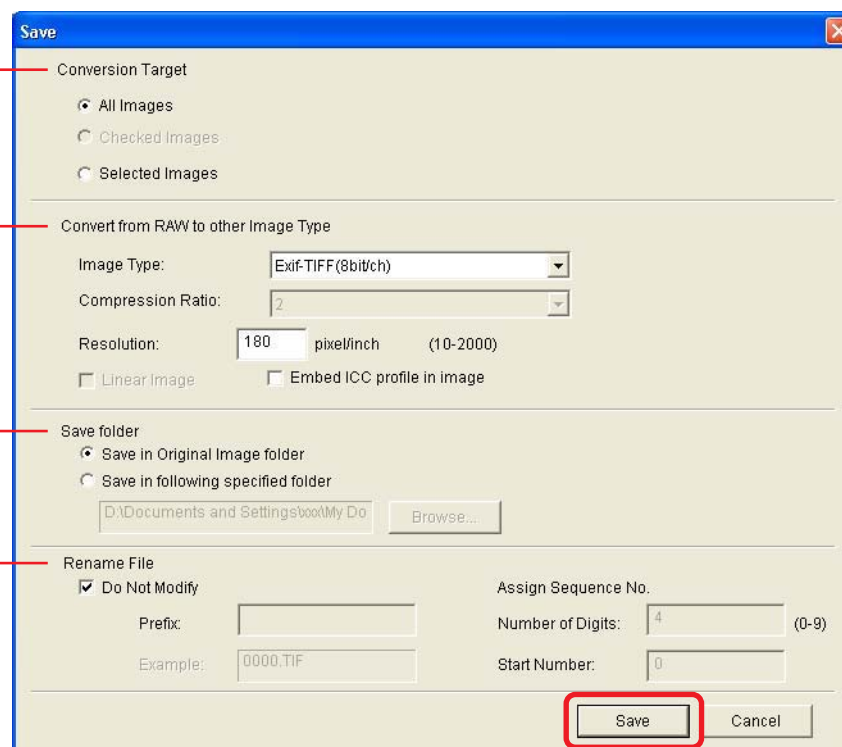

# Converting RAW Images (4/6)

## EXPLANATION



## Features of the Image Quality Adjustment Window

The adjustable categories vary according to your camera model.

**Image Quality Adjustment**

XXXXXXXXXX

Digital Exposure Compensation: 0.0 (-2.0 - +2.0)

White Balance: Auto (Color temperature: 5200 K (2000 - 10000))

Magenta: 0 Green: 0 (-100 - +100)

Tone Curve

Photo Effect: Custom

Contrast: 0 (-5 - +5)

Sharpness: 7 (0 - 10)

Saturation: 0 (-5 - +5)

Color Space: sRGB

Shot Settings Update

☒ Preview Help

Adjusts the digital exposure compensation.

Adjusts the white balance by the light source or color temperature, etc.

Adjusts the photo effect, contrast, sharpness and saturation.

With a check mark here, settings changes in this window are immediately reflected in the image.

You can adjust the RGB channel settings together or individually.

Selects preset color schemes or My Color custom color schemes (see next page for explanation).

You can set the color space for the output.

When there is no check mark in the Preview box, this button will display the image that reflects the selected settings.

Restores all adjustments to the initial shooting settings.

# Converting RAW Images (5/6)

## PROCEDURES




## Registering Custom Color Schemes (My Color)

If you register a custom color scheme as a “My Color” scheme, you can apply this scheme to additional images when you convert RAW images.


### IMPORTANT

- To register a “My Color” scheme, two images are required: the pre-adjustment image and the post-adjustment image. Use ZoomBrowser EX’s image editing functions to prepare the two images before proceeding. Save the two images as BMP, TIFF or JPEG images.
- My Color schemes cannot be used with some camera models.


1. Click the [Edit] menu, select [My Colors] and select [Create and Add My Color] from the next menu.

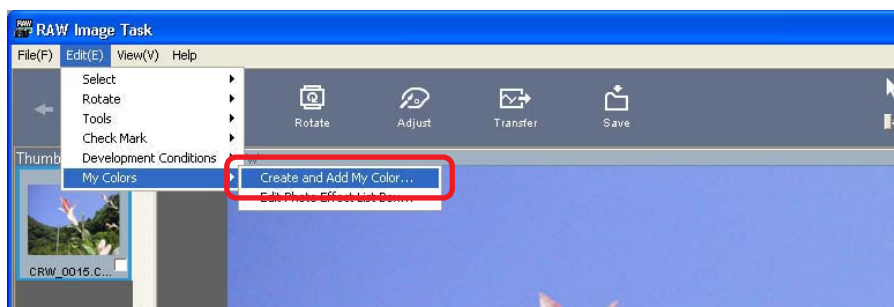

2. When the Create My Color window displays, click [Next].

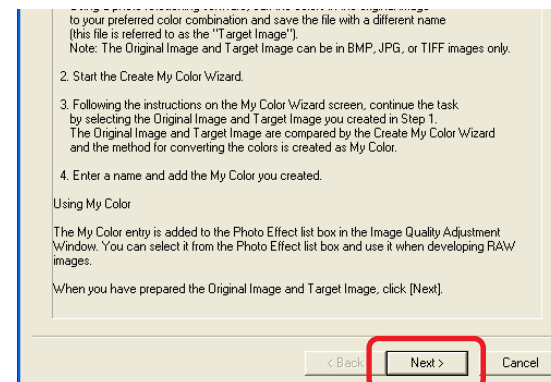


3. Click [Select] beside the original image, select the pre-adjustment image (original image) and click [Next].

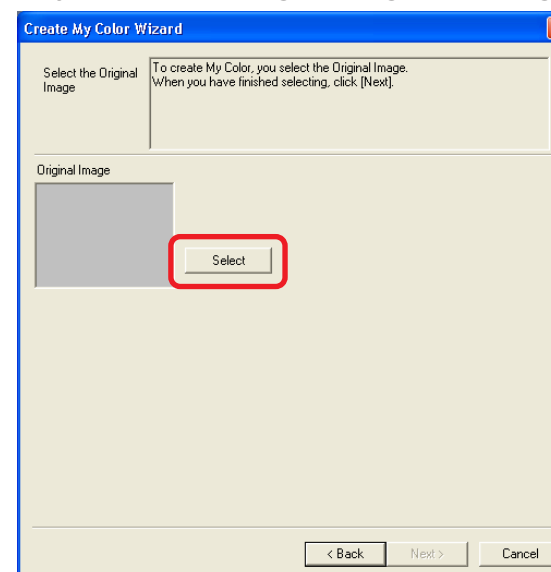


# Converting RAW Images (6/6)

4. Click [Select] beside the target image, select the post-adjustment image (target image) that you have modified with an image editing program, and click [Create].

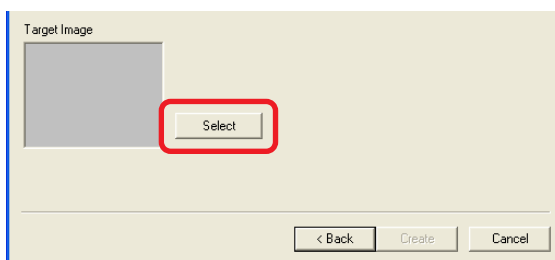

The program will calculate the differences between the original and target images, apply those corrections to the original image and display the results as the Preview My Color Applied to the Image.

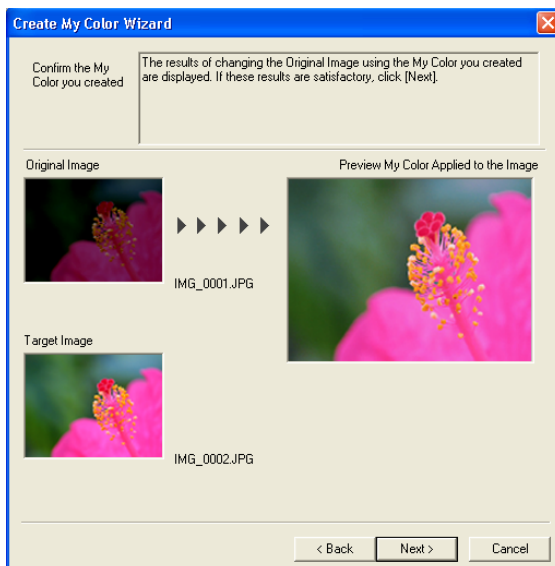

5. Check the Preview My Color Applied to the Image and click [Next].
6. Type a name or comment and click [Finish].

## REFERENCE

- You can apply the registered My Color scheme to additional RAW images when you convert them by selecting it from the Photo Effect menu in the Image Quality Adjustment Window.

## EXPLANATION




## Other Features

You can also use the following features in the Main Window.

You can open converted images in other application programs.

Displays histograms.

Displays shooting information.

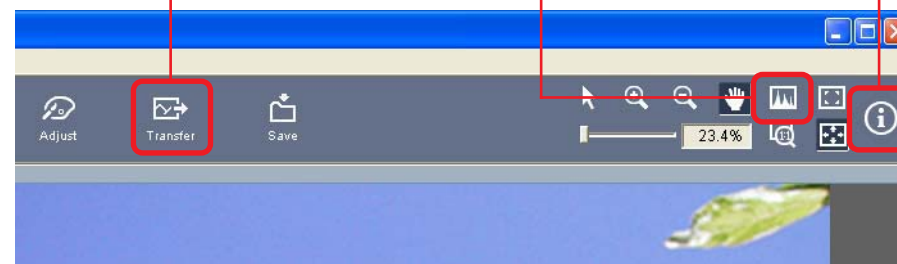

# Stitching Panoramic Images - PhotoStitch

If you have several images of the same scene with only slight differences, you can use PhotoStitch to connect the images together to make a panoramic image. This section explains how to use this program to stitch images.

## REFERENCE

- For detailed information on how to use PhotoStitch, refer to PhotoStitch Help (accessible from the [Help] menu).
- You can make it easier to stitch images together by using the camera's Stitch Assist mode to shoot them.

## PROCEDURES




### Opening PhotoStitch

1. Click [Edit] in the Main Window, followed by [Stitch Photos].
2. Confirm that [1. Select Images] is selected, and select the series of images in the Browser Area.
3. Click [2. Open PhotoStitch].

## REFERENCE

- You can also start PhotoStitch by clicking the [Tools] menu and selecting [Stitch Photos].

Then, follow the instructions on the upper part of the PhotoStitch window, and stitch your images together.

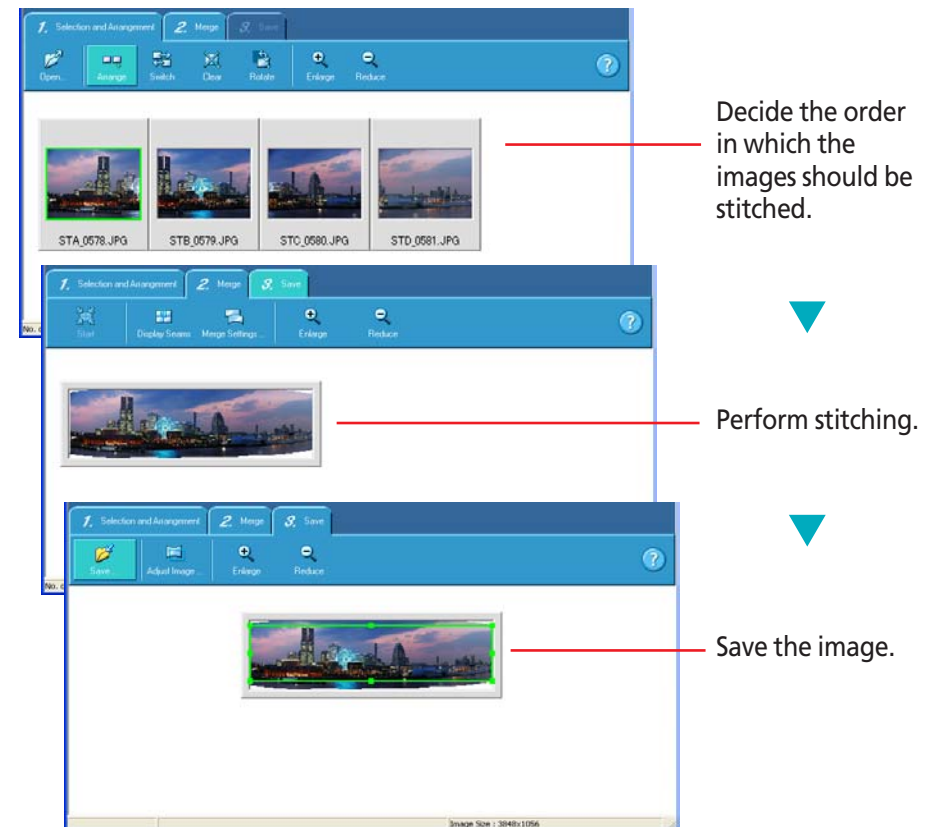



# Saving Images to CD-R/RW Disks (Windows XP Only)

You can copy or save images onto CD-R disks and CD-RW disks. The shooting information is saved along with the image.

## IMPORTANT


- This feature is only possible with computers satisfying the following conditions.
  - Windows XP is pre-installed
  - A CD-R/RW drive is built-in

## REFERENCE

- You can add additional images to a CD-R/RW disk that has been written to previously.

1. Place a CD-R/RW disk in the drive.


2. If a window like the one shown here appears, click [Cancel] and close the window.

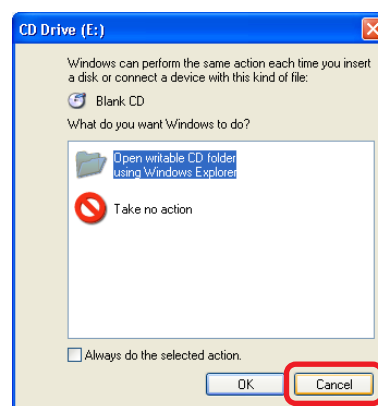

3. Click [Export] in the ZoomBrowser EX Main Window, followed by [Backup to CD].

4. Confirm that [1. Select Images] is selected, and select the folder or image in the Browser Area.

5. Click [2. Specify Backup Settings], select the destination CD-R/RW drive and input a CD title.

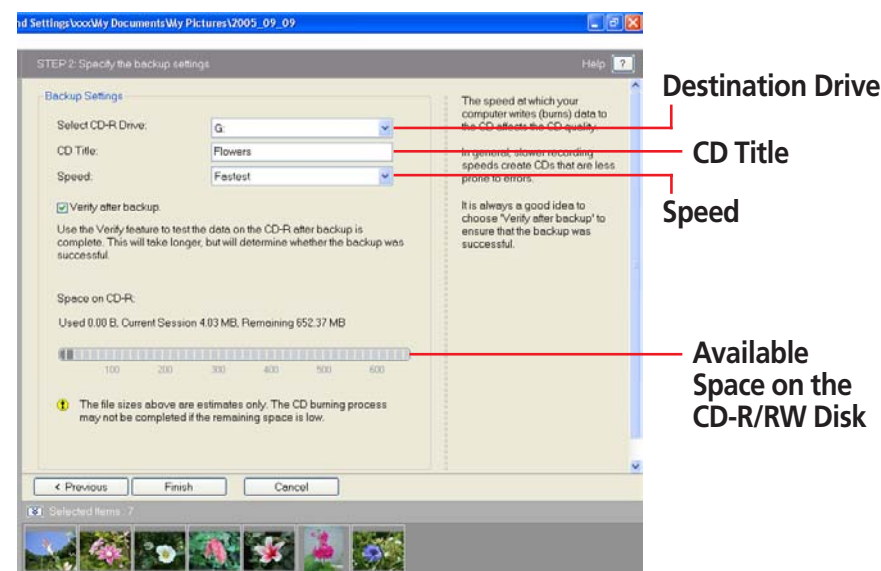

6. Click [3. Start Backup]. This will copy the images to the CD-R/RW disk. The disk will be ejected from the drive when copying is complete.

## REFERENCE

- You can also save images to a CD by clicking the [File] menu and selecting [Backup to CD].

# Supported Image Types

The following is a list of image types supported by ZoomBrowser EX.

## EXPLANATION



### Readable data types

ZoomBrowser EX can read the following image types.

#### ■ JPEG (.JPG)

Most cameras use this image type. It compresses at very high ratios, taking advantage of the characteristics of the human eye. However, because it is an irreversible compression method (part of the data is lost during compression), if you process and save an image repeatedly using this method, the image may become rougher.

#### ■ RAW (.CRW)

This is a proprietary image type provided by Canon. It saves the output of the image pixels from a digital camera without any deterioration in the quality of the image. Some cameras might not support this image type.

#### ■ Windows bitmap (.BMP)

This file type comes standard with Windows. Most Windows programs support it.

#### ■ TIFF (.TIF)

This is a relatively popular image type. It is widely supported by non-Windows programs (such as Macintosh).

#### ■ PhotoCD (.PCD)

This is the image type used by Photo CDs.

#### ■ Video clip (.AVI)

Standard Windows movie image type. The movie thumbnail and a movie icon show in ZoomBrowser EX's Browser Area.

#### ■ QuickTime (.MOV)

This is a movie which display as a movie mark in the Browsing Area of ZoomBrowser EX.

#### ■ MPEG4 (.ASF)

Movies that integrate multimedia data, such as video, audio and text. Primarily used by Windows programs. The MPEG4 compression technology allows for compact file sizes and delivery over networks.

# Customizing Preferences (1/4)

ZoomBrowser EX provides preference settings that you can customize. This section introduces the preference settings you can change.

## REFERENCE


- ZoomBrowser EX offers a wide variety of preference settings that you can customize. Therefore, before you modify an option, access Help from the [Help] menu or [Help] button to see a description of the option.

## PROCEDURES



### Opening the Preferences dialog box

Click the [Tools] menu and select [Preferences] to open the Preferences dialog. To change a setting, click the appropriate tab in this window.

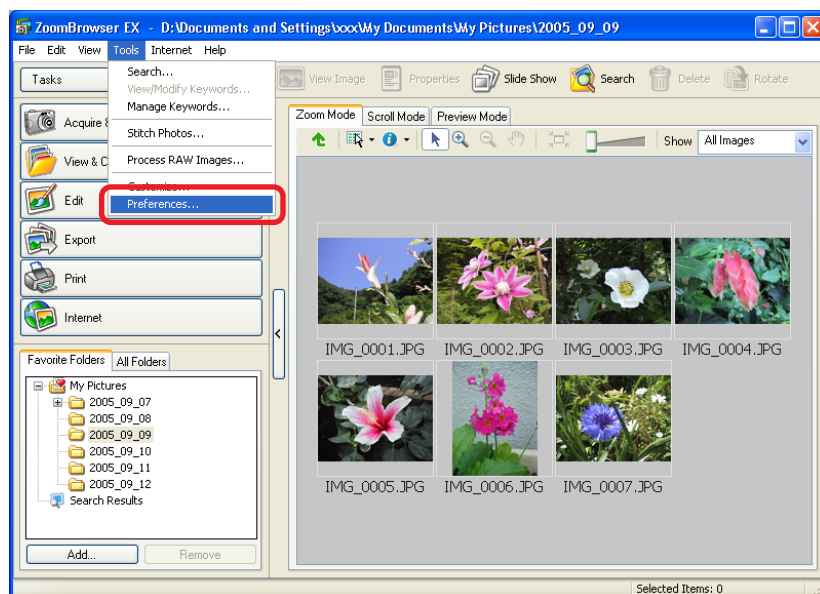


## EXPLANATION



### General Tab

This tab sets the way the tiny version of the images (thumbnail) is handled in the Browser Area, and sets the zoom behavior.

Place a check mark here to adjust the image colors to the monitor's color profile.

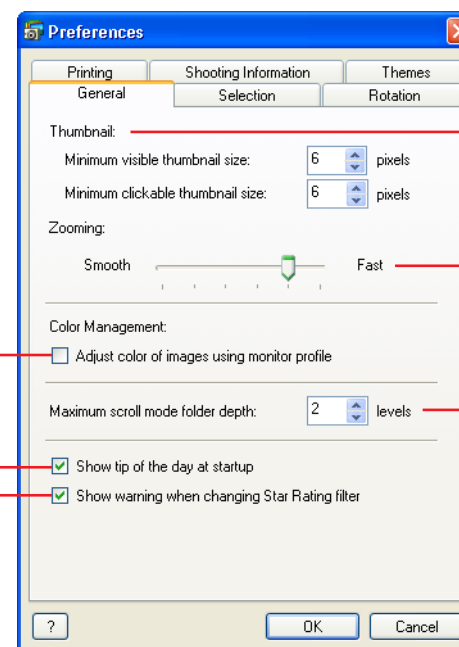

Sets the thumbnail settings for the Browsing Area.

This group box controls the way the zoom operations react in the Browsing Area (Moving the slider to the right increases the image display speed).

Sets the depth of folder (level in the hierarchy) that will display in the Scroll mode. The default setting is 2.

To change the displayed Star Rating, place a check mark here to have a confirmation message display.

Place a check mark here to display tips when ZoomBrowser EX starts up.


# Customizing Preferences (2/4)

EXPLANATION



## Selection Tab

This tab sets the image selection methods and the image selection steps used with the task buttons.

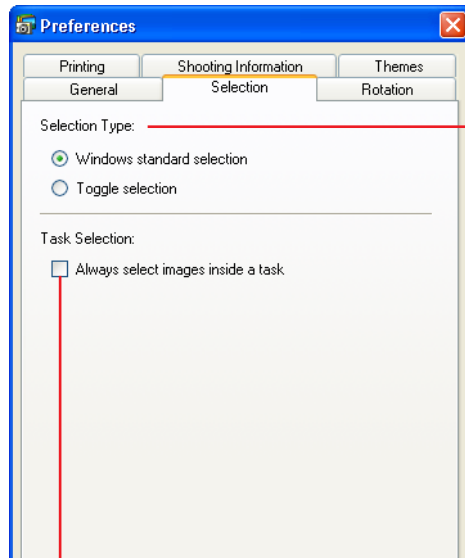

Sets the image selection method.

Place a check mark here to always require the image selection step when performing a procedure with the task buttons. (If the check mark is cleared, the image selection step is eliminated when an image is already selected in the Browser Area.)

## REFERENCE


- If Toggle Selection is selected, clicking an image selects it. To deselect it, click it again. You can select multiple images by clicking on more images in succession.

EXPLANATION



## Rotation Tab

ZoomBrowser EX displays images rotated to match the camera display orientation. However, it does not alter the image data itself. If a rotated image is opened in a program that does not support rotated display, it will appear in its pre-rotation state on its side. You can have the image data rotated to the vertical orientation when it is downloaded from the camera by changing this [Rotation] setting.

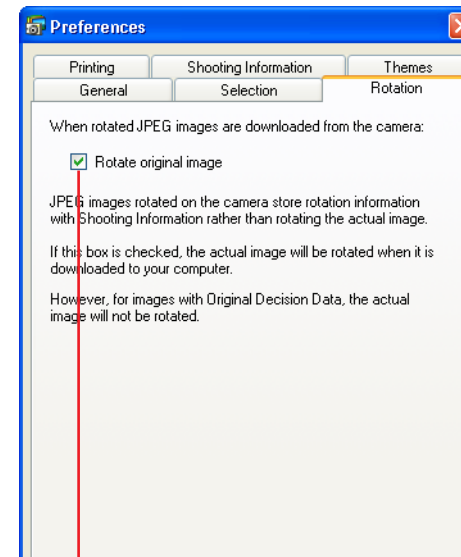

Place a check mark here to have the image data rotated to the vertical orientation during the downloading of images recorded in the vertical orientation.

# Customizing Preferences (3/4)


EXPLANATION



## Printing Tab

Sets the printing preferences.

If the Easy-PhotoPrint program accompanying a Canon-brand printer is installed, you can select whether to use Easy-PhotoPrint or the ZoomBrowser EX printing function when the [One Photo Per Page] task is selected.

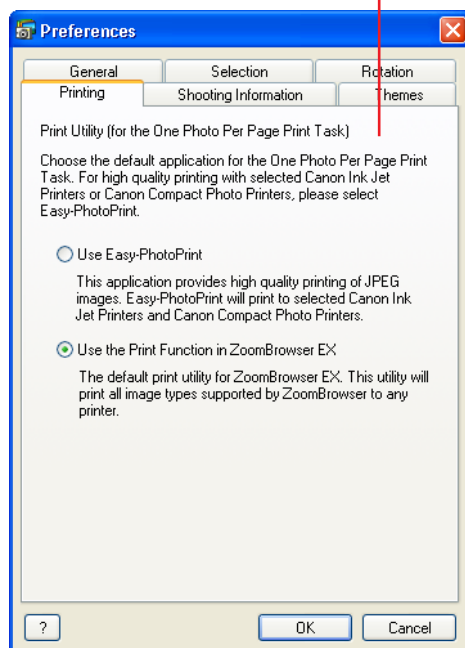


EXPLANATION



## Shooting Information Tab

Sets the preferences for image information.

Place check marks beside the categories to be displayed as image information.

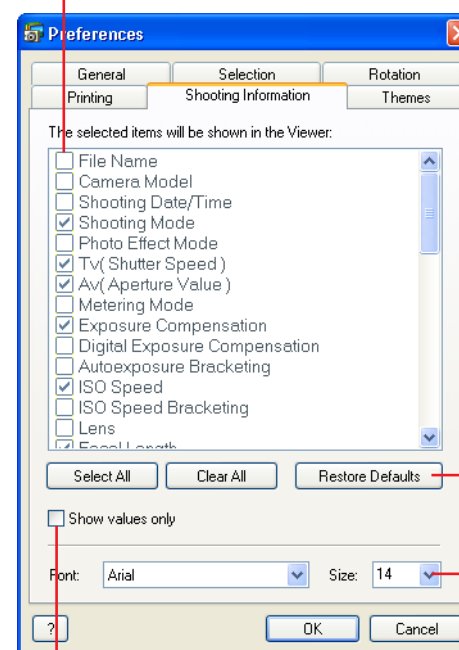

You can select/deselect all at once and restore the default settings.

Sets the font type and size for the text in the information displayed in the preview window.

Place a check mark here to display the information content without the category name.

# Customizing Preferences (4/4)

## EXPLANATION



### Themes Tab

Sets the color theme (background colors and selection colors, etc.) for the entire ZoomBrowser EX program.


Selects a color theme.






# Customizing Menus

Sets whether options are shown or hidden on the menus opened by clicking task buttons in the Main Window.

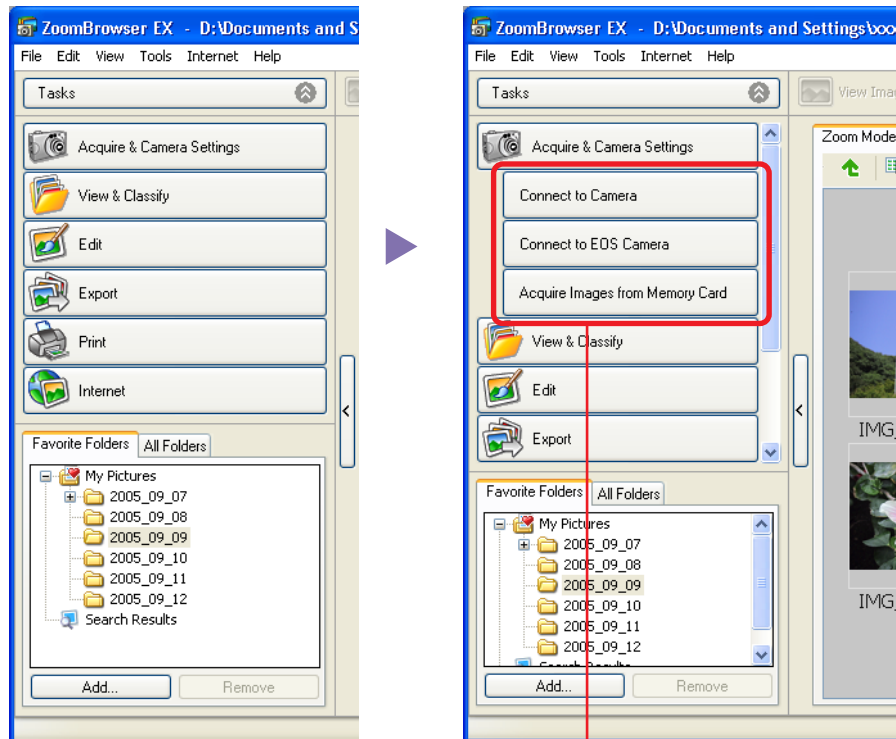

Sets the categories displayed in this menu.

Click the [Tools] menu and select [Customize] to open a window like the one shown below.  
Use this window to set the categories to display and click [OK].

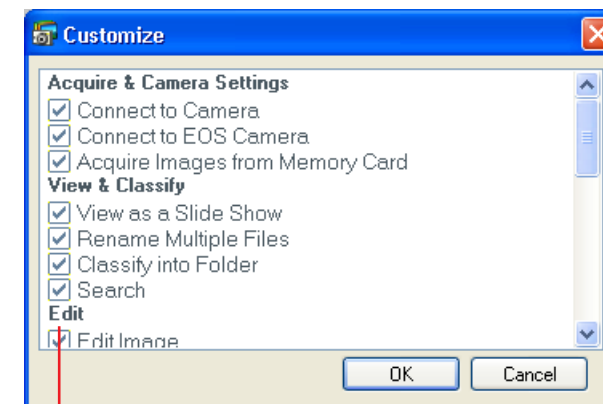

Remove the check mark from the menu items you wish to hide.

## REFERENCE

- Use this function to hide items not used on a daily basis to streamline the menus or to shorten the menus so that scrolling is not required.

# Troubleshooting (1/5)


This section explains solutions to software problems. See the user guides for your camera for solutions to camera or wireless connection problems.

## EXPLANATION



### The Events dialog box does not appear

The dialog below fails to appear even though the camera is correctly connected to the computer via the interface cable and ready to transfer data.

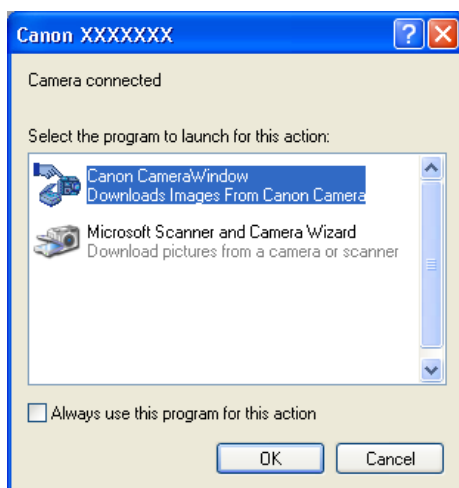

## EXPLANATION



### Camera Not Detected or Recognized

- A message such as “No camera was found” displays when you attempt to download images from the camera.
- Even though [Canon CameraWindow] is selected in the Events dialog, the Camera Control Window fails to open when the camera and computer are connected with the interface cable and set to the correct communication mode.

In either case, confirm the status of each of the following items in order.

## IMPORTANT

- With some versions of Windows, this dialog may not appear the very first time the camera is connected to the computer after it is booted up. (It will display subsequently.) In that case, click the [Start] menu and select [Programs] or [All Programs], followed by [Canon Utilities], [CameraWindow], [PowerShot - IXY - IXUS - DV 6] and [CameraWindow].

## ■ Check your Computer

Ensure that your computer meets the following requirements. ZoomBrowser EX will not operate on computers failing to meet these requirements.

- Built-in USB ports on a computer pre-installed with Windows XP (including Service Pack 1, Service Pack 2)/Windows 2000 Service Pack 4 only/Windows Me/Windows 98 SE only.

## ■ Check the Connection between the Camera and Computer

Confirm that the camera is correctly attached to the computer with an interface cable. See the user guides for your camera for connection information.

# Troubleshooting (2/5)

## ■ Check the Camera Status

Confirm that the camera is on and in the correct mode to transfer data. Please see the user guides for your camera since the methods for setting the camera and computer to the communication mode vary between camera models. (With some models, you must set the camera to the Playback mode, *etcetera*, to establish a connection to a computer.)

## ■ Check the battery

You are recommended to use a household power source (AC adapter) for the camera when connecting it to the computer. If the camera is running on batteries, ensure they are fully charged.


If the problem does not rest in the four areas above, the driver may not be properly installed. Uninstall the driver and then reinstall it. For instructions for this task, refer to the *Software Starter Guide*.

### EXPLANATION



## How to Get Help

ZoomBrowser EX comes with a Help file. Use it when you want to learn how to do an operation, or when you want to know about the features of the program. You can access Help from the [Help] menu or the [?] (Help) button.

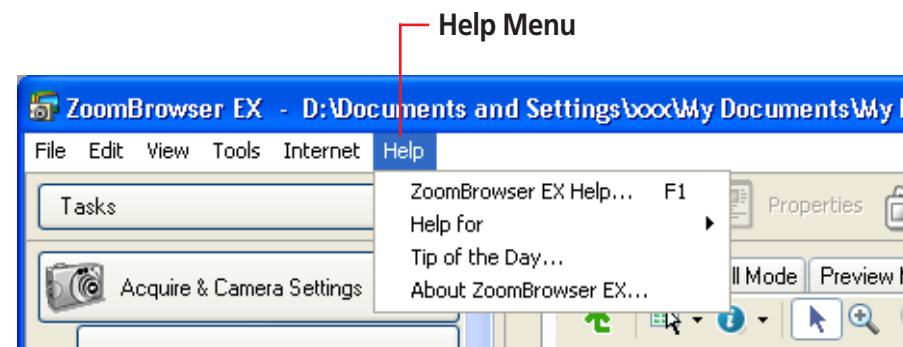

Help Button

# Troubleshooting (3/5)

## EXPLANATION



## If You Were Using ZoomBrowser EX Version 2 or 3

### ■ Images Were Assigned Titles or Comments


Use the following procedures to display titles and comments previously input in ZoomBrowser EX Ver. 2/3.

1. Start Windows Explorer by clicking the [Start] menu and selecting [All Programs], followed by [Accessories] and [Windows Explorer].

(With Windows 2000/Windows Me/Windows 98 SE, right-click the [My Computer] icon and select [Explore] from the popup menu.)

2. Open the [Program] folder inside the folder into which ZoomBrowser EX 5 was installed.


For example, open the folder to the right if the following path is correct: [C:\Program Files\Canon\ZoomBrowser EX\Program].

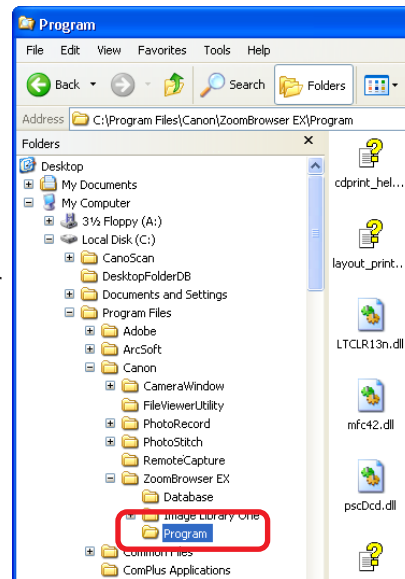

3. Double-click the [dbconverter.exe] or [dbconverter] file in that folder.




4. Select the database file that was used with the previous version of the program and click [Start].  
For example, select the following database file if it was used previously: [C:\Program Files\Canon\ZoomBrowser EX\Database\My Database.zbd].

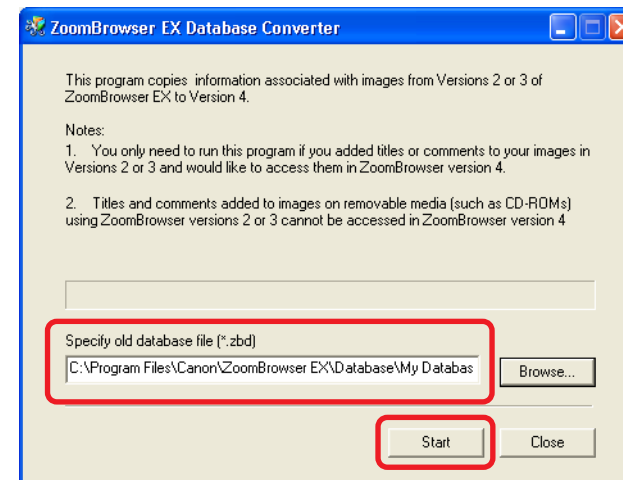


# Troubleshooting (4/5)

5. Click [OK] if the following dialog appears.

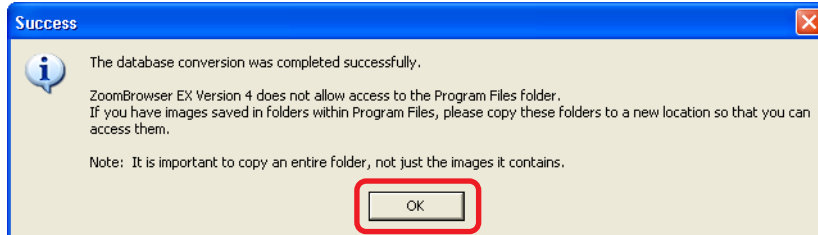

6. Click [Close] when the dialog in Step 4 appears.


This will display in ZoomBrowser EX 5 the titles and comments input in version 2 or 3. The titles and comments will appear together in the Comments section of ZoomBrowser EX 5.

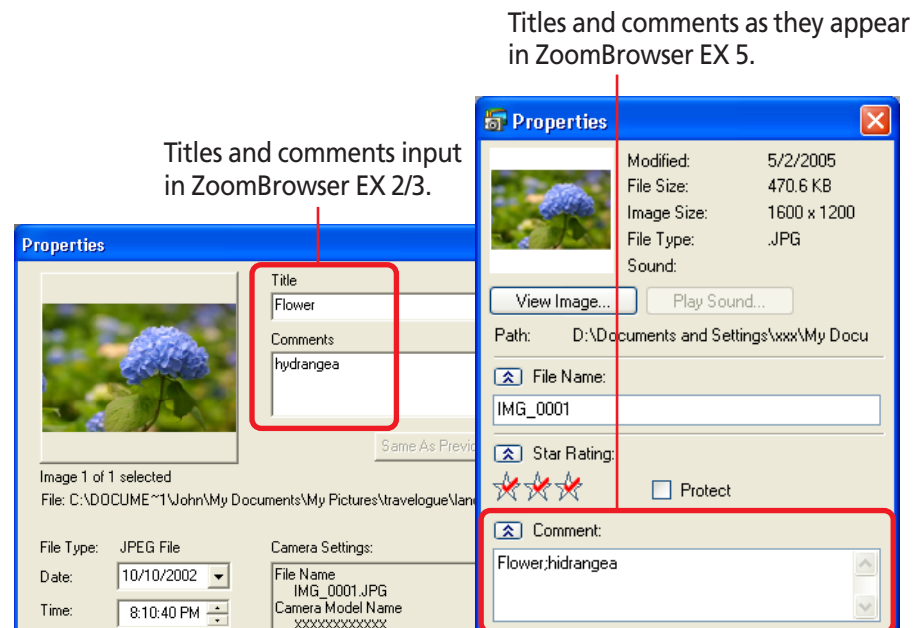

## Image Files Were Saved Below the Program Files Folder in a Previous Version

In ZoomBrowser EX 5, image files in folders within the Program Files folder will not display. To display these images, perform the procedures below after you have followed steps 1-6 on the previous page.

1. Use Windows Explorer to copy the image folders within the Program Files folder and paste them in another folder higher in the directory hierarchy. For example, if a folder called the [Image Library One] folder is in the Program Files folder, move it to a higher location, such as the [C:\] drive.

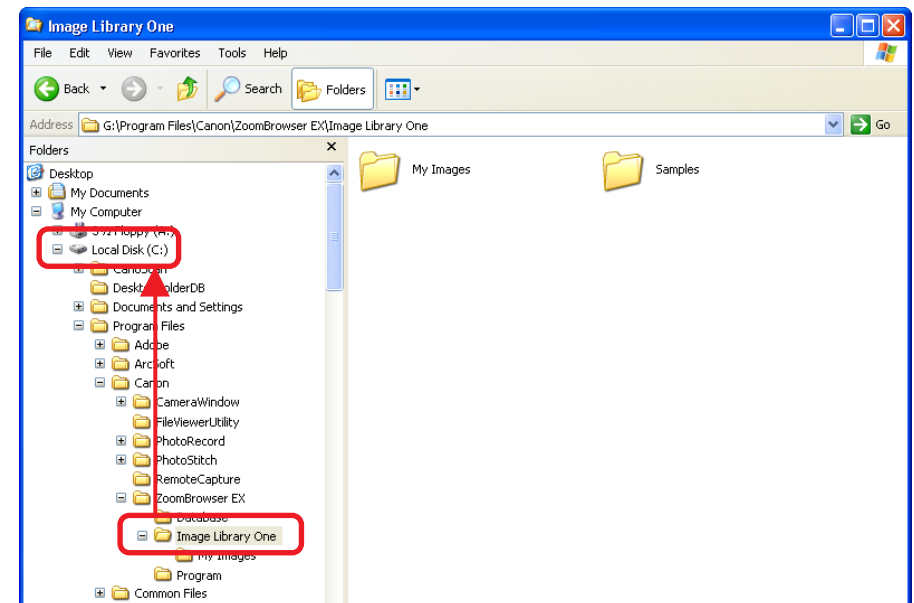


# Troubleshooting (5/5)

## IMPORTANT

- Do not copy just the images from within the folder, copy the folder itself to a location higher in the directory hierarchy.

When you select the copied folder in ZoomBrowser EX 4, the images will now display.

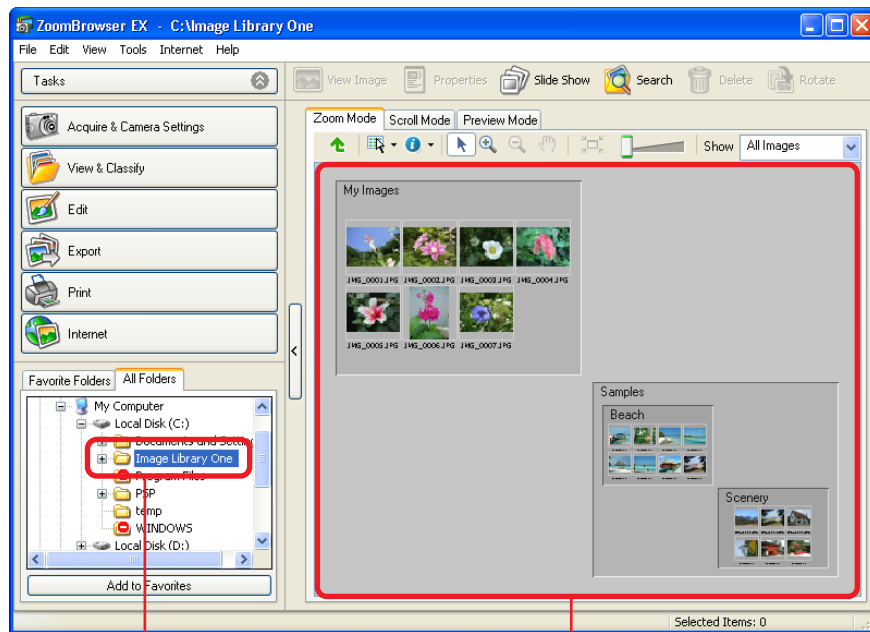

Click the copied folder to display its images in the Browsing Area.



# Index (1/2)

## A

Adjusting Sharpness 102  
All Folders 55  
Auto Adjustment 96, 98  
Auto Download Settings 24, 26  
Auto Start 13  
Autofocus Frame  
  Displaying 71

## B

Brightness 99  
Browser Area 6, 7, 55

## C

Camera Browser Window 29, 31, 32, 35, 39  
Camera Control Window 6, 13, 17, 22  
Camera Settings 48  
CD-R/RW Disks  
  Saving Images 139  
Changing the Display Magnification  
  Main Window 65  
  Viewer Window 69  
Changing the Display Mode 57, 63  
Changing the Displayed Folder 60  
Classifying Images 79  
Color Management 141  
Color Profile (Monitor) 141  
Color/Brightness Adjustment 96, 99  
Comment 91, 92  
Contrast 99  
Copying Images 85  
  to the Camera 49

Creating Folders 94  
Creating My Camera Settings Files 46  
Custom Color Schemes (My Color) 136  
Customizing Menus 145

## D

Deleting Images 88  
  From the Camera 31  
Deselecting All Images 74  
Destination for Downloaded Images 30  
Destination for Downloaded Sounds 34  
Direct Transfer Menu 24, 25  
Display Control Panel 10  
Display Modes 10, 57  
Displaying Multiple Images 70  
Download Mark 16, 18  
Downloading Images 12  
  Camera Operations 24, 25  
  Checking Images before Downloading 29  
  Computer Operations 26  
Downloading Sound Files 32

## E

Easy-PhotoPrint 20, 143  
Edit with External Image Editor 96, 106  
Editing Images 96  
Editing Movies 124  
Events Dialog 146  
Exporting Images 109, 110  
Exporting Movies 128  
Extracting Frames from a Movie 72, 130

## F

Favorite Folders 55  
  Deregistering 56  
  Registering 56  
Folder Area 6, 55  
Full Screen Display 69  
Function Buttons 10

## H

Help 147  
Hiding the Folder Area 66  
Hiding the Task Area 66  
Higher Level in the Folder Hierarchy 61  
Histogram 91, 92, 100

## I

Image Information 71  
Image Properties 91, 92, 93  
Index Print 117  
Information Panel 59  
Insert Text 96, 104  
Interval Timer Shooting 53

## J

JPEG 140

## K

Keywords 77, 91, 92

## L

Level Adjustment 100

# Index (2/2)

## M

Main Window 6, 16  
Monitor's Color Profile 141  
Moving Images 84  
MPEG4 140  
My Camera Maker 45, 119  
My Camera Settings 40, 41  
My Camera Window 41  
My Color (Custom Color Schemes) 136

## N

Navigator Window 65, 69  
New Folder 94

## O

Opening Images 68  
Owner's Name 48

## P

PhotoCD 140  
PhotoStitch 138  
Playing Movies 72, 123  
Playing Sound Files 73, 122  
Playing Sounds on Images 115  
Pop-Up Window 67  
Preferences 141  
Preview Mode 59, 92  
Printing (via a computer) 25  
Printing a Single Image on a Single Page 20  
Printing Images (Camera Browser Window) 35  
Printing Images (in the Camera) 36  
Printing Images (Main Window) 20, 116, 117  
Printing Images (Viewer Window) 73  
Properties Window 91

## Q

QuickTime 123, 140

## R

RAW 72, 132, 140  
Record Sounds 120  
Red Eye Correction 96, 97  
Refreshing Folders 95  
Remote Shooting 51  
Renaming Folders 81  
Renaming Images 80  
RGB (Red, Green, Blue) Intensity 100  
Right-Click 7  
Rotating Images 90

## S

Saturation 99  
Save As 105  
Screen Saver 109, 111  
Scroll Mode 58  
Searching Images 82  
Selecting All Images 74  
Selecting Folders 55  
Selecting Images 74  
Selecting Multiple Images 74  
Sending Images by E-mail 107  
Sharpness 96, 102  
Slide Show 113  
Sorting Thumbnails 64  
Sound Files (guideline for length of sound) 45  
Sound Recorder 32, 73, 122  
Sounds on Images 115  
Star Rating 63, 75, 91, 92  
Stitch Assist Mode 138  
Synchronizing Multiple Images 70

## T

Task Area 6, 8  
Task Buttons 8  
Theme 41  
Thumbnail 57  
    Display Size 64  
    Information 63  
TIFF 140  
Timer Shooting 53  
Tone Curve Adjustment 101  
Trim 96, 103

## U

Using the Task Windows 9

## V

Video clip 140  
View Image 68  
Viewer Window 69, 96  
Viewing Image Properties 91

## W

Wallpaper 109, 112  
WAV 32  
Windows bitmap 140

## Z

Zoom In 65  
Zoom Mode 57  
Zoom Out 65  
ZoomBrowser EX  
    Closing 19  
    Starting 12, 19

## ZoomBrowser EX Software User Guide

### Disclaimer

- While every effort has been made to ensure that the information contained in this guide is accurate and complete, no liability can be accepted for any errors or omissions. Canon reserves the right to change the specifications of the hardware and software described herein at any time without prior notice.
- No part of this guide may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form, by any means, without the prior written permission of Canon.
- Canon makes no warranties for damages resulting from corrupted or lost data due to a mistaken operation or malfunction of the camera, the software, memory cards, personal computers, peripheral devices, or use of non-Canon memory cards.

### Trademark Acknowledgments

- Adobe is a trademark of Adobe Systems Incorporated.
- CompactFlash is a trademark of SanDisk Corporation.
- QuickTime is trademark of Apple Computer Inc., registered in the United States and other countries.
- SD is a trademark.
- Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. Microsoft® Windows® 98, Microsoft® Windows® 2000, Microsoft® Windows® Millennium Edition, and Microsoft® Windows® XP are referred to in this guide, respectively, as Windows 98, Windows 2000, Windows Me, and Windows XP, or as Windows.
- Other names and products not mentioned above may be registered trademarks or trademarks of their respective companies.